

Instructions for turning the electronic housing

1. Remove the 4 plastic caps (item 1)
2. Loosen the 4 fastening screws underneath (item 2) using a 3mm Allen key
3. Turn the electronic housing (item 3) to the required position
4. Re-fasten the electronic housing (item 3) onto the turbine (item 4) using the 4 fastening screws
5. Replace plastic caps (item 1) on the fastening screws (item 2) and press them until fixed

