

## GEMÜ BB04

### Ball valve with bare shaft



#### Features

- Checked delta ferrite material < 3% (1.4435)
- Material certificates for media wetted components
- Media wetted surfaces according to ASME SF5 (Ra 0.51 µm)
- Butt weld spigots in extended orbital welding design
- Optionally available with cavity-filled seat
- Suitable for vacuum applications
- Option: ATEX version
- Ball valve body, assembled free of oil/grease

#### Description

The three-piece 2/2-way GEMÜ BB04 metal ball valve with a bare shaft and an actuator flange in accordance with DIN ISO 5211 for simple mounting of various actuator types is particularly suited to applications in the supply sector for the pharmaceutical, foodstuffs processing and biotechnology (such as water treatment and steam generation) industries thanks to the 1.4435 stainless steel alloy material composition used (compliant with 316L) with a low delta ferrite proportion of < 3%. Only those plastics which are compliant with FDA, USP Class VI and Regulation (EU) No.10/2011 are used for the seals.

#### Technical specifications

- **Media temperature:** -10 to 220 °C
- **Ambient temperature:** -20 to 60 °C
- **Operating pressure :** 0 to 63 bar
- **Nominal sizes:** DN 8 to 100
- **Body configurations:** 2/2-way body
- **Connection type:** Clamp | Spigot
- **Connection standards:** ASME | DIN | ISO | SMS
- **Body materials:** 1.4435 (316L), investment casting material
- **Seal materials:** PTFE
- **Conformities:** ATEX | EAC | FDA | Reg. (EU) No. 10/2011 | Regulation (EC) No. 1935/2004 | TA Luft (German Clean Air Act) | USP





Technical data depends on the respective configuration



further information  
webcode: GW-BB04




Product line

				
	GEMÜ BB04	GEMÜ B24	GEMÜ B44	GEMÜ B54
Operation				
With bare shaft	●	-	-	-
Manual	-	●	-	-
Pneumatic	-	-	●	-
Motorized	-	-	-	●
Nominal sizes	DN 8 to 100	DN 8 to 100	DN 8 to 100	DN 8 to 100
Media temperature	-10 to 220 °C	-10 to 220 °C	-10 to 220 °C	-10 to 220 °C
Operating pressure	0 to 63 bar	0 to 63 bar	0 to 63 bar	0 to 63 bar
Connection types				
Clamp	●	●	●	●
Spigot	●	●	●	●

Product description

Construction

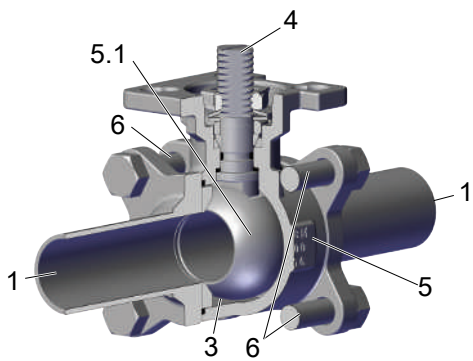

Item	Name	Materials
5	Ball valve body	ASTM A351/1.4435 (316L)
1	Pipe connections	ASTM A351/1.4435 (316L)
5.1	Ball	ASTM A351/1.4435 (316L)
4	Ball valve shaft	1.4409 (SS316L)
6	Bolt	A2 70
3	Seals	PTFE

### ***Cavity-filled PTFE seal (Code 5H)***




- The cavity-filled seal, which is made of PTFE, is specially designed to reduce excess volumes in the ball cavity.
- Media that remains in the valve's dead spaces is unwanted during food production, for example, and may decontaminate this.
- These deposits accumulate and contaminate the entire process. Thanks to this special seal variant, the volume in the ball cavity is reduced to a minimum.

### ***Application***

- Water treatment
- Steam processing
- CIP/SIP
- Waste water treatment
- Storage and distribution
- Drying

*The spindle seal system*

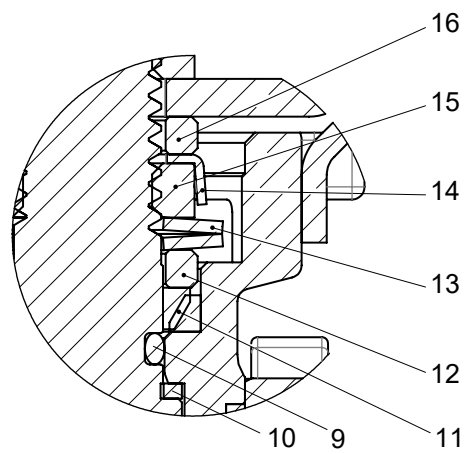

Item	Name	Material
9	O-ring	Viton
10	Seal	PTFE
11	V-ring	PTFE
12	Stainless steel sleeve	SS304-1.4301
13	Spring washer	SS304-1.4301
14	Cap	SS304-1.4301
15	Spindle nut	A2 70
16	Washer	SS304-1.4301



## GEMÜ CONEXO

The interaction of valve components that are equipped with RFID chips and an associated IT infrastructure actively increase process reliability.



Thanks to serialization, every valve and every relevant valve component such as the body, actuator or diaphragm, and even automation components, can be clearly traced and read using the CONEXO pen RFID reader. The CONEXO app, which can be installed on mobile devices, not only facilitates and improves the "installation qualification" process, but also makes the maintenance process much more transparent and easier to document. The app actively guides the maintenance technician through the maintenance schedule and directly provides him with all the information assigned to the valve, such as test reports, testing documentation and maintenance histories. The CONEXO portal acts as a central element, helping to collect, manage and process all data.

**For further information on GEMÜ CONEXO please visit:**


[www.gemu-group.com/conexo](http://www.gemu-group.com/conexo)

### Ordering

GEMÜ Conexo must be ordered separately with the ordering option "CONEXO".

### Installing the RFID chip

In the corresponding design with CONEXO, this product has an RFID chip for electronic identification purposes. The position of the RFID chip can be seen below.

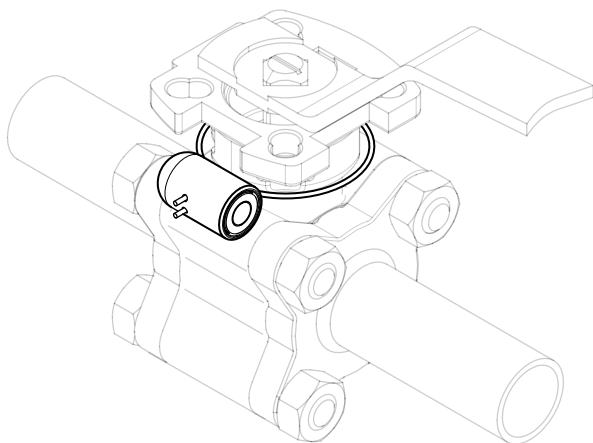

## Availability

DN	NPS	Connection type code <sup>1)</sup>					
		17	37	59	60	80	93
8	1/4"	-	-	-	X	-	-
10	3/8"	X	-	-	X	-	-
15	1/2"	X	-	X	X	X	X
20	3/4"	X	X	X	X	X	X
25	1"	X	X	X	X	X	X
32	1¼"	X	-	-	X	-	-
40	1½"	X	X	X	X	X	X
50	2"	X	X	X	X	X	X
65	2½"	X	X	X	X	X	X
80	3"	X	X	X	X	X	X
100	4"	X	X	X	X	X	X

### 1) Connection type

Code 17: Spigot EN 10357 series A/DIN 11866 series A formerly DIN 11850 series 2

Code 37: Spigot SMS 3008

Code 59: Spigot ASME BPE/DIN EN 10357 series C (from 2022 edition)/DIN 11866 series C

Code 60: Spigot ISO 1127/DIN EN 10357 series C (2014 edition)/DIN 11866 series B

Code 80: Clamp ASME BPE

Code 93: On one side, clamp ASME BPE corresponding to code 80, on the other side, butt weld spigot code 59, for pipe ASME BPE

## Order data

The order data provide an overview of standard configurations.

Please check the availability before ordering. Other configurations available on request.

Products ordered with **bold marked ordering options** are so-called preferred series. Depending on the nominal size, these are available more quickly.

## Order codes

1 Type	Code
Ball valve body, metal, three-piece body, sanitary, ISO 5211, top flange, checked delta ferrite material and media wetted surfaces according to ASME SF5, low-maintenance spindle seal and blow-out proof shaft, with antistatic unit	BB04

2 DN	Code
DN 8	8
DN 10	10
DN 15	15
DN 20	20
DN 25	25
DN 32	32
DN 40	40
DN 50	50
DN 65	65
DN 80	80
DN 100	100

3 Body/ball configuration	Code
<b>2/2-way body</b>	<b>D</b>

4 Connection type	Code
Spigot EN 10357 series A/DIN 11866 series A formerly DIN 11850 series 2	17
Spigot SMS 3008	37
<b>Spigot ASME BPE/DIN EN 10357 series C (from 2022 edition)/DIN 11866 series C</b>	<b>59</b>
Spigot ISO 1127/DIN EN 10357 series C (2014 edition)/DIN 11866 series B	60
<b>Clamp ASME BPE</b>	<b>80</b>
On one side, clamp ASME BPE corresponding to code 80, on the other side, butt weld spigot code 59, for pipe ASME BPE	93

5 Ball valve material	Code
1.4435/ASTM A351, low ferrite <3% (equivalent to 316L Δ Fe<3%) (body, connection, ball), 1.4409/SS316L (spindle)	C3

6 Seal material	Code
PTFE (FDA certification)	5T
PTFE (FDA certification), cavity filled	5H

7 Type of design	Code
Standard	

7 Type of design	Code
Ra ≤ 0.4 μm (μin.) for media wetted surfaces *), in accordance with DIN 11866 HE4, electropolished internal/external, *) for inner pipe diameter ≤ 6 mm, in spigot Ra ≤ 0.8 μm	1537
K-NO SF5, K-NO 7056, SF5 – Ra max. 0.51 μm (20 μin.) electropolished internal/external, 7056 – drilled shaft, shortened hand lever	7137
K-NO SF5, K-NO 0101, SF5 – Ra max. 0.51 μm (20 μin.) electropolished internal/external, 0101 – media wetted area cleaned to ensure suitability for paint applications	7140
K-NO SF5, K-NO 0104, SF5 – Ra max. 0.51 μm (20 μin.) electropolished internal/external, 0104 – media wetted parts cleaned for high purity media and packed in plastic bag	7141
K-NO SF5, K-NO 0107, SF5 – Ra max. 0.51 μm (20 μin.) electropolished internal/external, 0107 – valve free of oil and grease, media wetted area cleaned	7142
Ra max. 0.38 μm (15 μin.) for media wetted surfaces, in accordance with ASME BPE SF4, electropolished internal/external	SF4
Ra max. 0.51 μm (20 μin.) for media wetted surfaces, in accordance with ASME BPE SF5, electropolished internal/external	SF5

8 Special version	Code
Without	
ATEX certification	X

9 CONEXO	Code
Without	
Integrated RFID chip for electronic identification and traceability	C

**Order example**

Ordering option	Code	Description
1 Type	BB04	Ball valve body, metal, three-piece body, sanitary, ISO 5211, top flange, checked delta ferrite material and media wetted surfaces according to ASME SF5, low maintenance spindle seal and blow-out proof shaft, with antistatic unit
2 DN	15	DN 15
3 Body/ball configuration	D	2/2-way body
4 Connection type	59	Spigot ASME BPE/DIN EN 10357 series C (from 2022 edition)/DIN 11866 series C
5 Ball valve material	C3	1.4435/ASTM A351, low ferrite <3% (equivalent to 316L Δ Fe<3%) (body, connection, ball), 1.4409/SS316L (spindle)
6 Seal material	5T	PTFE (FDA certification)
7 Type of design		Standard
8 Special version		Without
9 CONEXO		Without

## Technical data

### Medium

**Working medium:** Corrosive, inert, gaseous and liquid media and steam which have no negative impact on the physical and chemical properties of the body and seal material.

### Temperature with note

**Media temperature:** -10 – 220 °C

For media temperatures > 100 °C, we recommend using a mounting kit with adapter between the ball valve and the actuator.

**Ambient temperature:** -20 – 60 °C

**Storage temperature:** -60 – 60 °C


### Pressure

**Operating pressure:** 0 – 63 bar

**Vacuum:** Can be used up to a vacuum of 50 mbar (absolute)

These values apply to room temperature and air. The values may deviate for other media and other temperatures.

**Pressure/temperature diagram:**

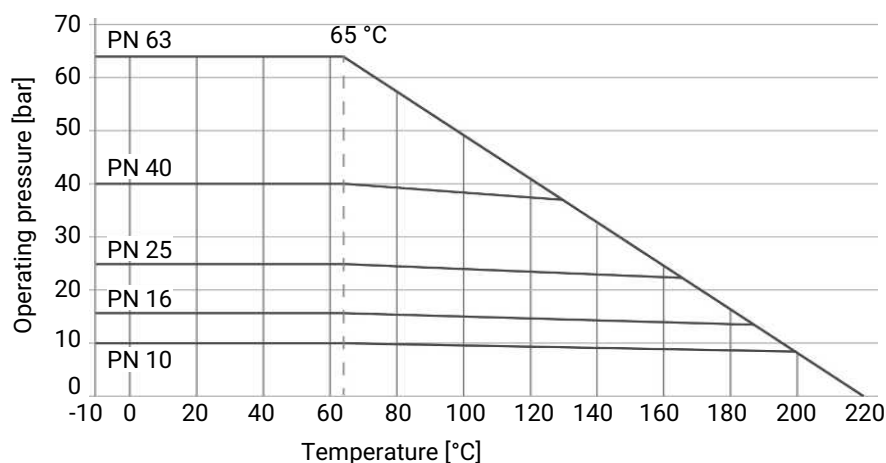

Pressure/temperature data in accordance with diagram refers to static operating conditions. Strongly fluctuating or fast-changing parameters can lead to a reduction of the service life. Special applications must be talked through with your technical contact person in advance.

Use the clamped union with the correct pressure rating for a safe and correct pipeline design. Pressure ratings of the clamp alone are generally higher, but do not take into account the fully clamped assembly with gasket

**Leakage rate:** Leakage rate according to ANSI FCI70 – B16.104  
Leakage rate according to EN12266, 6 bar air, leakage rate A

**Kv values:**

DN	NPS	Connection type (code)		
		17	37, 59, 80, 93	60
8	1/4"	7.0	-	7.0
10	3/8"	7.0	-	7.0
15	1/2"	18.0	9.0	18.0
20	3/4"	43.0	26.0	43.0
25	1"	77.0	56.0	77.0
32	1¼"	95.0	-	95.0
40	1½"	206.0	172.0	206.0
50	2"	344.0	327.0	344.0
65	2½"	602.0	516.0	602.0
80	3"	844.0	817.0	844.0
100	4"	1462.0	1376.0	1462.0

Kv values in m³/h

**Pressure rating:**

DN	Connection type (code)			
	17	37, 59	60	80, 93
8	-	-	PN63	-
10	PN63	-	PN63	-
15	PN63	PN63	PN63	PN25
20	PN63	PN63	PN63	PN25
25	PN63	PN63	PN63	PN25
32	PN63	-	PN63	-
40	PN63	PN63	PN63	PN25
50	PN63	PN63	PN63	PN16
65	PN40	PN40	PN40	PN16
80	PN40	PN40	PN40	PN10
100	PN25	PN25	PN25	PN10





For clamp connections, the permissible pressures are designed for a temperature of -10 to 140 °C when using suitable clamps and sealing materials.

## Product conformities

**Pressure Equipment Directive:** 2014/68/EU

**Food:** FDA  
Regulation (EC) No. 1935/2004  
Regulation (EC) No. 10/2011

**Explosion protection:** ATEX (2014/34/EU), order code Special version X

**ATEX marking:** **Up to DN 65**  
Gas:  II 2G Ex h IIC T6 ... T2 Gb X  
Dust:  II -/2D Ex h -/IIIC T180 °C -/Db X  
**DN 80 and 100**  
Gas:  II 2G Ex h IIB T6 ... T2 Gb X  
Dust:  II -/2D Ex h -/IIIC T180 °C -/Db X

**Mechanical data****Torques:**

DN	NPS	Seal material (code)	
		5T	5H
8	1/4"	4	4
10	3/8"	4	4
15	1/2"	8	12
20	3/4"	8	12
25	1"	13	19
32	1¼"	16	22
40	1½"	32	47
50	2"	34	51
65	2½"	91	105
80	3"	104	120
100	4"	140	209

Free of oil and grease incl. 25% safety  
Torques in Nm


**Weight:**

DN	NPS	Connection type (code)			
		17	37, 59	60	80, 93
8	1/4"	-	-	0.5	-
10	3/8"	-	-	0.5	-
15	1/2"	0.8	0.5	0.5	0.5
20	3/4"	0.8	0.5	0.8	0.5
25	1"	1.1	1.0	1.1	1.1
32	1¼"	1.6	-	1.6	-
40	1½"	2.7	2.1	2.7	2.2
50	2"	4.2	3.5	4.2	3.5
65	2½"	8.2	7.0	8.2	7.1
80	3"	11.6	11.0	11.6	11.8
100	4"	24.0	20.0	24.0	20.5

Weights in kg

## Dimensions

### Actuator flange

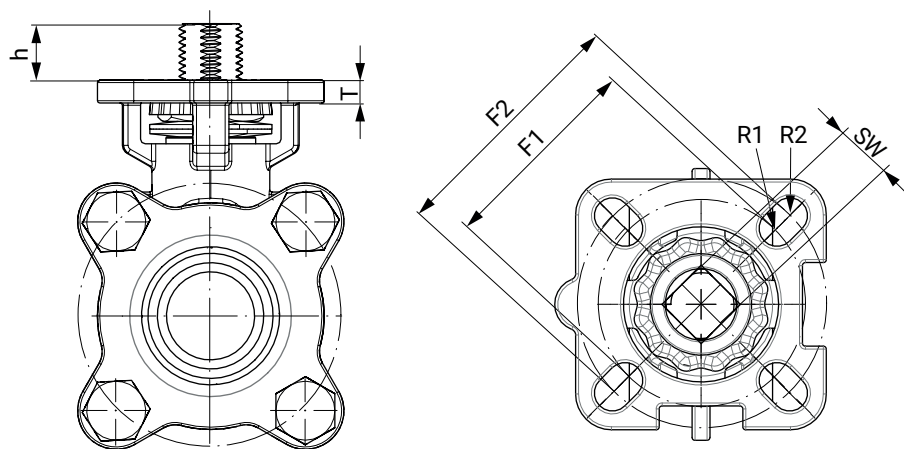


DN	G	F1	ISO 5211 (F1)	R1	F2	ISO 5211 (F2)	R2	SW	h	T
8	1/4"	36.0	F03	3.0	42.0	F04	3.0	9.0	9.0	5.0
10	3/8"	36.0	F03	3.0	42.0	F04	3.0	9.0	9.0	5.0
15	1/2"	36.0	F03	3.0	42.0	F04	3.0	9.0	9.0	5.0
20	3/4"	36.0	F03	3.0	42.0	F04	3.0	9.0	7.5	5.0
25	1"	42.0	F04	3.0	50.0	F05	3.5	11.0	13.0	7.0
32	1 1/4"	42.0	F04	3.0	50.0	F05	3.5	11.0	13.0	7.0
40	1 1/2"	50.0	F05	3.5	70.0	F07	4.5	14.0	15.0	9.0
50	2"	50.0	F05	3.5	70.0	F07	4.5	14.0	16.0	9.0
65	2 1/2"	50.0	F07	3.5	70.0	F10	4.5	17.0	18.0	10.5
80	3"	70.0	F07	4.5	102.0	F10	5.5	17.0	18.0	10.5
100	4"	102.0	F10	4.5	125.0	F12	5.5	22.0	26.0	10.5

Dimensions in mm




## Body dimensions

Spigot DIN EN 10357 (connection code 17)

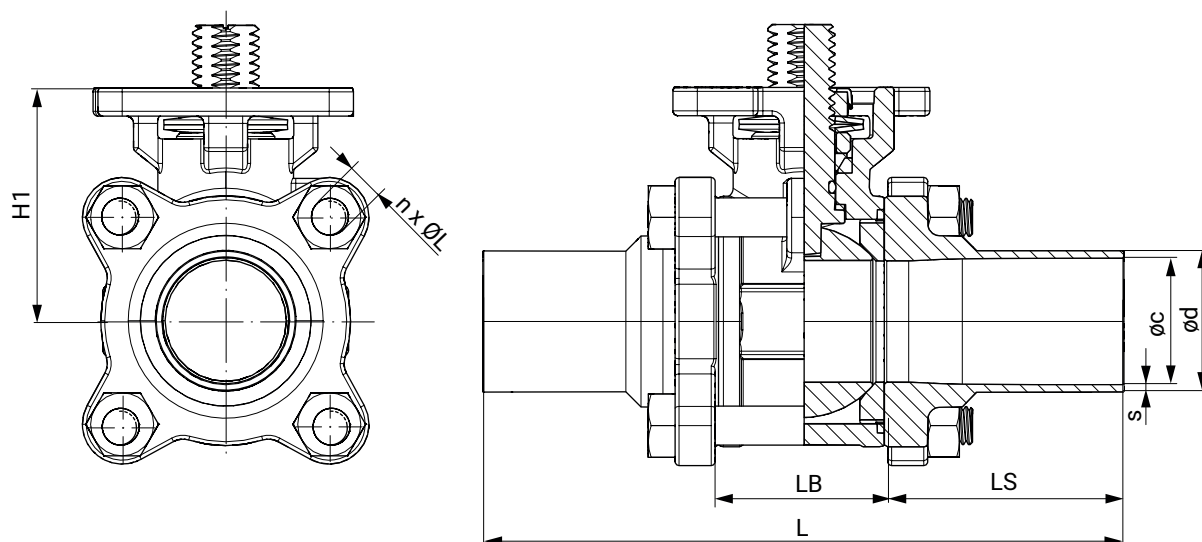


DN	Øc	Ød	L	LB	LS	H1	n x ØL	s
10	10.0	13.0	120.1	24.3	47.9	37.0	4 x M6	1.5
15	16.0	19.0	140.1	24.3	57.9	37.0	4 x M6	1.5
20	20.0	23.0	140.0	31.2	54.4	40.0	4 x M8	1.5
25	26.0	29.0	152.0	34.0	59.0	48.0	4 x M8	1.5
32	32.0	35.0	165.0	44.0	60.5	53.0	4 x M10	1.5
40	38.0	41.0	190.0	55.0	67.5	63.0	4 x M12	1.5
50	50.0	53.0	203.0	68.9	67.0	72.0	4 x M14	1.5
65	66.0	70.0	254.0	82.0	86.0	92.0	4 x M14	2.0
80	81.0	85.0	280.0	96.0	92.0	102.0	4 x M16	2.0
100	100.0	104.0	308.0	122.0	93.0	132.0	6 x M20	2.0

Dimensions in mm  
n = number of bolts

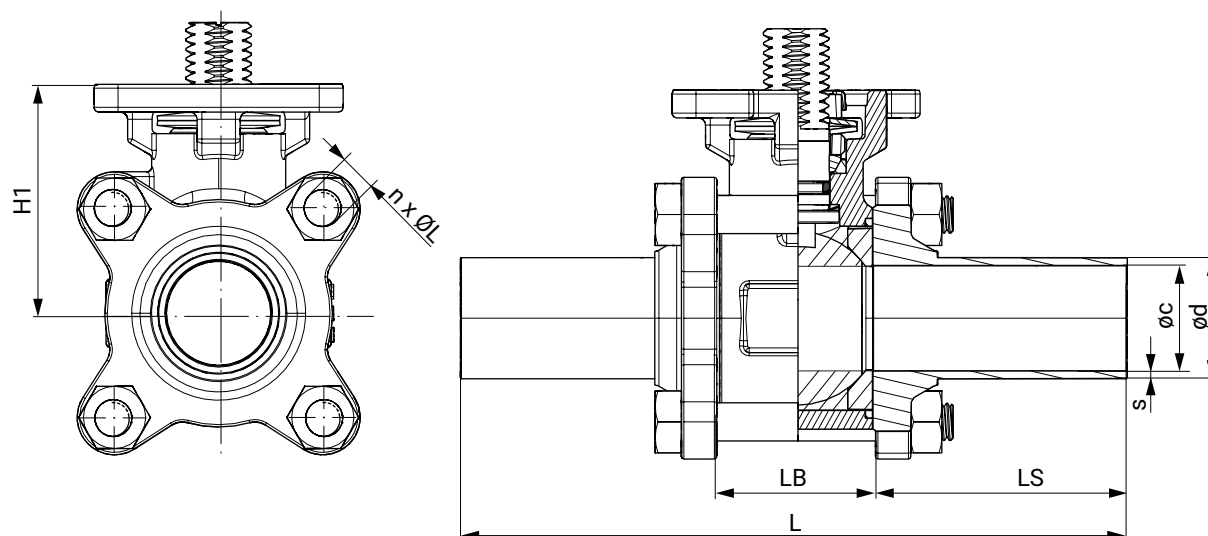**Spigot SMS 3008 (connection code 37)**


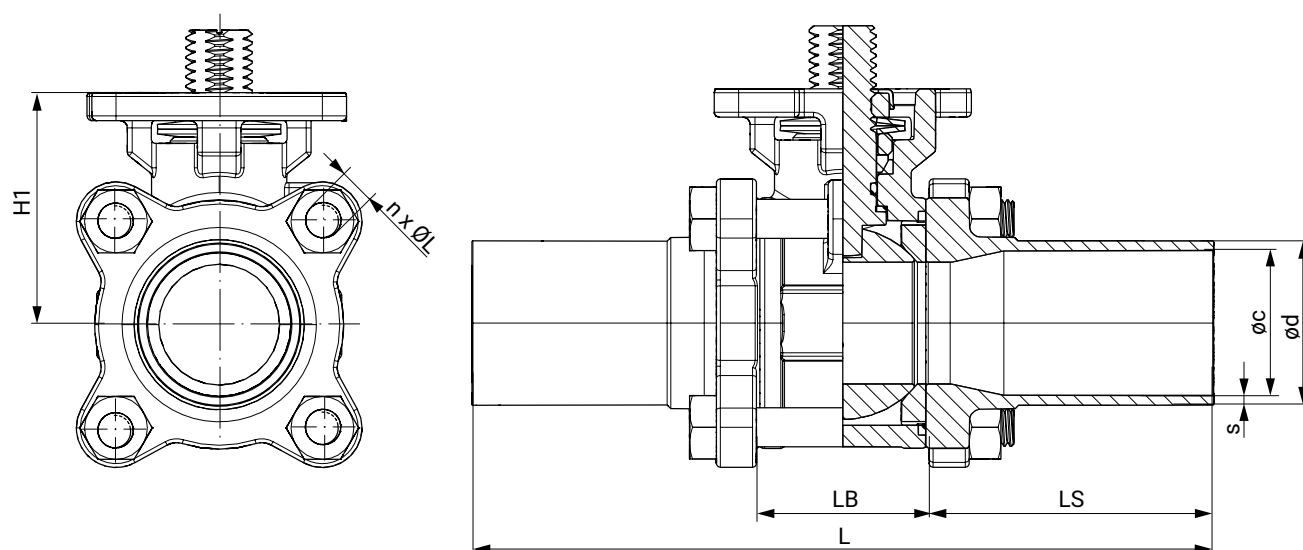
DN	Øc	Ød	s	t	L	LB	LS	H1	n x ØL
20	16.0	18.0	1.0	6.1	142.2	28.0	58.6	38.0	4 x M6
25	22.6	25.0	1.2	7.4	162.3	32.1	65.1	48.0	4 x M8
40	35.6	38.0	1.2	8.3	182.2	46.0	68.1	60.0	4 x M12
50	48.6	51.0	1.2	10.2	193.0	59.6	66.7	69.0	4 x M14
65	60.3	63.5	1.6	12.5	254.1	77.1	88.5	89.0	4 x M14
80	72.9	76.1	1.6	14.0	276.9	91.7	92.6	98.0	4 x M16
100	97.6	101.6	2.0	14.5	304.9	118.3	93.3	130.0	6 x M16

Dimensions in mm  
n = number of bolts

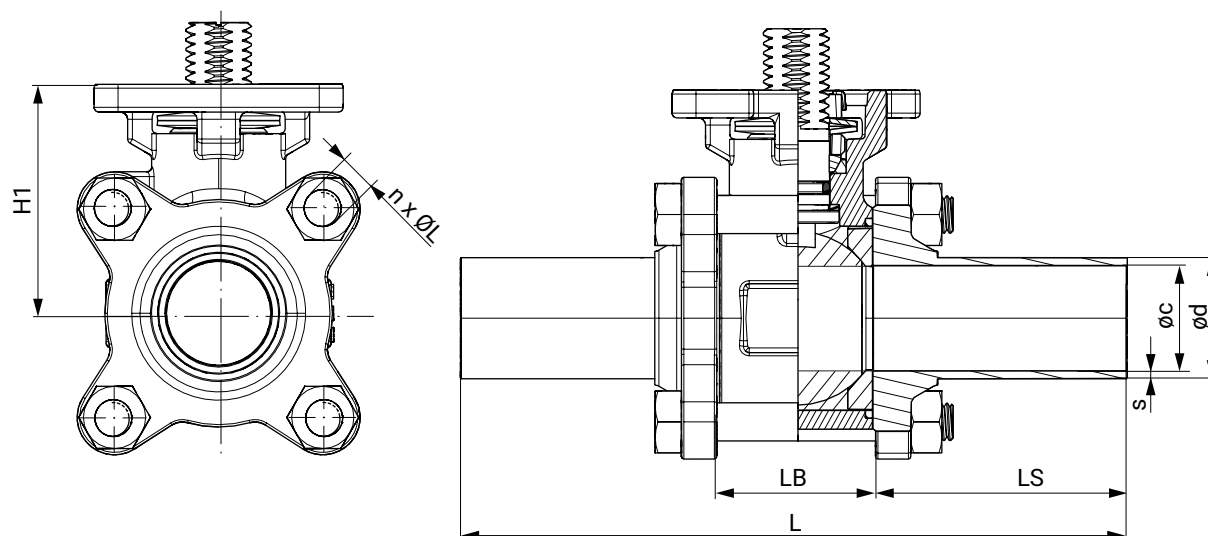**Spigot ASME BPE (connection code 59)**


DN	Øc	Ød	s	L	LB	LS	H1	n x ØL
<b>15</b>	9.40	12.70	1.65	124.40	25.00	49.70	38.00	4 x M6
<b>20</b>	15.70	19.05	1.65	142.20	28.00	58.60	38.00	4 x M6
<b>25</b>	22.10	25.40	1.65	162.30	32.10	65.10	48.00	4 x M8
<b>40</b>	34.80	38.10	1.65	182.20	46.00	68.10	60.00	4 x M12
<b>50</b>	47.50	50.80	1.65	193.00	59.60	66.70	69.00	4 x M14
<b>65</b>	60.20	63.50	1.65	254.10	77.10	88.50	89.00	4 x M14
<b>80</b>	72.90	76.20	1.65	276.90	91.70	92.60	98.00	4 x M16
<b>100</b>	97.40	101.60	2.10	304.90	118.30	93.30	130.00	6 x M16

Dimensions in mm  
n = number of bolts

**Spigot ISO 1127 / EN 10357 (connection code 60)**


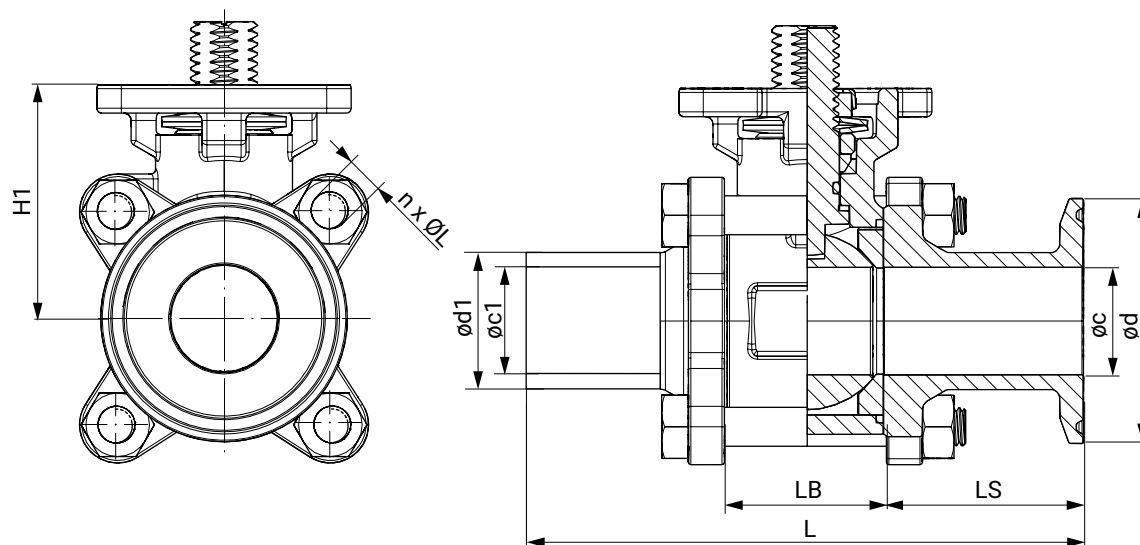
DN	Øc	Ød	s	L	LB	LS	H1	n x ØL
8	10.3	13.5	1.6	120.1	24.3	47.9	37.0	4 x M6
10	14.0	17.2	1.6	120.1	24.3	47.9	37.0	4 x M6
15	18.1	21.3	1.6	140.1	24.3	57.9	37.0	4 x M6
20	23.7	26.9	1.6	140.0	31.2	54.4	40.0	4 x M8
25	29.7	33.7	2.0	152.0	34.0	59.0	48.0	4 x M8
32	38.4	42.4	2.0	165.0	44.0	60.5	53.0	4 x M10
40	44.3	48.3	2.0	190.0	55.0	67.5	63.0	4 x M12
50	56.3	60.3	2.0	203.0	68.9	67.0	72.0	4 x M14
65	72.1	76.1	2.0	254.0	82.0	86.0	92.0	4 x M14
80	84.3	88.9	2.3	280.0	96.0	92.0	102.0	4 x M16
100	109.7	114.3	2.3	308.0	122.0	93.0	132.0	6 x M20

Dimensions in mm  
n = number of bolts

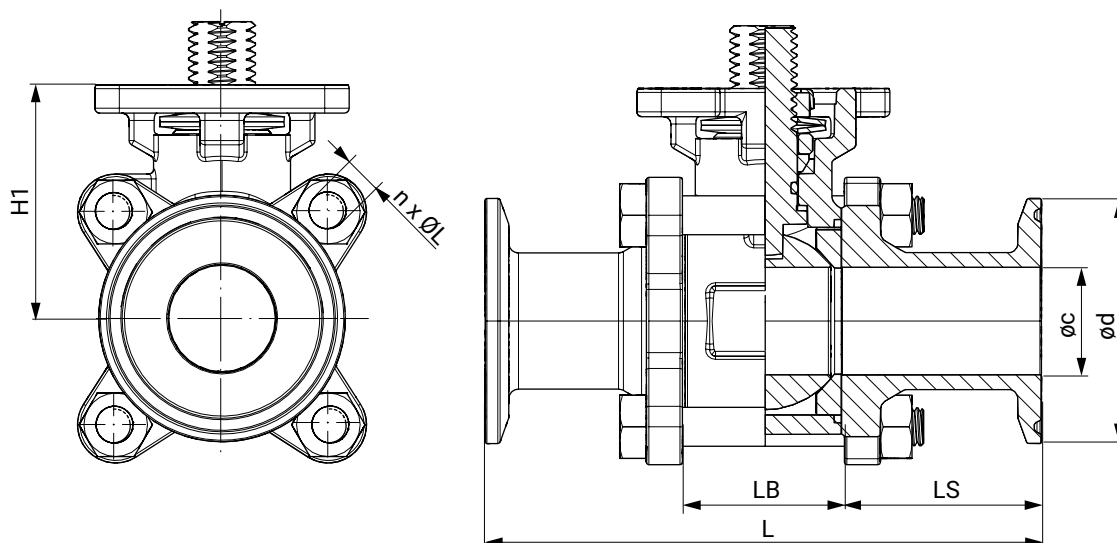**Clamp ASME BPE (connection code 80)**

DN	Øc	Ød	s	L	LB	LS	H1	n x ØL
15	9.4	25.0	1.65	88.8	25.0	31.9	38.0	4 x M6
20	15.8	25.0	1.65	101.6	25.0	38.3	38.0	4 x M6
25	22.1	50.4	1.65	114.3	32.1	41.1	48.0	4 x M8
40	34.8	50.4	1.65	139.8	46.0	46.9	60.0	4 x M12
50	47.5	63.9	1.65	158.8	59.6	49.6	69.0	4 x M14
65	60.2	77.4	1.65	171.5	77.1	47.2	89.0	4 x M14
80	72.9	90.9	1.65	196.3	91.7	52.3	98.0	4 x M16
100	97.4	118.9	2.1	241.3	118.3	61.5	130.0	6 x M16

Dimensions in mm  
n = number of bolts

**Mixed ends ASME BPE (connection code 93)**


DN	$\varnothing c$	$\varnothing d$	$\varnothing c1$	$\varnothing d1$	s	t	L	LB	LS	H1	n x $\varnothing L$
15	9.4	25.0	9.4	12.7	1.65	6.1	106.6	25.0	49.7	38.0	4 x M6
20	15.8	25.0	15.8	19.0	1.65	6.1	121.9	28.0	58.6	38.0	4 x M6
25	22.1	50.4	22.1	25.4	1.65	7.4	138.3	32.1	65.1	48.0	4 x M8
40	34.8	50.4	34.8	38.1	1.65	8.3	161.0	46.0	68.1	60.0	4 x M12
50	47.5	63.9	47.5	50.8	1.65	10.2	175.9	59.6	66.7	69.0	4 x M14
65	60.2	77.4	60.2	63.5	1.65	12.5	212.8	77.1	88.5	89.0	4 x M14
80	72.9	90.9	72.9	76.2	1.65	14.0	236.6	91.7	92.6	98.0	4 x M16
100	97.4	118.9	97.4	101.6	2.10	14.5	273.1	118.3	93.3	130.0	6 x M16

Dimensions in mm  
n = number of bolts

## Add-on components



### GEMÜ DR

#### Pneumatic quarter turn actuator

GEMÜ DR is a pneumatic double acting quarter turn actuator. It works according to the double piston rack and pinion principle and is suitable for mounting to butterfly valves or ball valves.



### GEMÜ SC

#### Pneumatic quarter turn actuator

GEMÜ SC is a pneumatic single acting quarter turn actuator. It works according to the double piston rack and pinion principle and is suitable for mounting to butterfly valves or ball valves.



### GEMÜ ADA

#### Pneumatic quarter turn actuator

GEMÜ ADA is a pneumatic double acting quarter turn actuator. It works according to the double piston rack and pinion principle and is suitable for mounting to butterfly valves or ball valves.



### GEMÜ ASR

#### Pneumatic quarter turn actuator

GEMÜ ASR is a pneumatic single acting quarter turn actuator. It works according to the double piston rack and pinion principle and is suitable for mounting to butterfly valves or ball valves.



### GEMÜ 9428

#### Motorized quarter turn actuator

The product is a motorized quarter turn actuator. The actuator is designed for DC or AC operating voltages. A manual override and an optical position indicator are integrated as standard. The torque in the end positions is increased. This enables a closing curve matched to the valves.



### GEMÜ J4C

#### Motorized quarter turn actuator


The J4C actuator is a motorized quarter turn actuator. The motor is designed for DC and AC operating voltages. A manual override and an optical position indicator are integrated as standard. The end positions are potential-free and adjustable.

**GEMÜ AB24****Hand lever or gearbox with handwheel**


Hand lever with standard flange according to EN ISO 5211 for the manual operation of quarter turn valves.

**Accessories****GEMÜ RC0****Shaft extension**

The RC0 shaft extension for quarter turn valves is a distance piece between manually, pneumatically or electrically operated valves. This means that valves can be protected from flooding or better access for operation of the valve can be ensured (also for manual override).

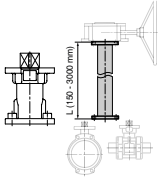

Nominal size	GEMÜ RC0 shaft extension		GEMÜ AB22 and AB24 hand lever	
	Item no.	Designation	Item no.	Designation
DN 8–20	88742081	RC0VAF04 D09KF04 D09 60 M12	88658096	AB22 20D 0SET
DN 25–32	88742082	RC0VAF05 D11KF05 D11 65 M14	88658097	AB22 32D 0SET
DN 40–50	88742083	RC0VAF07 D14KF07 D14 80 M18	88658099	AB22 50D 0SET
DN 65	88742085	RC0VAF07 D17KF07 D17100 M22	88660113	AB26 65D 0SET
DN 80	88742085	RC0VAF07 D17KF07 D17100 M22	88660114	AB26 80D 0SET
DN 100	88781980	RC0VAF12 D22KF12 D22 75 M28	88660420	AB24 100D 0SET

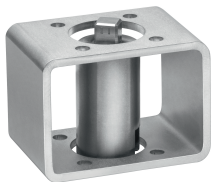**GEMÜ MSC****Mounting kit**

The MSC mounting kit is an interface, for the same and different ends, to join flange designs according to ISO 5211. This mounting kit ensures thermal separation of actuator and valve body. It can also be used as height compensation for insulated pipelines. The mounting kit is available in steel, electrogalvanized and stainless steel in an open or closed design.

**GEMÜ ADH****Mounting sleeve**

The mounting sleeve accessories are available in the square and star geometry designs. These are used for the shaft and hub support for quarter turn actuators. Both sleeves have an internal square drive (please observe stated measurement dimensions here). The sleeve material is sintered metal and they are chemically nickel plated with a surface of 25 µm.

**Certificates**

Certificate	Standard	Item number
2.2 Ferrite content measurement		88081058
2.2 Surface roughness measurement	EN10204 - EN ISO 4288	88079146



Certificate	Standard	Item number
3.1 Surface roughness measurement		88094384
3.1 Material	EN 10204	88333336



GEMÜ Gebr. Müller Apparatebau GmbH & Co. KG  
Fritz-Müller-Straße 6-8, 74653 Ingelfingen-Criesbach, Germany  
Phone +49 (0) 7940 1230 · [info@gemue.de](mailto:info@gemue.de)  
[www.gemu-group.com](http://www.gemu-group.com)