


Montagehinweis für PTFE-Membranen DN 80 - Code 52, 56 bzw. 59

(nur für Ventile GEMÜ 620 DN 80, GEMÜ 672 DN 65 und 80,
GEMÜ 687 DN 65 und 80)

⚠ WICHTIGER HINWEIS

Auf Grund von konstruktiven Änderungen bei o.g. Membranen ist beim Austausch darauf zu achten, dass eine Spannmutter entsprechend dem neuen Funktionsmaß verwendet wird. Zu Kontrolle messen Sie bitte das Tiefenmaß (siehe Bild). Dieses muss 11 ± 1 mm von der Unterkante des Druckstücks bis zur Aussparung des Membrandoms sein. Bei einer Maßabweichung muss die Spannmutter ausgewechselt werden. Diese ist separat zu bestellen (Artikel-Nummer 6216).

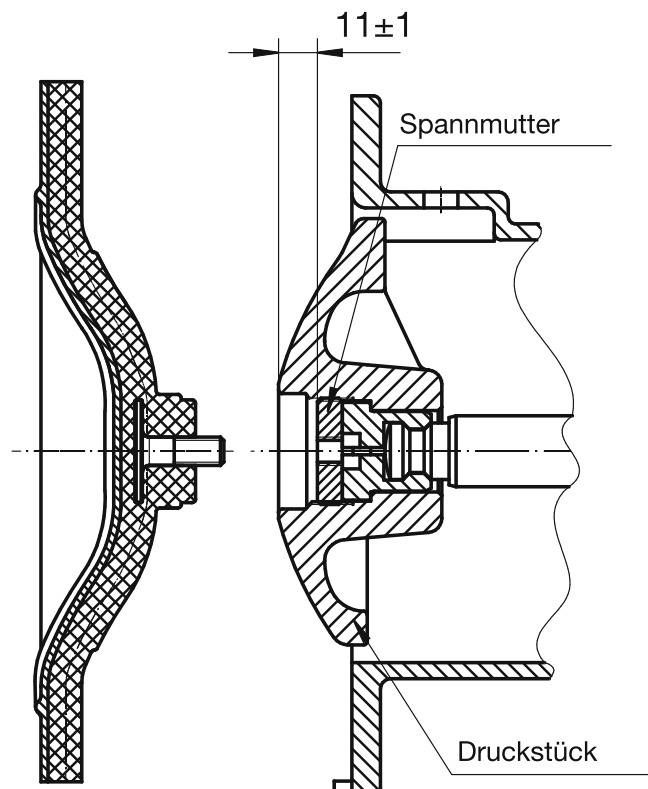


GEMÜ® PTFE diaphragms

Mounting instruction for PTFE diaphragms DN 80 - code 52, 56 resp. 59

(only for valves GEMÜ 620 DN 80, GEMÜ 672 DN 65 and 80,
GEMÜ 687 DN 65 and 80)

⚠ IMPORTANT INFORMATION

Due to constructive alterations of the above mentioned diaphragms please make sure to use an adjustable insert in accordance with the new functional dimensions. Please measure the depth dimension to make sure (see drawing). It must be $11 \text{ mm} \pm 1 \text{ mm}$ from the lower edge of the compressor to the recess in the diaphragm boss. If this dimension is different, the adjustable insert must be replaced. This adjustable insert has to be ordered separately (article number 6216).

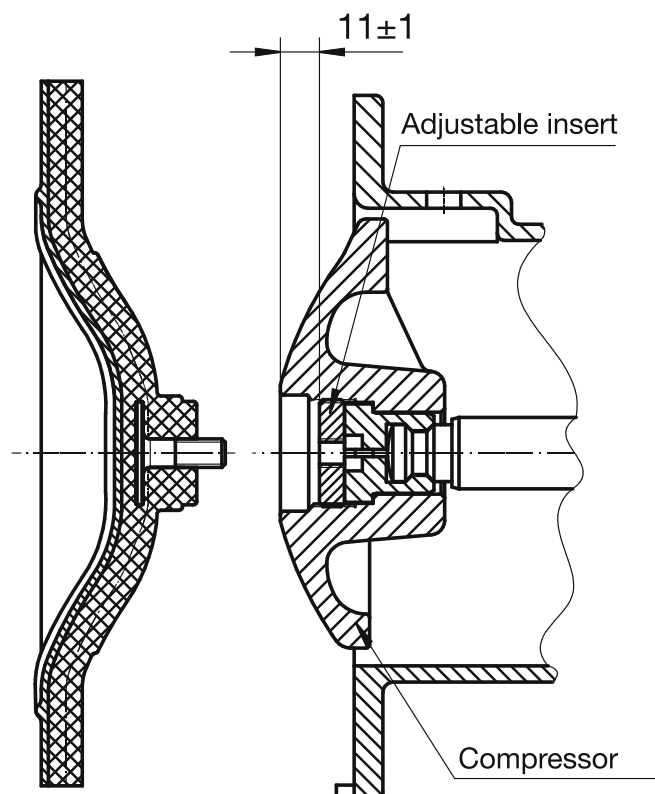

GEMÜ® VALVES, MEASUREMENT
AND CONTROL SYSTEMS