

GEMÜ 1236

24V / IO-Link, 3E, 4E

Electrical position indicator

EN

Operating instructions



All rights including copyrights or industrial property rights are expressly reserved.

Keep the document for future reference.

© GEMÜ Gebr. Müller Apparatebau GmbH & Co. KG
16.11.2022

Contents

1 General information	4
1.1 Information	4
1.2 Symbols used	4
1.3 Warning notes	4
2 Safety information	6
3 Product description	7
4 GEMÜ CONEXO	10
5 Correct use	10
6 Order data	11
6.1.8 Special function	11
7 Technical data	12
8 Dimensions	13
9 Manufacturer's information	14
9.1 Delivery	14
9.2 Packaging	14
9.3 Transport	14
9.4 Storage	14
10 Assembly and installation	14
10.5 Mounting kit assembly (quarter turn actuator)	15
11 Electrical connection	18
12 Programming the end positions	18
12.2 Initialization of the end positions via IO-Link	20
12.3 End position programming via programming input (pin 5)	20
13 Troubleshooting	21
14 Inspection and maintenance	23
15 Disassembly	23
16 Disposal	23
17 Returns	23
18 Declaration of conformity according to 2014/30/EU (EMC Directive)	24
19 UL certificate	25

1 General information

1.1 Information

- The descriptions and instructions apply to the standard versions. For special versions not described in this document the basic information contained herein applies in combination with any additional special documentation.
- Correct installation, operation, maintenance and repair work ensure faultless operation of the product.
- Should there be any doubts or misunderstandings, the German version is the authoritative document.
- Contact us at the address on the last page for staff training information.

1.2 Symbols used

The following symbols are used in this document:

Symbol	Meaning
●	Tasks to be performed
►	Response(s) to tasks
–	Lists

The following LED symbols are used in the documentation:

Symbol	LED conditions
○	Off
●	Lit (on)
☼	Flashing

1.3 Warning notes

Wherever possible, warning notes are organised according to the following scheme:

SIGNAL WORD	
Possible symbol for the specific danger	Type and source of the danger <ul style="list-style-type: none"> ► Possible consequences of non-observance. ● Measures for avoiding danger.

Warning notes are always marked with a signal word and sometimes also with a symbol for the specific danger.

The following signal words and danger levels are used:

⚠ DANGER	
	Imminent danger! <ul style="list-style-type: none"> ► Non-observance can cause death or severe injury.
⚠ WARNING	
	Potentially dangerous situation! <ul style="list-style-type: none"> ► Non-observance can cause death or severe injury.
⚠ CAUTION	
	Potentially dangerous situation! <ul style="list-style-type: none"> ► Non-observance can cause moderate to light injury.

NOTICE**Potentially dangerous situation!**

- Non-observance can cause damage to property.

The following symbols for the specific dangers can be used within a warning note:

Symbol	Meaning
	Danger of explosion!

2 Safety information

The safety information in this document refers only to an individual product. Potentially dangerous conditions can arise in combination with other plant components, which need to be considered on the basis of a risk analysis. The operator is responsible for the production of the risk analysis and for compliance with the resulting precautionary measures and regional safety regulations.

The document contains fundamental safety information that must be observed during commissioning, operation and maintenance. Non-compliance with these instructions may cause:

- Personal hazard due to electrical, mechanical and chemical effects.
- Hazard to nearby equipment.
- Failure of important functions.
- Hazard to the environment due to the leakage of dangerous substances.

The safety information does not take into account:

- Unexpected incidents and events, which may occur during installation, operation and maintenance.
- Local safety regulations which must be adhered to by the operator and by any additional installation personnel.

Prior to commissioning:

1. Transport and store the product correctly.
2. Do not paint the screws and plastic parts of the product.
3. Carry out installation and commissioning using trained personnel.
4. Provide adequate training for installation and operating personnel.
5. Ensure that the contents of the document have been fully understood by the responsible personnel.
6. Define the areas of responsibility.
7. Observe the safety data sheets.
8. Observe the safety regulations for the media used.

During operation:


9. Keep this document available at the place of use.
10. Observe the safety information.
11. Operate the product in accordance with this document.
12. Operate the product in accordance with the specifications.
13. Maintain the product correctly.
14. Do not carry out any maintenance work and repairs not described in this document without consulting the manufacturer first.

In cases of uncertainty:

15. Consult the nearest GEMÜ sales office.

3 Product description

3.1 Construction

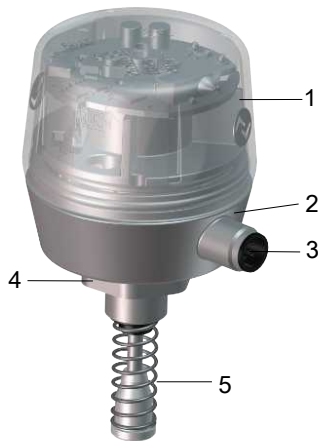


Item	Name	Materials
1	Housing cover	PPR
2	Housing base	Stainless steel
3	Electrical connection	PVDF
4	Adapter piece	PVDF
5	Mounting kit, valve specific	Stainless steel
	Seals	EPDM, PUR

3.2 LED displays

3.2.1 Status LEDs

As well as the electrical position feedback and error analysis a visual signal is emitted by LEDs that can be seen from above.

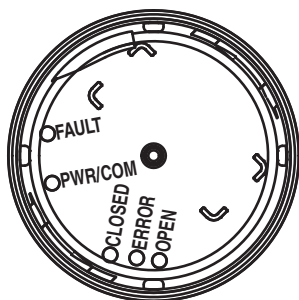

LED	Colour		Function
	Standard ¹⁾	Inversed ²⁾	
FAULT	red	red	Communication error
PWR/COM	green	green	Power / communication
CLOSED	green	orange	Process valve in CLOSED position
ERROR	red	red	Error
OPEN	orange	green	Process valve in OPEN position
High visibility LED	green	orange	Process valve in CLOSED position
	orange	green	Process valve in OPEN position
	Alternating green/orange	Alternating green/orange	Programming mode
	Flashes orange	Flashes orange	Error
	Flashes green	Flashes green	Location function*

*The location function is used for the optical identification of a device in a plant. In this case, all high visibility LEDs flash green. The location function can always be started and overrides all other flash codes of the high visibility LEDs. The rest of the device function is not affected..

1) Device version

Code 3E: Open/Closed position feedback, programming input, high visibility optical position indicator, IO-Link communication
Code 3S: Open/Closed position feedback, high visibility optical position indicator

2) Device version

Code 4E: Open/Closed position feedback inversed, programming input, high visibility optical position indicator, IO-Link communication
Code 4S: Open/Closed position feedback inversed, high visibility optical position indicator

For order codes see chapter "Order data"

3.2.2 LED conditions

Function			CLOSED	ERROR	OPEN	High visibility LED	
Valve in OPEN position			○	○	●	●	
Valve in CLOSED position			●	○	○	●	
Programming mode			☀	○	☀	☀	
			OPEN / CLOSED flash alternately				flashes alternately
LED conditions							
●	lit (on)	~	irrelevant	☀	flashes	○	off


3.3 Description

The GEMÜ 1236 electrical position indicator is suitable for installation on pneumatically operated linear actuators. The position of the valve spindle is reliably electronically detected and evaluated using play-free and non-positive mounting. Intelligent micro-processor-controlled functions facilitate commissioning and support during operation. The current position of the valve is displayed via high-visibility LEDs and fed back via electrical signals.

3.4 Function

The GEMÜ 1236 electrical position indicator shows the position of the valve. When the valve is opened, the spindle in the electrical position indicator moves upwards and indicates that the valve is OPEN using the high visibility LEDs and communication interface. When the valve is closed, the spring in the mounting kit pushes the spindle in the electrical position indicator downwards and indicates that the valve is CLOSED using the high visibility LEDs and communication interface.

3.5 Product label

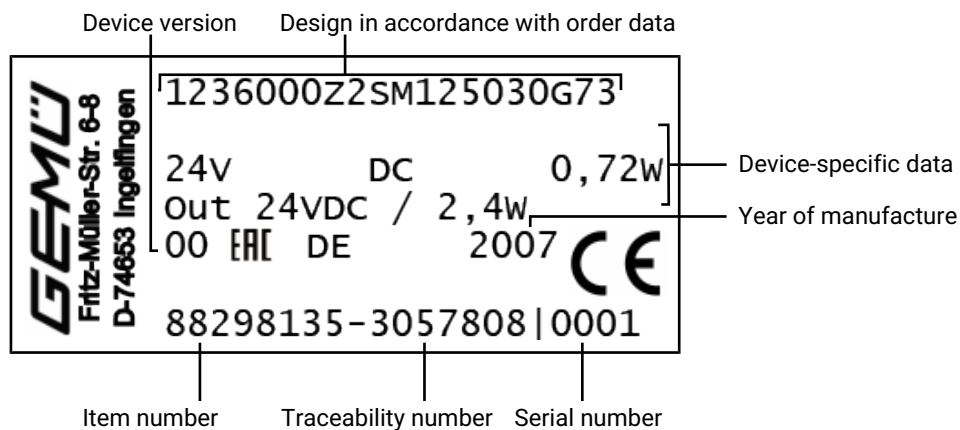


The manufacturing month is coded under the traceability number and can be requested from GEMÜ. The product was manufactured in Germany.

4 GEMÜ CONEXO

Order variant

In the corresponding design with CONEXO, this product has an RFID chip (1) for electronic identification purposes. The position of the RFID chip can be seen below. The CONEXO pen helps read out information stored in the RFID chips. The CONEXO app or CONEXO portal is required to view this information.

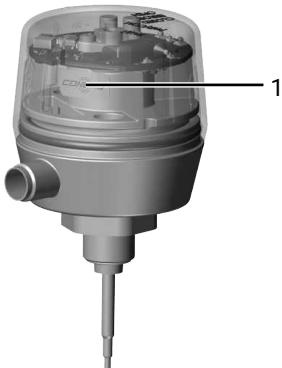

For further information please read the operating instructions for CONEXO products or the CONEXO datasheet.

Products such as the CONEXO app, the CONEXO portal and the CONEXO pen are not included in the scope of delivery and need to be ordered separately.

5 Correct use

DANGER



Danger of explosion!

- ▶ Risk of death or severe injury
- Do **not** use the product in potentially explosive zones.

WARNING

Improper use of the product!

- ▶ Risk of severe injury or death
- ▶ Manufacturer liability and guarantee will be void
- Only use the product in accordance with the operating conditions specified in the contract documentation and in this document.

The product is not intended for use in potentially explosive areas.

The product is designed for fitting to a GEMÜ valve in order to detect the position of linear actuators visually and electrically. The product has a microprocessor controlled intelligent position sensor as well as an analogue travel sensor system (potentiometer) which is positively connected with the actuator spindle by means of a mounting kit (spring, operating bush). The valve end positions and the integrated travel sensor can be controlled via the electrical connections.

- Use the product in accordance with the technical data.

6 Order data

The order data provide an overview of standard configurations.

Please check the availability before ordering. Other configurations available on request.

Note: A valve specific mounting kit is required for assembly. For designing the mounting kit, the valve type, nominal size, control function and actuator size must be stated.

Order codes

1 Type	Code	5 Electrical connection	Code
Electrical position indicator	1236	M12 plug, 5-pin	M125
2 Fieldbus	Code	6 Travel sensor version	Code
Without	000	Potentiometer, 30 mm length	030
3 Accessory	Code	Potentiometer, 50 mm length	050
Accessory	Z	Potentiometer, 75 mm length	075
4 Device version	Code	7 Housing material	Code
Open/Closed position feedback, programming input, high visibility optical position indicator, IO-Link communication	3E	Base 1.4301, PP cover, M16 thread, 1.4305	G70
Open/Closed position feedback, high visibility optical position indicator	3S	Base 1.4301, PP cover, M16 thread, 1.4305, (for GEMÜ 650, actuator size 1, 2, 3 control function 1)	G73
Open/Closed position feedback inversed, programming input, high visibility optical position indicator, IO-Link communication	4E	8 Special version	Code
Open/Closed position feedback inversed, high visibility optical position indicator	4S	UL approval	U

Order example

Ordering option	Code	Description
1 Type	1236	Electrical position indicator
2 Fieldbus	000	Without
3 Accessory	Z	Accessory
4 Device version	3E	Open/Closed position feedback, programming input, high visibility optical position indicator, IO-Link communication
5 Electrical connection	M125	M12 plug, 5-pin
6 Travel sensor version	030	Potentiometer, 30 mm length
7 Housing material	G70	Base 1.4301, PP cover, M16 thread, 1.4305
8 Special version	U	UL approval

7 Technical data

7.1 Temperature

Ambient temperature: -10 to 70 °C

Storage temperature: 0 – 40 °C

7.2 Product compliance

EMC Directive: 2014/30/EU

SIL:

Product description: Electrical position indicator GEMÜ 1236

Device type: B

Valid software version: V1.0.0.4

Safety function: The safety function is defined as a High (24 V DC) signal at pin 5 (device version 3S/4S) and at pin 4 (device version 3E/4E), if the current position of the integrated travel sensor is smaller than the switch point CLOSED (default setting 12 %).

HFT (Hardware Fault Tolerance): 0

MTTR (Mean Time To Restoration): 24 hours

MTBF (Mean Time Between Failures): 346 years

Further information, see SIL safety manual

UL listed for Canada and USA

Certificate: E515574

7.3 Mechanical data

Installation position: Optional

Weight:

Travel length code 030:	115 g
Travel length code 050:	138 g
Travel length code 075:	160 g

Protection class: IP 67

Travel sensor:	Travel sensor version Code		
	Code 030	Code 050	Code 075
Minimum stroke:	2.0 mm	3.5 mm	5.0 mm
Maximum stroke:	30.0 mm	50.0 mm	75.0 mm
Hysteresis:	0.2 mm	0.4 mm	0.5 mm
Accuracy:	0.2% Full Scale		

7.4 Electrical data

Supply voltage U_v: 24 V DC (18 to 30 V DC)

Duty cycle: Continuous duty

Electrical protection class: III


Reverse battery protection: yes

Line fuse 630 mA medium time lag (not applicable for operation with IO-Link Master)

Current consumption: typically 30 mA

Electrical connection type: 1 x 5-pin M12 plug (A-coded)

Switching characteristic:

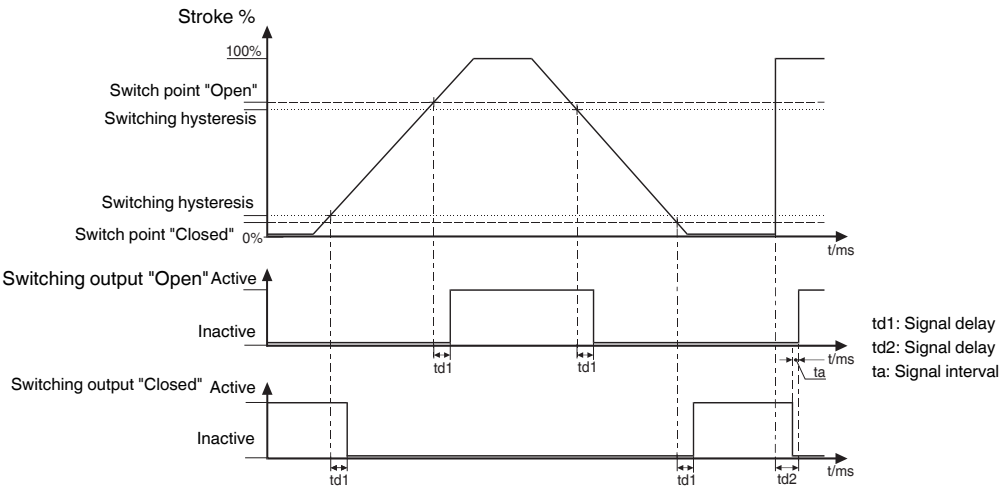


Switch points: The data in percent refers to the programmed stroke, with reference to the lower end position (0%)

Switch points:

	Travel sensor version Code		
	030	050	075
Default setting switch point CLOSED	12 %		
Default setting switch point OPEN	25 %		
Min. switch point CLOSED	0.8 mm	1.4 mm	2.0 mm
Min. switch point OPEN	0.5 mm	0.9 mm	1.25 mm

If the percentage switch points dependent on the programmed stroke are smaller than the permissible min. switch points, the min. switch points apply automatically.

8 Dimensions

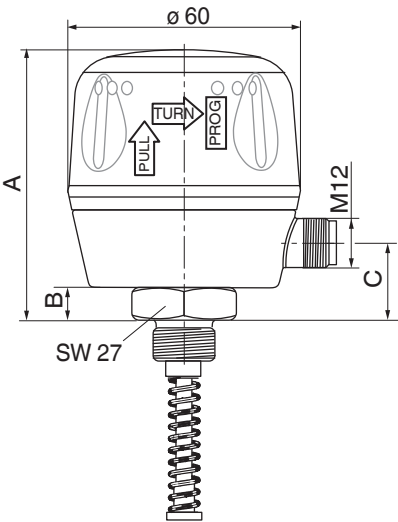

	Travel sensor version Code		
	030	050	075
A	65.5	87.5	112.5
B	8.5	30.5	55.5
C	19.0	41.0	66.0

Dimensions in mm

9 Manufacturer's information

9.1 Delivery

- Check that all parts are present and check for any damage immediately upon receipt.

The product's performance is tested at the factory. The scope of delivery is apparent from the dispatch documents and the design from the order number.

9.2 Packaging

The product is packaged in a cardboard box which can be recycled as paper.

9.3 Transport

1. Only transport the product by suitable means. Do not drop. Handle carefully.
2. After the installation dispose of transport packaging material according to relevant local or national disposal regulations / environmental protection laws.


9.4 Storage

1. Store the product free from dust and moisture in its original packaging.
2. Avoid UV rays and direct sunlight.
3. Do not exceed the maximum storage temperature (see chapter "Technical data").
4. Do not store solvents, chemicals, acids, fuels or similar fluids in the same room as GEMÜ products and their spare parts.

10 Assembly and installation


10.1 Preparations for installing the valve (linear actuator)

1. Move the actuator **A** into zero position (actuator vented).
2. Remove optical position indicator **2** and / or protective cap **1** from the actuator top.

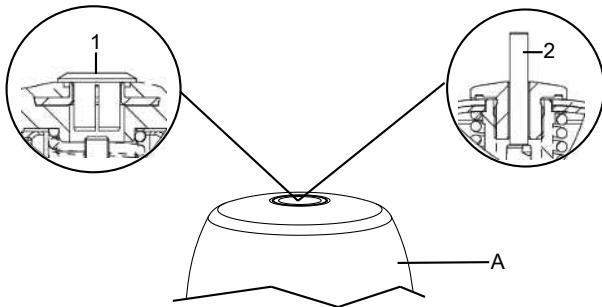

10.2 Preparations for installation of the valve (quarter turn actuator)

1. Move the actuator **A** into zero position (actuator vented).

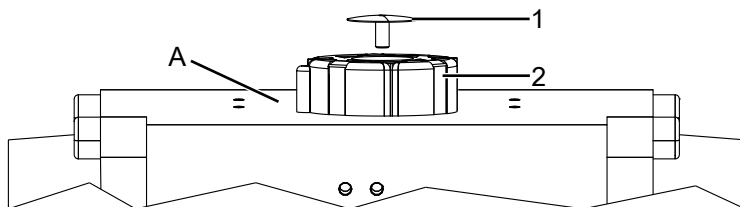

2. Remove the screw **1** from the trigger cam **2**.

10.3 Mounting kit assembly on electrical position indicator

⚠ CAUTION

Do not scratch the spindle!

- ▶ A damaged spindle surface may cause failure of the travel sensor.

⚠ CAUTION

Pretensioned spring!


- ▶ Damage to the device.
- Slowly release the tension in the spring.



1. Pull out spindle 1 as far as it will go.
2. Push spring 2 over spindle 1.
3. Mount operating spindle 3.
4. Push in spindle 1 until it pushes against spring 2.


10.4 Assembling the adapter (linear actuator)

With some mounting kits it is necessary to install an adapter as well. This adapter is enclosed with the required mounting kits. Valves with a normally open and double acting control function (code 2+3) also include additional O-rings (1+2).

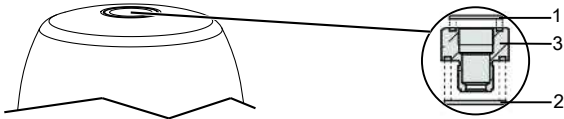


1. Move the actuator to the closed position.
2. Place O-rings 1 and 2 into adapter 3.
3. Screw adapter 3 into the actuator opening as far as it will go and tighten.

10.5 Mounting kit assembly (quarter turn actuator)

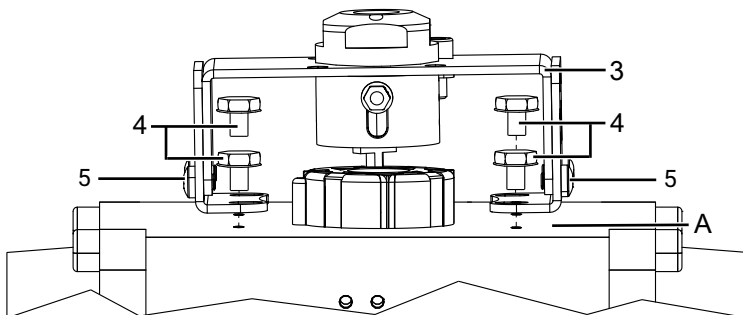

1. Adjust the mounting bracket to the required borehole pattern.
 - ⇒ To do this, loosen the side screws 5 and set the retaining feet onto the thread of the actuator, and install it using screws 4.
2. Secure the bracket 3 to the retaining feet as shown. In doing so, the tap shaft must sit free of play in the shaft of the actuator.

10.6 Assembling the stroke limiter (linear actuator)

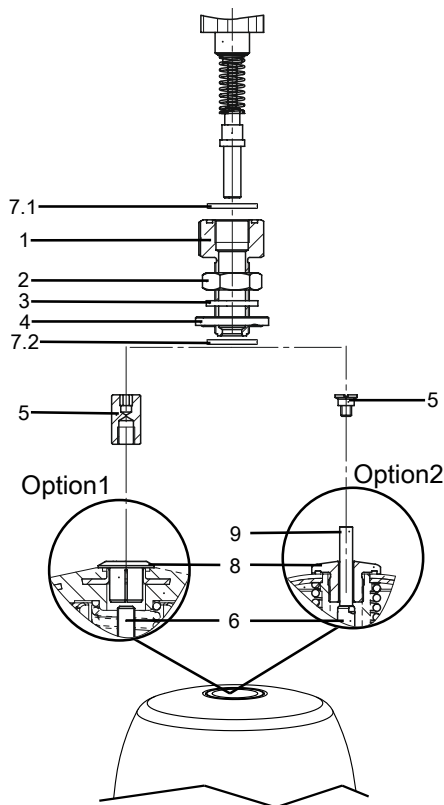

1. Screw distance piece **5** onto/into actuator spindle **6**.
2. Move the actuator to the closed position.
3. Insert the O-ring **7.1** in the stroke limiter **1**.
4. Insert the O-ring **7.2** in the washer **4**.
5. Screw stroke limiter **1** with nut **2**, seal **3** and washer **4** into the actuator opening.
6. Set stroke limiter **1** to the required stroke.
7. Make sure that the minimum stroke is reached.
8. Secure stroke limiter **1** with nut **2**.

Key			
1	Stroke limiter	7.1 ¹⁾	O-ring
		7.2 ¹⁾	
2	Nut	8	Protective cap
3 ¹⁾	Seal	9	Position indicator
4 ¹⁾	Washer	10	Operating bush
5 ²⁾	Distance piece	11	Spindle
6	Actuator spindle	12	Travel sensor

1) Only available for valves with the NO and DA control functions.



2) Only included in required mounting kits. The design depends on the valve.

10.7 Installing the electrical position indicator (linear actuator)


⚠ CAUTION

Incorrect installation of the product.


- Damage to the housing.
- Only tighten the product using the spanner flats provided for this purpose.

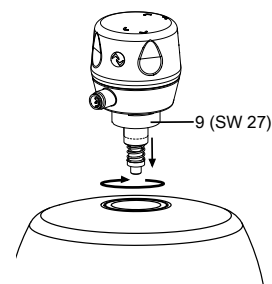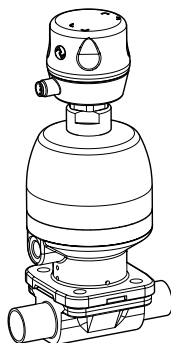


1. Move the actuator to the OPEN position.
2. Guide the product as far as it will go into the actuator opening, the adapter 3 (see "Assembling the adapter (linear actuator)", page 15) or the stroke limiter 1 (see "Assembling the stroke limiter (linear actuator)", page 16), and screw it in clockwise against the initial spring tension.
3. Use the spanner flat of the travel sensor to tighten the product.
4. Turn the housing clockwise to align the pneumatic or electrical connections.
5. Initialize the product.

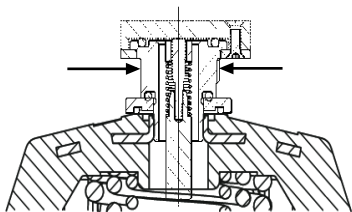

6. The product with mounting kit is fully assembled.

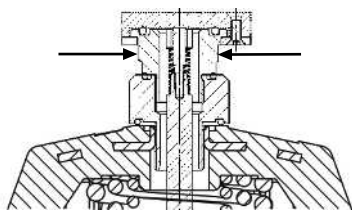

7. The product with mounting kit and adapter is fully assembled.

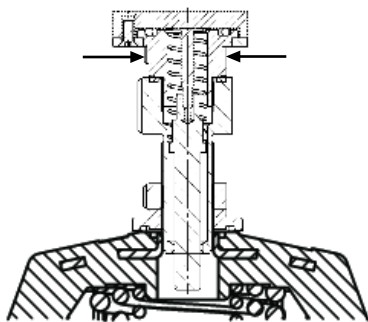



8. The product with mounting kit and stroke limiter is fully assembled.

10.8 Installing the electrical position indicator (quarter turn actuator)

CAUTION

Incorrect installation of the product.


- Damage to the housing.
- Only tighten the product using the spanner flats provided for this purpose.

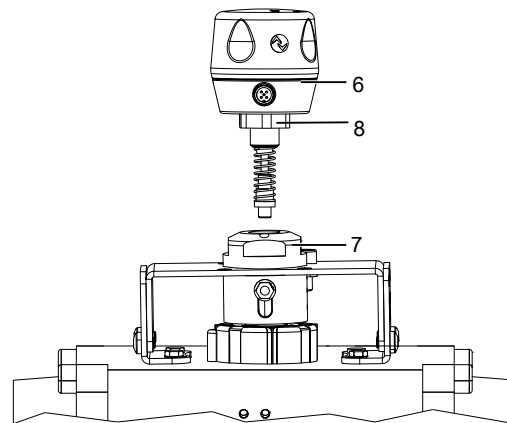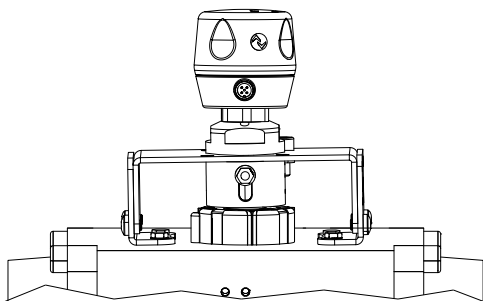

1. Screw the electrical position indicator **6** onto the adapter **7**.
2. Use the spanner flat **8** (WAF 27) of the travel sensor to tighten the electrical position indicator.
3. Turn the housing clockwise to align the pneumatic or electrical connections.
4. Initialize the product.

11 Electrical connection

11.1 IO-Link, device version 3E / 4E

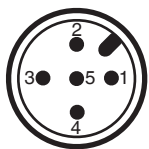

	Description
1	U, 24 V DC, supply voltage
2	24 V DC, Open end position output
3	U, GND
4	24 V DC, Closed end position output, C/Q IO-Link
5	24 V DC, programming input (speed ^{AP} function)

Device version 3S / 4S is pin compatible with the previous version 2SM125, pin 5 is highly active but without potential-free contacts. The device has 24 V DC Push-Pull outputs

12 Programming the end positions

The end positions must be programmed under the following conditions:

- Retrofitting an electrical position indicator
- Replacing the actuator
- Replacing the diaphragm


If electrical position indicators have been fitted to the process valve at the factory, the end positions will already have been programmed.

The end positions can be programmed as follows:

- On-site programming
- Programming input (pin 5)
- Communication interface

When programming via the communication interface, automatic programming is recommended.

12.1 On-site end position programming

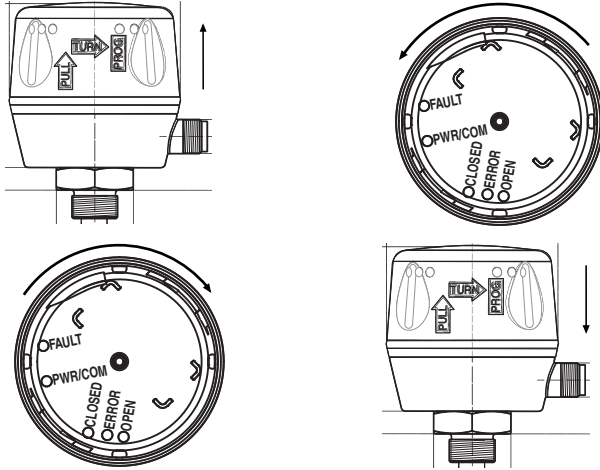

1. Pull the housing cover of the electrical position indicator up (approx. 2 mm).
2. Turn the housing cover anticlockwise (until it stops).
3. Electrical position indicator is in the programming mode.
 - ⇒ OPEN and CLOSED LEDs flash alternately
 - ⇒ High visibility LED flashes alternately green / orange
4. Open valve until end position is reached.
5. Close valve until end position is reached.
6. Turn the housing cover back clockwise and press it down.
 - ⇒ The end positions are set.

12.2 Initialization of the end positions via IO-Link

1. Select automatic programming mode (parameter data "Programming mode").
2. Briefly (>100 ms) activate programming mode (process data "Programming mode").
 - ⇒ OPEN and CLOSED LEDs flash alternately
 - ⇒ High visibility LED flashes alternately green / orange
3. Open valve until end position is reached.
4. Close valve until end position is reached.
5. Programming mode is automatically terminated if the valve does not move for 5 seconds.
 - ⇒ The end positions are set.




































12.3 End position programming via programming input (pin 5)

1. Connect supply voltage.
2. Briefly connect a 24 V DC signal (>100 ms) to programming input (pin 5).
 - ⇒ OPEN and CLOSED LEDs flash alternately.
 - ⇒ High visibility LED flashes alternately green / orange.
3. Open valve until end position is reached.
4. Close valve until end position is reached.
5. Programming mode is automatically terminated if the valve does not move for 5 seconds.
 - ⇒ The end positions are set.

13 Troubleshooting

13.1 LED error message

If an error occurs, the high visibility LED flashes orange and the ERROR LED flashes red.

Function			FAULT	PWR/COM	CLOSED	ERROR	OPEN
Programming error	No stroke		~	~			
	Stroke < min. stroke		~	~			
	Sensor error		~	~			
					OPEN and CLOSED flash alternately		
Sensor error	OPEN position		~	~			
	CLOSED position		~	~			
Short-circuit signal output	Output OPEN		~	~			
	Output CLOSED		~	~			
	OPEN+CLOSED		~	~			
Internal error			~	~			
					OPEN and CLOSED flash simultaneously		
Supply voltage too low							
	lit (on)	~	irrelevant		flashes		off

13.2 Troubleshooting

Error	Error cause	Troubleshooting
Programming error no stroke	No compressed air supply during the programming procedure	Ensure the compressed air supply availability, re-programme
	Compressed air supply during the programming procedure not sufficient	Ensure the compressed air supply availability, re-programme
	No mounting kit available or faulty	Check the mounting kit, re-programme
Programming error stroke < min. stroke	Minimum stroke was not reached (e.g. due to stroke limiter)	Ensure minimum stroke, re-programme
	Shut off diaphragm compressed too much (diaphragm size 8)	Ensure correct compression of the shut off diaphragm, re-programme
Programming error after sensor error	The sensor range was exceeded during the programming procedure. Currently the process valve is in the valid sensor range.	Check the mounting kit, re-programme. Note the maximum stroke (see "Technical data")
Sensor error CLOSED or OPEN position	Sensor limit exceeded	Check the mounting kit, re-programme. Note the maximum stroke (see "Technical data")
Short-circuit - signal output OPEN or CLOSED	Short-circuit	Check the wiring and device version
Communication error	Communication disturbed or interrupted	Check the wiring
Supply voltage too low	Supply voltage too low	Ensure supply voltage in accordance with chapter "Technical data"
Internal error	Memory error	Return device

14 Inspection and maintenance

NOTICE

Exceptional maintenance work!

- Damage to the GEMÜ product
- Any maintenance work and repairs not described in these operating instructions must not be performed without consulting the manufacturer first.

The operator must carry out regular visual examination of the products dependent on the operating conditions and the potential danger in order to prevent leakage and damage.

1. Have servicing and maintenance work performed by trained personnel.
2. Wear appropriate protective gear as specified in plant operator's guidelines.
3. Shut off plant or plant component.
4. Secure the plant or plant component against recommissioning.
5. Depressurize the plant or plant component.
6. Actuate products which are always in the same position four times a year.

14.1 Spare parts

No spare parts are available for this product. If it is faulty, please return it to GEMÜ for repair.

14.2 Cleaning the product

- Clean the product with a damp cloth.
- Do **not** clean the product with a high pressure cleaning device.

15 Disassembly

1. Disassemble in reverse order to assembly.
2. Unscrew the electrical wiring.
3. Disassemble the product. Observe warning notes and safety information.

16 Disposal

1. Pay attention to adhered residual material and gas diffusion from penetrated media.
2. Dispose of all parts in accordance with the disposal regulations/environmental protection laws.
3. Dispose of electronic components separately.

17 Returns

Legal regulations for the protection of the environment and personnel require that the completed and signed return delivery note is included with the dispatch documents. Returned goods can be processed only when this note is completed. If no return delivery note is included with the product, GEMÜ cannot process credits or repair work but will dispose of the goods at the operator's expense.

1. Clean the product.
2. Request a return delivery note from GEMÜ.
3. Complete the return delivery note.
4. Send the product with a completed return delivery note to GEMÜ.

18 Declaration of conformity according to 2014/30/EU (EMC Directive)

EU Declaration of Conformity

in accordance with 2014/30/EU (EMC Directive)

We, GEMÜ Gebr. Müller Apparatebau GmbH & Co. KG
Fritz-Müller-Straße 6-8
74653 Ingelfingen-Criesbach, Germany

declare that the product listed below complies with the safety requirements of the EMC Directive 2014/30/EU.

Description of the product:	GEMÜ 1236
Device version:	3E, 3S, 4E, 4S
Technical standards used:	
Interference resistance:	EN 61000-6-2 IO-Link Spec 1.1
Interference emission:	EN 61000-6-3 IO-Link Spec 1.1

2022-11-16



Joachim Brien
Head of Technical Department

CERTIFICATE OF COMPLIANCE

Certificate Number E515574
Report Reference E515574-20200630
Issue Date 2020-JULY-08

Issued to: GEMU VALVES INC
Suite 110-112, Bldg 2600
3800 Camp Creek Pky
Atlanta GA 30331

This certificate confirms that representative samples of PROCESS CONTROL EQUIPMENT, ELECTRICAL
Open Type Electro-Pneumatic Positioner/Controller models:
1235, 1236, and 1436 Eco

Have been investigated by UL in accordance with the
Standard(s) indicated on this Certificate.


Standard(s) for Safety: UL 61010-1 Safety Requirements For Electrical Equipment
For Measurement, Control, And Laboratory Use - Part 1:
General Requirements
CSA C22.2 NO. 61010-1-12 Safety Requirements For
Electrical Equipment For Measurement, Control, And
Laboratory Use - Part 1: General Requirements

Additional Information: See the UL Online Certifications Directory at
<https://iq.ulprospector.com> for additional information.

This *Certificate of Compliance* does not provide authorization to apply the UL Mark. Only the UL Follow-Up Services Procedure provides authorization to apply the UL Mark.

Only those products bearing the UL Mark should be considered as being UL Certified and covered under UL's Follow-Up Services.

Look for the UL Certification Mark on the product.

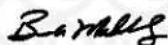

Bruce Mahrenholz, Director North American Certification Program
UL LLC

Any information and documentation involving UL Mark services are provided on behalf of UL LLC (UL) or any authorized licensee of UL. For questions, please contact a local UL Customer Service Representative at <http://ul.com/about/locations/>





GEMÜ Gebr. Müller Apparatebau GmbH & Co. KG
Fritz-Müller-Straße 6-8, 74653 Ingelfingen-Criesbach, Germany
Phone +49 (0) 7940 1230 · info@gemue.de
www.gemu-group.com

Subject to alteration

11.2022 | 88601605