

# GEMÜ 539 eSyDrive

Motorized globe valve

EN

## Operating instructions



All rights including copyrights or industrial property rights are expressly reserved.

Keep the document for future reference.

© GEMÜ Gebr. Müller Apparatebau GmbH & Co. KG  
16.11.2023

---

## Contents

<b>1 General information .....</b>	<b>4</b>	<b>23 EU Declaration of Conformity In accordance with</b>	
1.1 Information .....	4	<b>2011/65/EU (RoHS Directive) .....</b>	<b>38</b>
1.2 Symbols used .....	4		
1.3 LED symbols .....	4		
1.4 Definition of terms .....	4		
1.5 Warning notes .....	4		
<b>2 Safety information .....</b>	<b>5</b>		
<b>3 Product description .....</b>	<b>5</b>		
<b>4 Order data .....</b>	<b>9</b>		
<b>5 Technical data .....</b>	<b>11</b>		
<b>6 Electrical connection .....</b>	<b>19</b>		
<b>7 Dimensions .....</b>	<b>22</b>		
<b>8 Delivery .....</b>	<b>27</b>		
<b>9 Transport .....</b>	<b>27</b>		
<b>10 Storage .....</b>	<b>27</b>		
<b>11 Installation in piping .....</b>	<b>27</b>		
11.1 Preparing for installation .....	27		
11.2 Installation position .....	28		
11.3 Installation with flanged connection .....	28		
<b>12 Network connection .....</b>	<b>28</b>		
12.1 Network settings .....	28		
12.2 Connecting the network .....	28		
12.3 Resetting the network settings .....	28		
<b>13 Commissioning .....</b>	<b>29</b>		
13.1 Commissioning on the device .....	29		
13.2 Commissioning via the eSy-Web web inter- face .....	29		
13.3 Commissioning via digital input .....	29		
<b>14 Operation .....</b>	<b>29</b>		
14.1 Operation on the device .....	29		
14.2 Operation via the web server .....	29		
14.3 Manual override .....	29		
<b>15 Inspection and maintenance .....</b>	<b>30</b>		
15.1 Spare parts .....	30		
15.2 Removing the actuator .....	31		
15.2.1 Removing actuator DN 15 - DN 50 ..	31		
15.2.2 Removing actuator DN 65 - DN 100	31		
15.3 Replacing the seals .....	31		
15.3.1 Replacing the seals DN 15 - DN 50 .	31		
15.3.2 Replacing the seals DN 65 - DN 100 .....	31		
15.4 Mounting the actuator .....	32		
15.4.1 Mounting actuator DN 15 - DN 50 ...	32		
15.4.2 Mounting actuator DN 65 - DN 100 .	32		
<b>16 Troubleshooting .....</b>	<b>33</b>		
<b>17 Removal from piping .....</b>	<b>34</b>		
<b>18 Disposal .....</b>	<b>34</b>		
<b>19 Returns .....</b>	<b>34</b>		
<b>20 EU Declaration of Incorporation according to the EC Machinery Directive 2006/42/EC, Annex II B ...</b>	<b>35</b>		
<b>21 EU Declaration of Conformity in accordance with 2014/68/EU (Pressure Equipment Directive) .....</b>	<b>36</b>		
<b>22 EU Declaration of Conformity in accordance with 2014/30/EU (EMC Directive) .....</b>	<b>37</b>		

## 1 General information

### 1.1 Information

- The descriptions and instructions apply to the standard versions. For special versions not described in this document the basic information contained herein applies in combination with any additional special documentation.
- Correct installation, operation, maintenance and repair work ensure faultless operation of the product.
- Should there be any doubts or misunderstandings, the German version is the authoritative document.
- Contact us at the address on the last page for staff training information.

### 1.2 Symbols used

The following symbols are used in this document:

Symbol	Meaning
●	Tasks to be performed
►	Response(s) to tasks
–	Lists

### 1.3 LED symbols

The following LED symbols are used in the documentation:

Symbol	LED conditions
○	Off
●	Lit (on)
⦿	Flashing

### 1.4 Definition of terms

#### Working medium

The medium that flows through the GEMÜ product.



### 1.5 Warning notes



Wherever possible, warning notes are organised according to the following scheme:



SIGNAL WORD	
Possible symbol for the specific danger	<b>Type and source of the danger</b> <ul style="list-style-type: none"> <li>► Possible consequences of non-observance.</li> <li>● Measures for avoiding danger.</li> </ul>


Warning notes are always marked with a signal word and sometimes also with a symbol for the specific danger.

The following signal words and danger levels are used:






 <b>DANGER</b>	
	<b>Imminent danger!</b> <ul style="list-style-type: none"> <li>► Non-observance can cause death or severe injury.</li> </ul>

 <b>WARNING</b>	
	<b>Potentially dangerous situation!</b> <ul style="list-style-type: none"> <li>► Non-observance can cause death or severe injury.</li> </ul>

 <b>CAUTION</b>	
	<b>Potentially dangerous situation!</b> <ul style="list-style-type: none"> <li>► Non-observance can cause moderate to light injury.</li> </ul>

<b>NOTICE</b>	
	<b>Potentially dangerous situation!</b> <ul style="list-style-type: none"> <li>► Non-observance can cause damage to property.</li> </ul>

The following symbols for the specific dangers can be used within a warning note:

Symbol	Meaning
	Danger of explosion!
	Corrosive chemicals!
	Hot plant components!
	Rotating cover!
	Incorrect combination of actuator and valve body!

## 2 Safety information

The safety information in this document refers only to an individual product. Potentially dangerous conditions can arise in combination with other plant components, which need to be considered on the basis of a risk analysis. The operator is responsible for the production of the risk analysis and for compliance with the resulting precautionary measures and regional safety regulations.

The document contains fundamental safety information that must be observed during commissioning, operation and maintenance. Non-compliance with these instructions may cause:

- Personal hazard due to electrical, mechanical and chemical effects.
- Hazard to nearby equipment.
- Failure of important functions.
- Hazard to the environment due to the leakage of dangerous substances.

The safety information does not take into account:

- Unexpected incidents and events, which may occur during installation, operation and maintenance.
- Local safety regulations which must be adhered to by the operator and by any additional installation personnel.

### Prior to commissioning:

1. Transport and store the product correctly.
2. Do not paint the bolts and plastic parts of the product.
3. Carry out installation and commissioning using trained personnel.
4. Provide adequate training for installation and operating personnel.
5. Ensure that the contents of the document have been fully understood by the responsible personnel.
6. Define the areas of responsibility.
7. Observe the safety data sheets.
8. Observe the safety regulations for the media used.

### During operation:


9. Keep this document available at the place of use.
10. Observe the safety information.
11. Operate the product in accordance with this document.
12. Operate the product in accordance with the specifications.
13. Maintain the product correctly.
14. Do not carry out any maintenance work and repairs not described in this document without consulting the manufacturer first.

### In cases of uncertainty:

15. Consult the nearest GEMÜ sales office.

## 3 Product description

### 3.1 Construction

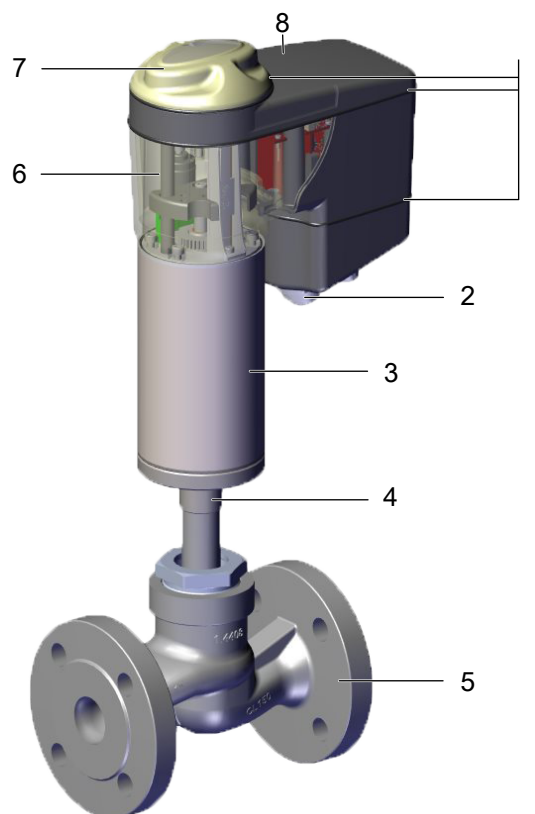

Item	Name	Materials
1	O-rings	EPDM
2	Electrical connections	
3	Actuator base	1.4301 / 1.4305
4	Distance piece with leak detection hole	1.4408
5	Valve body	1.4408, SG iron
6	Optical position indicator	PESU (Actuator size 0, 2) PC (Actuator size 1)
7	Cover with high visibility LED, manual override and on-site control	PESU (Actuator size 0, 2) PC (Actuator size 1)
8	Actuator top	PESU black (Actuator size 0, 2) PC black (Actuator size 1)

3.2 Buttons for on-site control

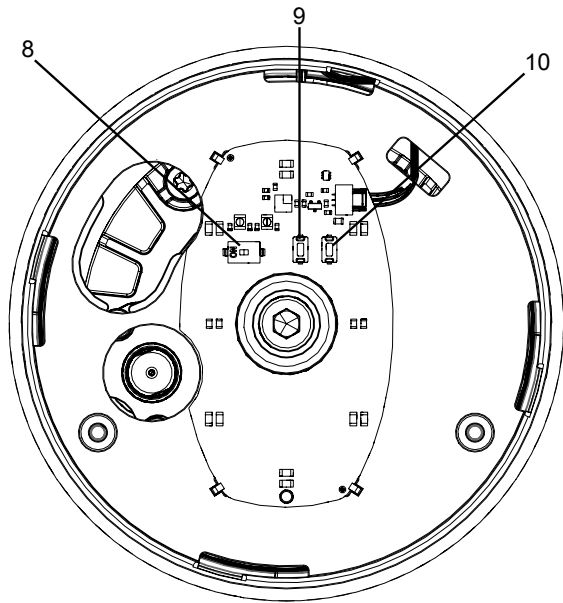


Fig. 1: Position of the buttons

Item	Name	Function
8	DIP switch, "ON-site" control	Switches the on-site control on the device on or off
9	"OPEN" button	Moves actuator to the open position Resets the network settings
10	"INIT/CLOSE" button	Moves actuator to the closed position Starting initialisation

3.3 LED displays

3.3.1 On-site status LEDs

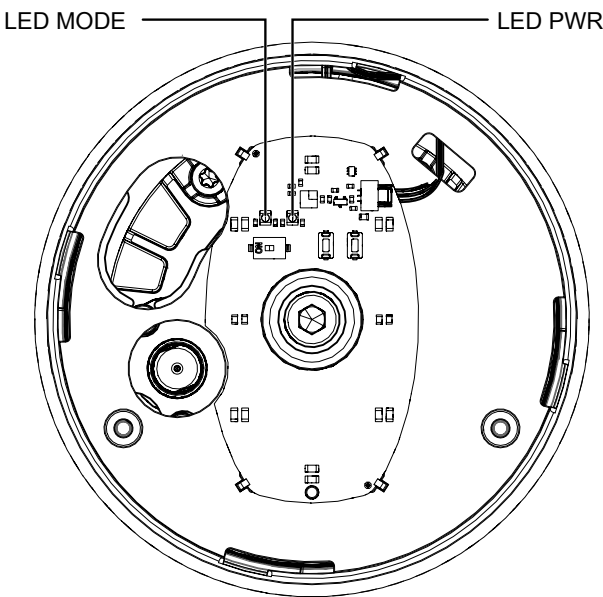



Fig. 2: Position of the status LEDs

The user checks the following conditions directly on-site at the valve using LED MODE and LED PWR:

Function	LED MODE		LED PWR	
	Yellow	Blue	Green	Red
Automatic operation				
Manual operation				
Actuator switched off (OFF mode)				
Manual operation (on-site)				
Software update				
	alternating			
On-site initialisation (buttons)				
Remote initialisation (via Di-gln)				

Function	LED MODE		LED PWR	
	Yellow	Blue	Green	Red
Operation via emergency power supply module				

### 3.3.2 High visibility LEDs





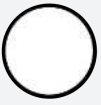


Fig. 3: Position of the high visibility LEDs

Item	Name
11	High visibility LEDs

Function	High visibility LED	
	green	orange
Initialization		
Location function	alternating	
		

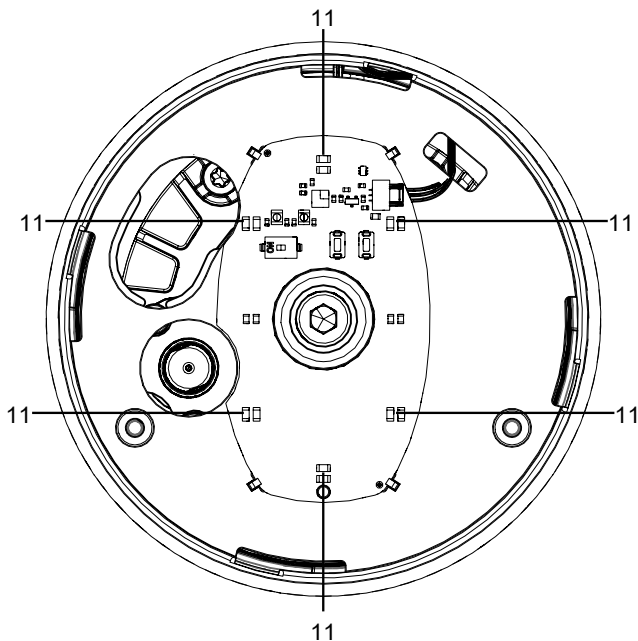









### 3.4 Description

The GEMÜ 539 eSyDrive is a motorized 2/2-way globe valve with a hollow shaft electric actuator. The eSyDrive hollow shaft actuator can be operated as On/Off or with integrated positioner or process controller. The valve spindle is sealed by a self-adjusting gland packing providing low-maintenance and reliable valve spindle sealing even after a long service life. A wiper ring fitted in front of the gland packing protects the seal against contamination and damage. An integral optical and electrical position indicator is standard.

### 3.5 Function

The product controls or regulates (depending on version) a flowing medium by being closed or opened by a motorized actuator.

The product has an optical position indicator as standard. The optical position indicator indicates the OPEN and CLOSED positions.

Function		High visibility LED	
		green	orange
OPEN position	Position indicator LEDs standard		
OPEN position	Position indicator LEDs inversed		
CLOSED position	Position indicator LEDs standard		
CLOSED position	Position indicator LEDs inversed		
Position unknown	(e.g. 50%)		

### 3.6 Correct use

**⚠ DANGER**



**Danger of explosion!**

- ▶ Risk of death or severe injury
- Do **not** use the product in potentially explosive zones.

**⚠ WARNING**

**Improper use of the product!**

- ▶ Risk of severe injury or death
- ▶ Manufacturer liability and guarantee will be void
- Only use the product in accordance with the operating conditions specified in the contract documentation and in this document.


The product is designed for installation in piping systems and for controlling a working medium.

The product is not intended for use in potentially explosive areas.

- Use the product in accordance with the technical data.

### 3.7 Product label

The product label is located on the actuator. Product label data (example):

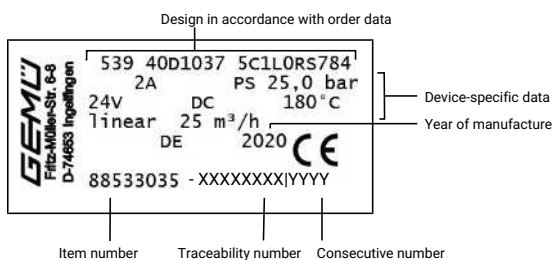

The month of manufacture is encoded in the traceability number and can be obtained from GEMÜ. The product was manufactured in Germany.

The operating pressure stated on the product label applies to a media temperature of 20 °C. The product can be used up to the maximum stated media temperature. You can find the pressure/temperature correlation in the technical data.



## 4 Order data

The order data provide an overview of standard configurations.

Please check the availability before ordering. Other configurations available on request.

### Order codes

1 Type	Code
Globe valve, motorized, electro-mechanical hollow shaft actuator, eSyDrive	539

2 DN	Code
DN 15	15
DN 20	20
DN 25	25
DN 32	32
DN 40	40
DN 50	50
DN 65	65
DN 80	80
DN 100	100

3 Body configuration	Code
2/2-way body	D

4 Connection type	Code
Flange EN 1092, PN 16, form B, face-to-face dimension FTF EN 558 series 1, ISO 5752, basic series 1	8
Flange EN 1092, PN 25, form B, face-to-face dimension FTF EN 558 series 1, ISO 5752, basic series 1	10
Flange EN 1092, PN 40, form B, face-to-face dimension FTF EN 558 series 1, ISO 5752, basic series 1	11
Flange ANSI Class 125/150 RF, face-to-face dimension FTF EN 558 series 1, ISO 5752, basic series 1, length only for body configuration D	39
Flange JIS 20K, face-to-face dimension FTF EN 558 series 10, ASME/ANSI B16.10 table 1, column 16, DN 50 drilled to JIS 10K	48

5 Valve body material	Code
1.4408, investment casting	37
EN-GJS-400-18-LT (GGG 40.3)	90

6 Seat seal	Code
PTFE	5
PTFE, glass fibre reinforced	5G
1.4404	10

7 Voltage/frequency	Code
24 V DC	C1

8 Control module	Code
OPEN/CLOSE, positioner and process controller	L0

9 Regulating cone	Code
Please find the number of the optional regulating cone (R-No.) for the linear or equal-percentage modified regulating cone in the Kv value table.	R....

10 Actuator version	Code
Actuator size 0	0A
Actuator size 1	1A
Actuator size 2	2A

11 Special version	Code
Special version for oxygen, maximum medium temperature: 60 °C, media wetted seal materials and auxiliary materials with BAM testing	S

12 CONEXO	Code
Without	
Integrated RFID chip for electronic identification and traceability	C

13 Type of design	Code
for higher temperatures	2024

**Order example**

Ordering option	Code	Description
1 Type	539	Globe valve, motorized, electro-mechanical hollow shaft actuator, eSyDrive
2 DN	40	DN 40
3 Body configuration	D	2/2-way body
4 Connection type	10	Flange EN 1092, PN 25, form B, face-to-face dimension FTF EN 558 series 1, ISO 5752, basic series 1
5 Valve body material	37	1.4408, investment casting
6 Seat seal	5	PTFE
7 Voltage/frequency	C1	24 V DC
8 Control module	L0	OPEN/CLOSE, positioner and process controller
9 Regulating cone	RS916	60 m³/h - mod.EQ
10 Actuator version	2A	Actuator size 2
11 Special version	S	Special version for oxygen, maximum medium temperature: 60 °C, media wetted seal materials and auxiliary materials with BAM testing
12 CONEXO		Without
13 Type of design		

## 5 Technical data

### 5.1 Medium

**Working medium:** Corrosive, inert, gaseous and liquid media which have no negative impact on the physical and chemical properties of the body and seal material.

**Max. permissible viscosity:** 600 mm<sup>2</sup>/s  
Other versions for lower / higher temperatures and higher viscosities on request.

### 5.2 Temperature

**Media temperature:** -10 – 180 °C  
-10 – 250 °C for K-No. 2024 + seat seal Code 5G, Code 10

**Ambient temperature:** -10 – 60 °C  
-10 – 40 °C for K-No. 2024 + seat seal Code 5G, Code 10

**Storage temperature:** 0 – 40 °C

### 5.3 Pressure

**Operating pressure:**

DN	Actuator version		
	0A	1A	2A
15	32	-	-
20	20	40	-
25	12	32	-
32	-	20	-
40	-	12	25
50	-	8	16
65	-	5	10
80	-	4	6
100	-	-	4

Pressures in bar

All pressures are gauge pressures.

For max. operating pressures the pressure / temperature correlation must be observed.

Higher operating pressures on request

**Leakage rate:**

**Open/Close valve**

Seat seal	Standard	Test procedure	Leakage rate	Test medium
Metal	DIN EN 12266-1	P12	F	Air
EPDM, FKM, PTFE	DIN EN 12266-1	P12	A	Air

**Control valve**

Seat seal	Standard	Test procedure	Leakage rate	Test medium
Metal	DIN EN 60534-4	1	IV	Air
PTFE, FKM, EPDM	DIN EN 60534-4	1	VI	Air

**Pressure/temperature correlation:**

Conne- ction type Code <sup>1)</sup>	Material Code <sup>2)</sup>	Max. allowable operating pressures in bar at temperature in °C				
		RT	100	150	200	250
<b>8</b>	<b>37</b>	16.0	16.0	14.5	13.4	12.7
<b>10</b>	<b>37</b>	25.0	25.0	22.7	21.0	19.8
<b>11</b>	<b>37</b>	40.0	40.0	36.3	33.7	31.8
<b>39</b>	<b>37</b>	19.0	16.0	14.8	13.6	12.1
<b>8</b>	<b>90</b>	16.0	16.0	15.5	14.7	13.9
<b>39</b>	<b>90</b>	17.0	16.0	14.8	13.9	12.1

**1) Connection type**

Code 8: Flange EN 1092, PN 16, form B, face-to-face dimension FTF EN 558 series 1, ISO 5752, basic series 1

Code 10: Flange EN 1092, PN 25, form B, face-to-face dimension FTF EN 558 series 1, ISO 5752, basic series 1

Code 11: Flange EN 1092, PN 40, form B, face-to-face dimension FTF EN 558 series 1, ISO 5752, basic series 1

Code 39: Flange ANSI Class 125/150 RF, face-to-face dimension FTF EN 558 series 1, ISO 5752, basic series 1, length only for body configuration D

**2) Valve body material**

Code 37: 1.4408, investment casting

Code 90: EN-GJS-400-18-LT (GGG 40.3)

**Kv values:****Open/Close valve**

DN	Kv values
<b>15</b>	4.6
<b>20</b>	8.0
<b>25</b>	13.0
<b>32</b>	22.0
<b>40</b>	35.0
<b>50</b>	50.0
<b>65</b>	95.0
<b>80</b>	140.0
<b>100</b>	200.0

Kv values in m³/h

Kv values determined in accordance with DIN EN 60534. The Kv value specifications refer to the largest actuator for the respective nominal size. The Kv values for other product configurations (e.g. other connections or body materials) may differ.

## Control valve:

## Standard regulating cone (DIN)

DN	Kv values	Operating pressure	Actuator version	linear	Equal percentage
15	4.0	32	0A	RS851	RS861
20	6.3	20	0A	RS852	RS862
25	10.0	12	0A	RS853	RS863
	10.0	32	1A	RS854	RS864
32	16.0	20	1A	RS855	RS865
40	25.0	12	1A	RS856	RS866
	25.0	20	2A	RS784	RS794
50	40.0	8	1A	RS857	RS867
	40.0	16	2A	RS785	RS795
65	63.0	5	1A	-	RS868
	80.0	10	2A	-	RS796
80	90.0	4	1A	-	RS869
80	100.0	6	2A	-	RS798
100	160.0	4	2A		RS799

Kv values in m<sup>3</sup>/h

Pressures in bar

## Standard regulating cone with reduced seat

DN	Kv values	Operating pressure	Actuator version	linear	equal percentage
15	0.10 <sup>1)</sup>	40	0A	RA104	RA307
	0.16 <sup>1)</sup>	40	0A	RB110	RA309
	0.25 <sup>1)</sup>	40	0A	RB111	RB307
	0.40 <sup>1)</sup>	40	0A	RB112	RB308
	0.63 <sup>1)</sup>	40	0A	RC107	RC307
	1.00 <sup>1)</sup>	40	0A	RC108	RC308
	1.60	40	0A	RD107	RD307
	2.50	40	0A	RE110	RE310
20	1.60	40	0A	RD108	RD308
	2.50	40	0A	RE111	RE311
	4.00	40	0A	RF113	RF313
25	2.50	40	0A	RE112	RE312
	4.00	40	0A	RF114	RF314
	6.30	32	0A	RG115	RG315
32	4.00	40	0A	RF115	RF315
	6.30	36	0A	RG116	RG316
	10.00	20	0A	RH110	RH310
40	6.30	35	0A	RG117	RG317
	10.00	20	0A	RH111	RH311
	16.00	12	0A	RJ107	RJ307
50 <sup>2)</sup>	10.00	18	0A	RH112	RH312
	16.00	12	0A	RJ108	RJ308
	25.00	19	1A	RK104	RK304

Kv values in m<sup>3</sup>/h

**Control valve:**

- 1) metal seated
- 2) only for connection type code 8, 39, 48

## 5.4 Product compliance

**Machinery Directive:** 2006/42/EC

**Pressure Equipment Directive:** 2014/68/EU

**Food:** Regulation (EC) No. 1935/2004\*  
 Regulation (EC) No. 10/2011\*  
 FDA\*  
 \* depending on version and / or operating parameters

**EMC Directive:** 2014/30/EU

**RoHS Directive:** 2011/65/EU

## 5.5 Mechanical data

**Protection class:** IP 65 acc. to EN 60529

**Actuating speed:** Actuator version 0A adjustable, max. 6 mm/s  
 Actuator version 1A adjustable, max. 6 mm/s  
 Actuator version 2A adjustable, max. 4 mm/s

**Weight:** **Actuator**  
 Actuator version 0A 1.8 kg  
 Actuator version 1A 3.0 kg  
 Actuator version 2A 9.0 kg

### Body

Connection types	8, 11, 39, 40	8, 10, 13, 47	8, 10, 39
Valve body	Flange K512	Flange K514	Flange K534
DN			
<b>15</b>	3.40	1.80	2.20
<b>20</b>	4.60	2.50	3.00
<b>25</b>	6.80	3.10	3.70
<b>32</b>	8.80	4.60	5.30
<b>40</b>	10.90	5.10	6.30
<b>50</b>	14.50	7.20	8.40
<b>65</b>	21.70	-	-
<b>80</b>	29.20	-	-
<b>100</b>	37.10	-	-

Weights in kg

### 5.6 Actuator duty cycle and service life

<b>Service life:</b>	<b>Control operation</b> - Class C acc. to EN 15714-2 (1,800,000 start-ups and 1200 start-ups per hour). <b>Open / Close duty</b> - Minimum 1,000,000 switching cycles at room temperature and permissible duty cycle.
<b>Duty cycle:</b>	<b>Control operation</b> - Class C acc. to EN 15714-2. <b>Open/Close duty</b> - 100%

### 5.7 Electrical data

<b>Supply voltage:</b>	Actuator size 0	Actuator size 1	Actuator size 2
Voltage	U <sub>V</sub> = 24 V DC ± 10%		
Rating	Max. 28 W	Max. 65 W	Max. 120 W
Reverse battery protection	Yes		

#### 5.7.1 Analogue input signals

##### 5.7.1.1 Set value

<b>Input signal:</b>	0/4 - 20 mA; 0 – 10 V DC (selectable using software)
<b>Input type:</b>	passive
<b>Input resistance:</b>	250 Ω
<b>Accuracy/linearity:</b>	≤ ±0.3% of full flow
<b>Temperature drift:</b>	≤ ±0.1% / 10°K
<b>Resolution:</b>	12 bit
<b>Reverse battery protection:</b>	No
<b>Overload proof:</b>	Yes (up to ± 24 V DC)

##### 5.7.1.2 Process actual value

<b>Input signal:</b>	0/4 - 20 mA; 0 – 10 V DC (selectable using software)
<b>Input type:</b>	passive
<b>Input resistance:</b>	250 Ω
<b>Accuracy/linearity:</b>	≤ ±0.3% of full flow
<b>Temperature drift:</b>	≤ ±0.1% / 10°K
<b>Resolution:</b>	12 bit
<b>Reverse battery protection:</b>	No
<b>Overload proof:</b>	Yes (up to ± 24 V DC)



**5.7.2 Digital input signals**

<b>Digital inputs:</b>	3
<b>Function:</b>	Can be selected using software
<b>Voltage:</b>	24 V DC
<b>Logic level "1":</b>	>14 V DC
<b>Logic level "0":</b>	< 8 V DC
<b>Input current:</b>	typ. 2.5 mA (at 24 V DC)

**5.7.3 Analogue output signals****5.7.3.1 Actual value**

<b>Output signal:</b>	0/4 - 20 mA; 0 – 10 V DC (selectable using software)
<b>Output type:</b>	Active (AD5412)
<b>Accuracy:</b>	$\leq \pm 1\%$ of full flow
<b>Temperature drift:</b>	$\leq \pm 0.1\% / 10^\circ\text{K}$
<b>Load resistor:</b>	$\leq 750\text{ k}\Omega$
<b>Resolution:</b>	10 bit
<b>Overload proof:</b>	Yes (up to $\pm 24\text{ V DC}$ )
<b>Short-circuit proof:</b>	Yes

**5.7.4 Digital output signals****5.7.4.1 Switching outputs 1 and 2**

<b>Design:</b>	2x make contact, potential-free
<b>Switching voltage:</b>	max. 48 V DC / 48 V AC
<b>Switch rating:</b>	max. 60 W / 2A
<b>Switch points:</b>	Adjustable 0 - 100 %

**5.7.4.2 Switching output 3**

<b>Function:</b>	Signal fault
<b>Type of contact:</b>	Push-Pull
<b>Switching voltage:</b>	Supply voltage
<b>Switching current:</b>	$\leq 0.1\text{ A}$
<b>Drop voltage:</b>	Max. 2.5 V DC at 0.1 A
<b>Overload proof:</b>	Yes (up to $\pm 24\text{ V DC}$ )
<b>Short-circuit proof:</b>	Yes
<b>Pull-Down resistance:</b>	120 k $\Omega$

**5.7.5 Communication eSy-Web**

<b>Interface:</b>	Ethernet
<b>Function:</b>	Parameterisation via web browser
<b>IP address:</b>	192.168.2.1 alterable via web browser
<b>Subnet screen:</b>	255.255.252.0 alterable via web browser

The actuator and the PC must be in the same network to use the web server. The IP address of the actuator is entered in the web browser and the actuator can then be parametrised. In order to use more than one actuator, a definitive IP address must be assigned to each actuator in the same network.

**5.7.6 Communication Modus TCP**

<b>Interface:</b>	Modbus TCP
<b>IP address:</b>	192.168.2.1 alterable via web browser
<b>Subnet screen:</b>	255.255.252.0 alterable via web browser
<b>Port:</b>	502

**Supported function codes:**

Code Dezimal	Code Hex	Function
3	0x03	Read Holding Registers
4	0x04	Read Input Registers
6	0x06	Write Single Register
16	0x10	Write Multiple Registers
23	0x17	Read / Write Multiple Registers

**5.7.7 Behaviour in the event of an error**

<b>Function:</b>	In the event of an error the valve moves to the error position. Notes: Moving to the error position is only possible with full power supply. This behaviour is not a safety position. The valve must be operated with a GEMÜ 1571 emergency power supply module (see accessories) to ensure the function in case of voltage loss.
<b>Error position:</b>	Closed, open or hold (adjustable via eSy-web web interface).

## 6 Electrical connection

### NOTICE

**Appropriate cable socket / appropriate mating connector!**

- ▶ The appropriate cable socket and/or appropriate mating connector is included for X1, X3 and X4.
- ▶ The appropriate cable socket and/or appropriate mating connector is **not** included for X2.

### NOTICE

**Damage to unused plugs due to penetration of humidity!**

- ▶ Unused plugs must be covered with the protective caps supplied with the product to ensure IP protection.

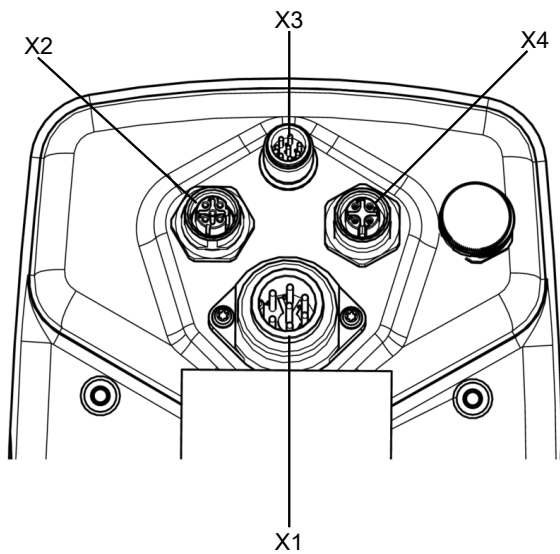
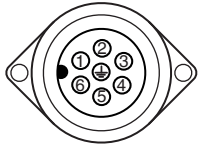


Fig. 4: Overview of electrical connections

**6.1 Connection X1**


7-pin plug, Binder, type 693

Pin	Signal name
Pin 1	Uv, 24 V DC supply voltage
Pin 2	Uv GND
Pin 3	Relay output K1, common
Pin 4	Relay output K1, make contact
Pin 5	Relay output K2, common
Pin 6	Relay output K2, make contact
Pin PE	Function earth

**6.2 Connection X2**


5-pin M12 built-in socket, D-coded

Pin	Signal name
Pin 1	Tx + (Ethernet)
Pin 2	Rx + (Ethernet)
Pin 3	Tx - (Ethernet)
Pin 4	Rx - (Ethernet)
Pin 5	Shield

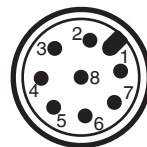**6.3 Connection X3**

8-pin M12 plug, A-coded

Pin	Signal name
Pin 1	W+ set value input
Pin 2	W – set value input
Pin 3	X + actual value output
Pin 4	GND (actual value output, digital input 1 – 3, error message output)
Pin 5	Error message output 24 V DC
Pin 6	Digital input 3
Pin 7	Digital input 1
Pin 8	Digital input 2

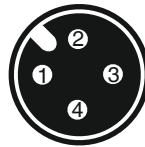**6.4 Connection X4**



4-pin M12 built-in socket, A-coded

Pin	Signal name
Pin 1	UV, 24 V DC actual value supply
Pin 2	n.c.
Pin 3	GND (actual value supply, actual value input)
Pin 4	X+, process actual value input
Pin 5	n.c.

**6.5 Connecting the valve electrically**


1. Protect the electrical connections from direct contact with rain water.
2. Lay the cables and pipework so that neither condensate nor rain water can get into the plug unions.
3. Check that all plug cable glands and fittings are mechanically secured.  
⇒ The cable must be held firmly on all sides.
4. Check whether the actuator cover/manual override is closed and undamaged.
5. Correctly close the actuator cover/manual override again immediately after use (see "Manual override", page 29).
6. Correctly close the product again after replacing the diaphragm.

## 6.6 Connection diagram

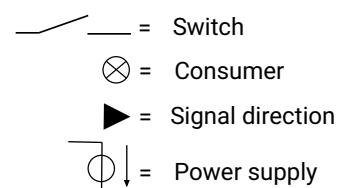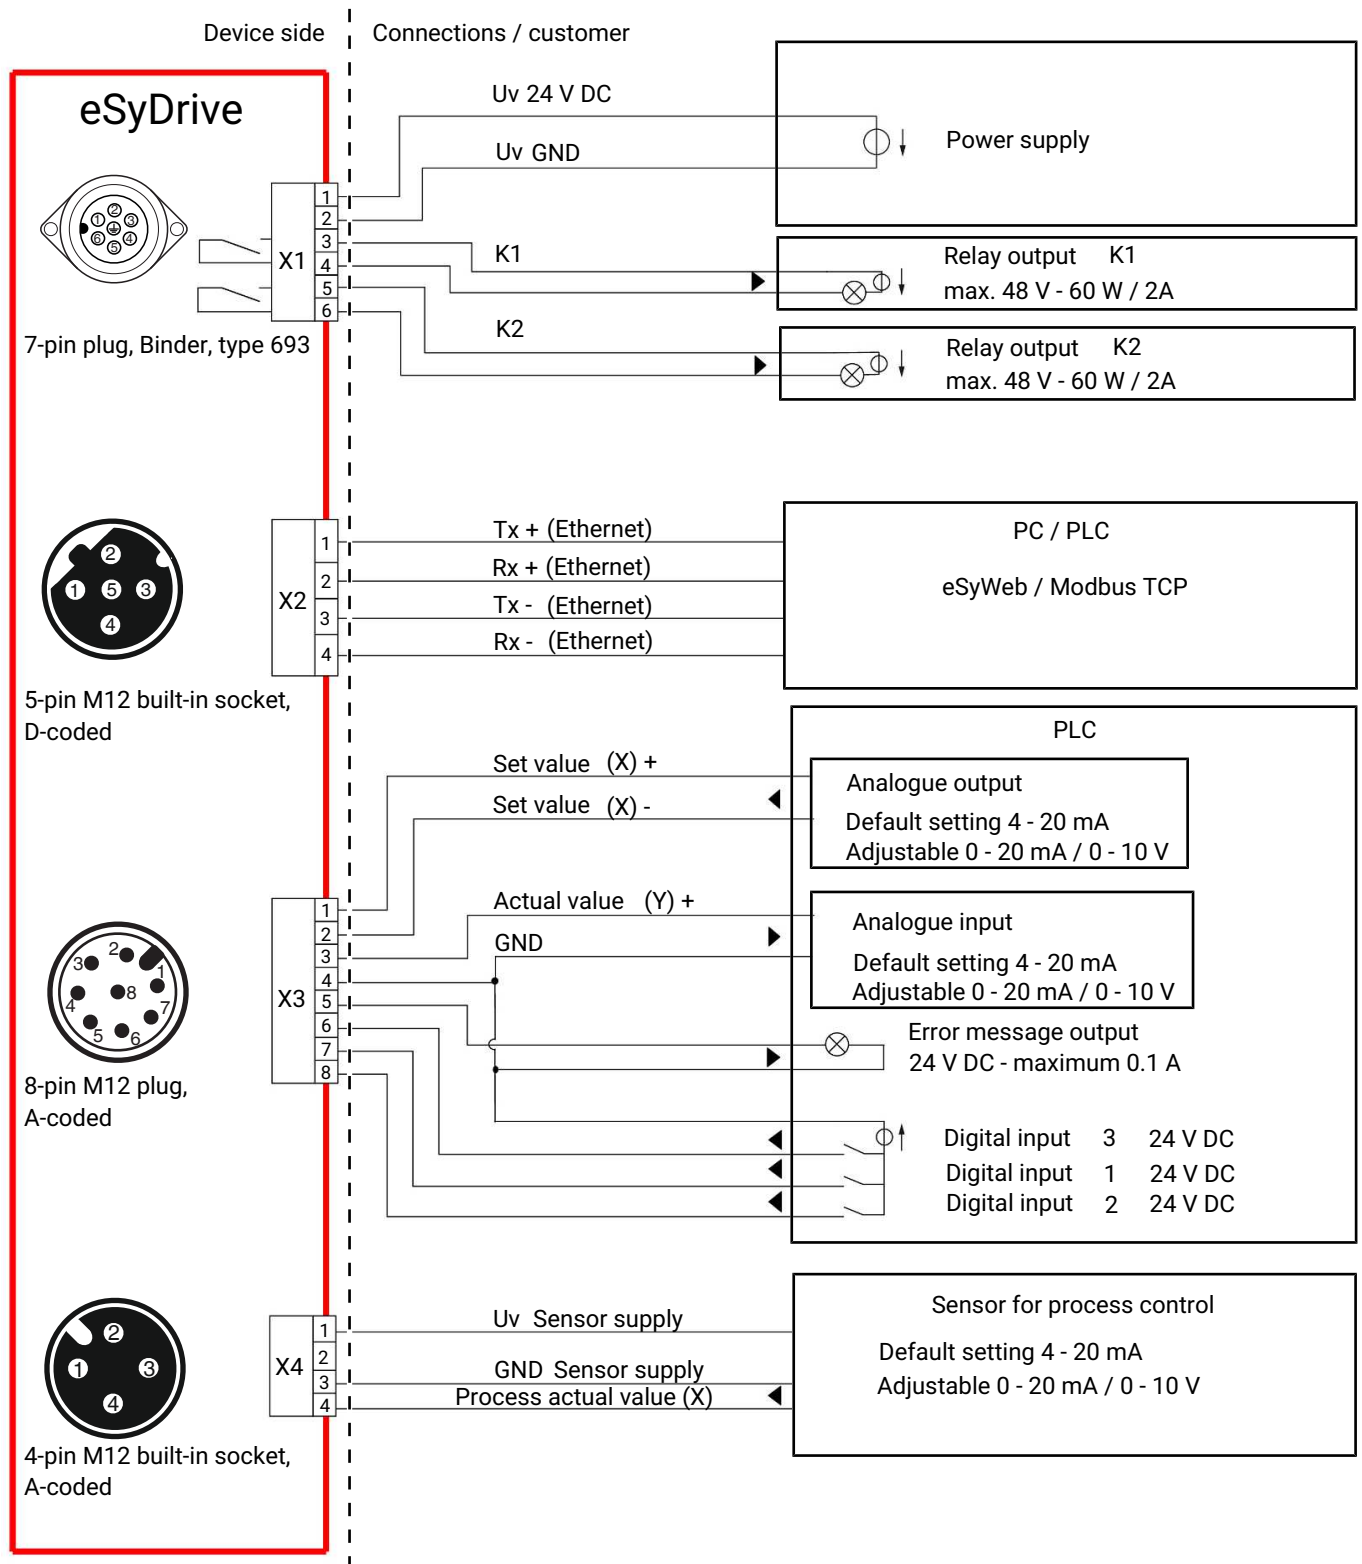

## 7 Dimensions


### 7.1 Installation dimensions

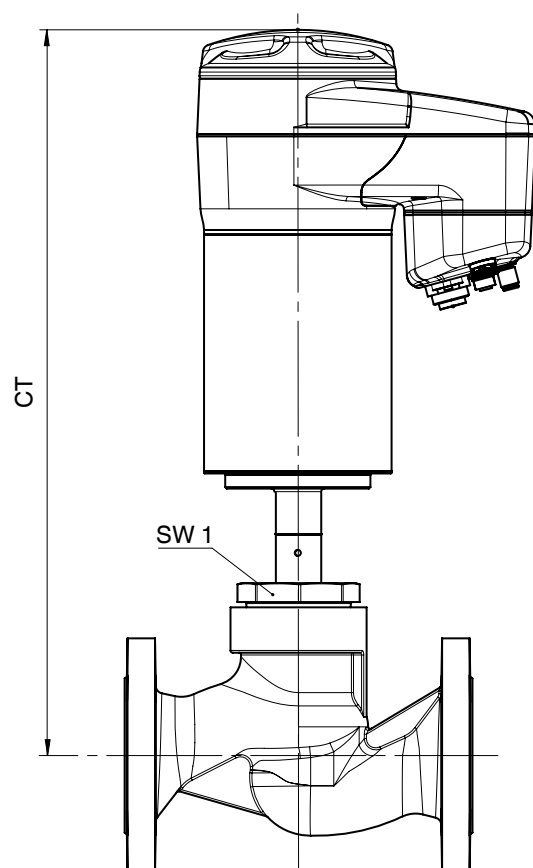

DN	SW1	Actuator version 0A	Actuator version 1A	Actuator version 2A
		CT	CT	CT
15	36	311.0	-	-
20	41	318.0	375.0	-
25	46	328.0	386.0	-
32	55	-	391.0	-
40	60	-	402.0	471.0
50	55	-	410.0	479.0
65	75	-	433.0	502.0
80	75	-	-	522.0
100	75	-	-	543.0

Dimensions in mm

# 7.2 Actuator dimensions

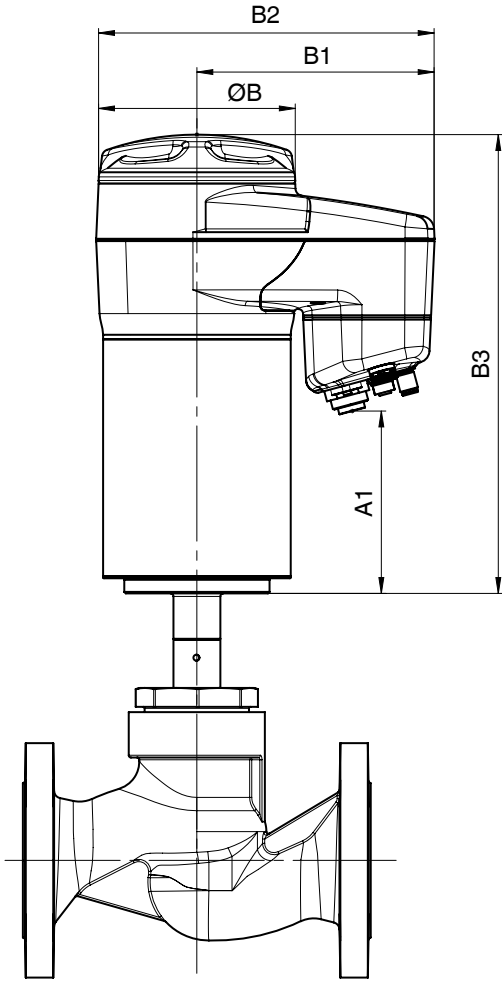


Actuator version	A1	B	B1	B2	B3
0A	45.0	68.0	126.0	160.0	193.0
1A	86.0	82.0	132.0	172.0	252.0
2A	121.0	129.0	157.0	224.0	304.0


Dimensions in mm

### 7.3 Body dimensions

#### 7.3.1 Flange EN (code 8)

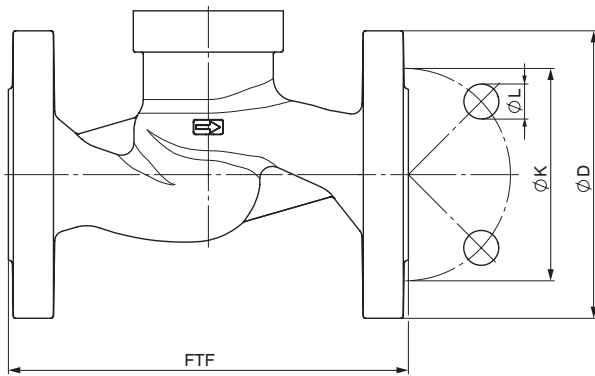

DN 15 - 50

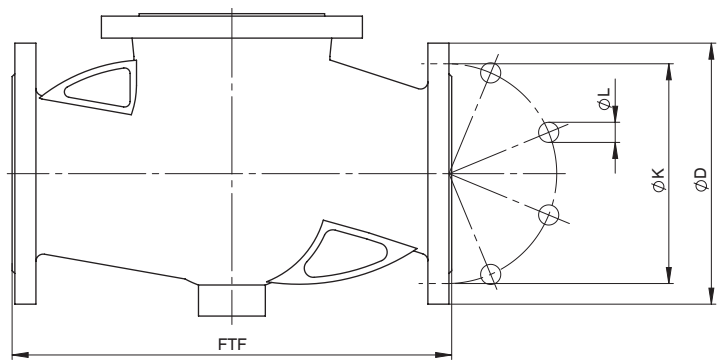

DN 65 - 150

Connection type flange, length EN 558 (code 8)<sup>1)</sup>, SG iron material (code 90)<sup>2)</sup>

DN	NPS	ø D	FTF	ø K	ø L	n
15	1/2"	95.0	130.0	65.0	14.0	4
20	3/4"	105.0	150.0	75.0	14.0	4
25	1"	115.0	160.0	85.0	14.0	4
32	1¼"	140.0	180.0	100.0	18.0	4
40	1½"	150.0	200.0	110.0	18.0	4
50	2"	165.0	230.0	125.0	18.0	4
65	2½"	185.0	290.0	145.0	18.0	4
80	3"	200.0	310.0	160.0	18.0	8
100	4"	220.0	350.0	180.0	18.0	8

Connection type flange, length EN 558 (code 8)<sup>1)</sup>, investment casting material (code 37)<sup>2)</sup>

DN	NPS	ø D	FTF	ø K	ø L	n
50	2"	165.0	230.0	125.0	18.0	4
65	2½"	185.0	290.0	145.0	18.0	4
80	3"	200.0	310.0	160.0	18.0	8
100	4"	220.0	350.0	180.0	18.0	8

Dimensions in mm

n = number of bolts

#### 1) Connection type

Code 8: Flange EN 1092, PN 16, form B, face-to-face dimension FTF EN 558 series 1, ISO 5752, basic series 1


#### 2) Valve body material

Code 37: 1.4408, investment casting


Code 90: EN-GJS-400-18-LT (GGG 40.3)



### 7.3.2 Flange EN (code 10, 11, 48)

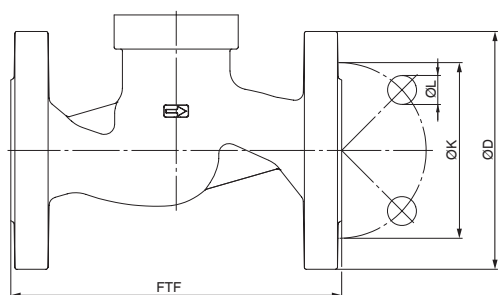

DN 15 - 50

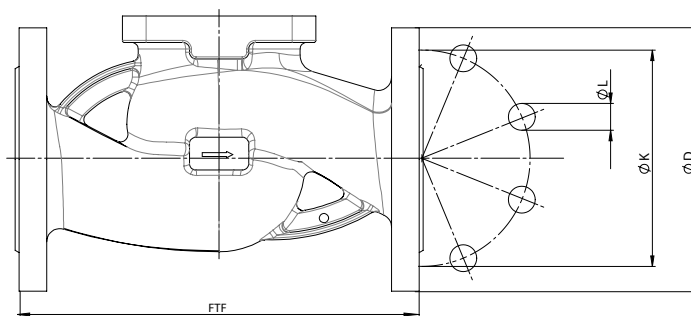

DN 65 - 100

#### Connection type flange, length EN 558 (code 10)<sup>1)</sup>, investment casting material (code 37)<sup>2)</sup>

DN	NPS	ø D	FTF	ø k	ø L	n
32	1¼"	140.0	180.0	100.0	18.0	4
40	1½"	150.0	200.0	110.0	18.0	4

#### Connection type flange, length EN 558 (code 11)<sup>1)</sup>, investment casting material (code 37)<sup>2)</sup>

DN	NPS	ø D	FTF	ø K	ø L	n
15	1/2"	95.0	130.0	65.0	14.0	4
20	3/4"	105.0	150.0	75.0	14.0	4
25	1"	115.0	160.0	85.0	14.0	4
32	1¼"	140.0	180.0	100.0	18.0	4
40	1½"	150.0	200.0	110.0	18.0	4
50	2"	165.0	230.0	125.0	18.0	4
65	2½"	185.0	290.0	145.0	18.0	8
80	3"	200.0	310.0	160.0	18.0	8
100	4"	235.0	350.0	190.0	22.0	8

#### Connection type flange, length EN 558 (code 48)<sup>1)</sup>, investment casting material (code 37)<sup>2)</sup>

DN	NPS	ø D	FTF	ø K	ø L	n
15	1/2"	95.0	108.0	70.0	15.0	4
20	3/4"	100.0	117.0	75.0	15.0	4
25	1"	125.0	127.0	90.0	19.0	4
40	1½"	140.0	16.0	105.0	19.0	4
50	2"	155.0	203.0	120.0	19.0	4

Dimensions in mm

n = number of bolts

#### 1) Connection type



Code 10: Flange EN 1092, PN 25, form B, face-to-face dimension FTF EN 558 series 1, ISO 5752, basic series 1

Code 11: Flange EN 1092, PN 40, form B, face-to-face dimension FTF EN 558 series 1, ISO 5752, basic series 1

Code 48: Flange JIS 20K, face-to-face dimension FTF EN 558 series 10, ASME/ANSI B16.10 table 1, column 16, DN 50 drilled to JIS 10K

#### 2) Valve body material

Code 37: 1.4408, investment casting

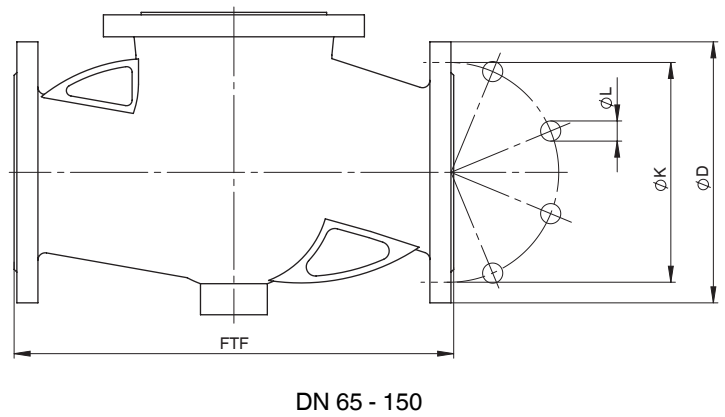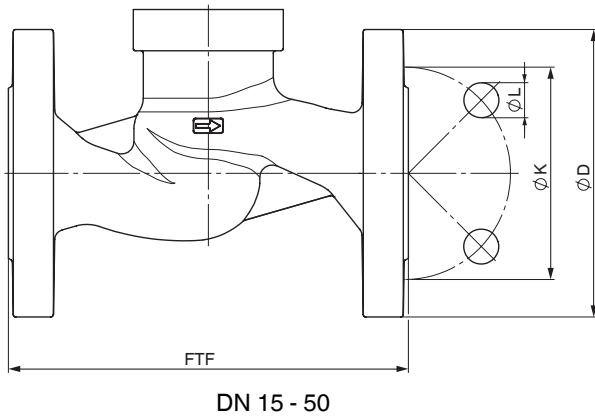**7.3.3 Flange ANSI Class (code 39)**

Connection type flange, length EN 558 (code 39)<sup>1)</sup>, investment casting material (code 37), SG iron material (code 90)<sup>2)</sup>

DN	NPS	ø D	FTF	ø K	ø L	n
15	1/2"	90.0	130.0	60.3	15.9	4
20	3/4"	100.0	150.0	69.9	15.9	4
25	1"	110.0	160.0	79.4	15.9	4
32	1¼"	115.0	180.0	88.9	15.9	4
40	1½"	125.0	200.0	98.4	15.9	4
50	2"	150.0	230.0	120.7	19.0	4
65	2½"	180.0	290.0	139.7	19.0	4
80	3"	190.0	310.0	152.4	19.0	4
100	4"	230.0	350.0	190.5	19.0	8

Dimensions in mm

n = number of bolts

**1) Connection type**

Code 39: Flange ANSI Class 125/150 RF, face-to-face dimension FTF EN 558 series 1, ISO 5752, basic series 1, length only for body configuration D

**2) Valve body material**

Code 37: 1.4408, investment casting

Code 90: EN-GJS-400-18-LT (GGG 40.3)

## 8 Delivery

- Check that all parts are present and check for any damage immediately upon receipt.

The product's performance is tested at the factory. The scope of delivery is apparent from the dispatch documents and the design from the order number.

## 9 Transport

1. Only transport the product by suitable means. Do not drop. Handle carefully.
2. After the installation dispose of transport packaging material according to relevant local or national disposal regulations / environmental protection laws.

## 10 Storage

1. Store the product free from dust and moisture in its original packaging.
2. Avoid UV rays and direct sunlight.
3. Do not exceed the maximum storage temperature (see chapter "Technical data").
4. Do not store solvents, chemicals, acids, fuels or similar fluids in the same room as GEMÜ products and their spare parts.

## 11 Installation in piping

### 11.1 Preparing for installation

#### WARNING

##### The equipment is subject to pressure!

- Risk of severe injury or death
- Depressurize the plant.
- Completely drain the plant.

#### WARNING



##### Corrosive chemicals!

- Risk of caustic burns
- Wear appropriate protective gear.
- Completely drain the plant.

#### CAUTION



##### Hot plant components!

- Risk of burns
- Only work on plant that has cooled down.

#### CAUTION

##### Exceeding the maximum permissible pressure!

- Damage to the product
- Provide precautionary measures against exceeding the maximum permitted pressures caused by pressure surges (water hammer).

#### CAUTION

##### Use as step.

- Damage to the product
- Risk of slipping-off
- Choose the installation location so that the product cannot be used as a foothold.
- Do not use the product as a step or a foothold.

#### NOTICE

##### Suitability of the product!

- The product must be appropriate for the piping system operating conditions (medium, medium concentration, temperature and pressure) and the prevailing ambient conditions.

**NOTICE****Tools**

- The tools required for installation and assembly are not included in the scope of delivery.
  - Use appropriate, functional and safe tools.
1. Ensure the product is suitable for the relevant application.
  2. Check the technical data of the product and the materials.
  3. Keep appropriate tools ready.
  4. Wear appropriate protective gear, as specified in the plant operator's guidelines.
  5. Observe appropriate regulations for connections.
  6. Have installation work carried out by trained personnel.
  7. Shut off plant or plant component.
  8. Secure plant or plant component against recommissioning.
  9. Depressurize the plant or plant component.
  10. Completely drain the plant (or plant component) and let it cool down until the temperature is below the media vaporization temperature and cannot cause scalding.
  11. Correctly decontaminate, rinse and ventilate the plant or plant component.
  12. Lay piping so that the product is protected against transverse and bending forces, and also from vibrations and tension.
  13. Only install the product between matching aligned pipes (see chapters below).
  14. Please note the flow direction.
  15. Please note the installation position (see chapter "Installation position").

**11.2 Installation position**

GEMÜ recommend installing the actuator vertically upright or vertically down to optimise the service life.

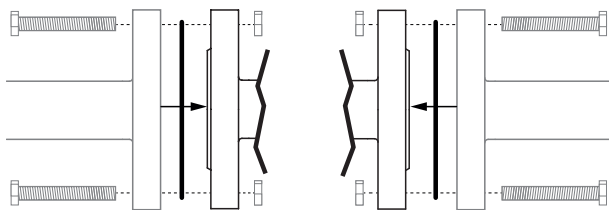
**11.3 Installation with flanged connection**

Fig. 5: Flanged connection


**NOTICE****Sealing material**

- The sealing material is not included in the scope of delivery.
- Only use appropriate sealing material.

**NOTICE****Connector elements**

- The connector elements are not included in the scope of delivery.
- Only use connector elements made of approved materials.
- Observe permissible tightening torque of the bolts.

1. Keep sealing material ready.
2. Carry out preparations for installation (see chapter "Preparing for installation").
3. Ensure clean, undamaged sealing surfaces on the connection flanges.
4. Align flanges carefully before installing them.
5. Clamp the product centrally between the piping with flanges.
6. Centre the gaskets.
7. Connect the valve flange and the piping flange using appropriate sealing materials and matching bolting.
8. Use all flange holes.
9. Tighten the bolts diagonally.



10. Re-attach or reactivate all safety and protective devices.

**12 Network connection****12.1 Network settings**

The network interface has the following default settings:

IP address: 192.168.2.1

Subnet screen: 255.255.252.0

The default settings can be changed. See the eSy-Web operating instructions.

**12.2 Connecting the network**

1. Connect the network plug and cables with the electrical connection X2 of the product.
2. Change the IP address using the web server.

**12.3 Resetting the network settings**

1. Ensure that the "ON-Site" DIP switch **8** is not in the "ON" position.
2. Press and hold down the "OPEN" button **9** for at least 8 s.  
⇒ LED 1 flashes fast in blue.
3. Press the "INIT/CLOSE" button **10**.  
⇒ Network settings are reset in the default settings.

## 13 Commissioning

### 13.1 Commissioning on the device

1. Ensure that the "ON-Site" DIP switch 8 is not in the "ON" position (see "Buttons for on-site control", page 6).
2. Press and hold down the "INIT/CLOSE" button 10 for at least 8 s.
  - ⇒ Initialization of the actuator begins.
3. Green and orange LEDs flash alternately.
  - ⇒ Initialization is completed.
- ⇒ Commissioning is completed.

### 13.2 Commissioning via the eSy-Web web interface

- See separate eSy-Web operating instructions.

### 13.3 Commissioning via digital input

- ✓ The function of input 3 is set to init.
1. Apply 24 V DC signal briefly (max. 2 s) to connection X3 pin 6 (reference GND connection X3 pin 4).
    - ⇒ Initialization of the actuator begins.
  2. Green and orange LEDs flash alternately.
    - ⇒ Initialization is completed.
  - ⇒ Commissioning is completed.

## 14 Operation

### 14.1 Operation on the device

#### 14.1.1 Moving the valve to the open position

1. Move the "ON-Site" DIP switch 8 to the "ON" position (see "Buttons for on-site control", page 6).
  - ⇒ Control on the device is activated.
2. Press the "OPEN" button 9.
  - ⇒ The valve moves slowly to the open position.
3. Also press the "INIT/CLOSE" button 10.
  - ⇒ The valve moves quickly to the open position.
  - ⇒ If the valve is fully opened, the high visibility LEDs are lit in green.
4. Move the "ON-Site" DIP switch 8 to the "OFF" position.
  - ⇒ Control on the device is deactivated.
- ⇒ The valve is in the open position.

#### 14.1.2 Moving the valve to the closed position

1. Move the "ON-Site" DIP switch 8 to the "ON" position.
  - ⇒ Control on the device is activated.
2. Press the "INIT/CLOSE" button 10.
  - ⇒ The valve moves slowly to the closed position.
3. Also press the "OPEN" button 9.
  - ⇒ The valve moves quickly to the closed position.

⇒ If the valve is fully closed, the high visibility LEDs are lit in orange.

4. Move the "ON-Site" DIP switch 8 to the "OFF" position.


⇒ Control on the device is deactivated.

⇒ The valve is in the closed position.


### 14.2 Operation via the web server

See separate "eSy-Web" operating instructions.


### 14.3 Manual override

⚠ WARNING	
	<b>Rotating cover!</b> <ul style="list-style-type: none"> <li>► Risk of crushing.</li> <li>● Disconnect the power supply before using the manual override.</li> </ul>


1. Disconnect the power supply.
2. Turn housing cover 3 clockwise.
3. Remove housing cover 3.

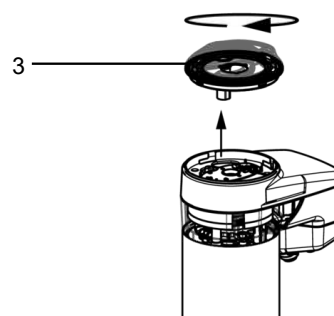

4. Place the actuator of housing cover 12 in the starting point for manual override.

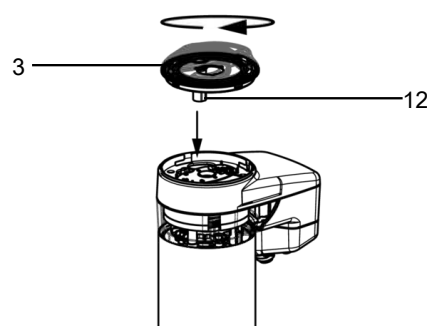

Item	Name
3	Housing cover
12	Housing cover actuator

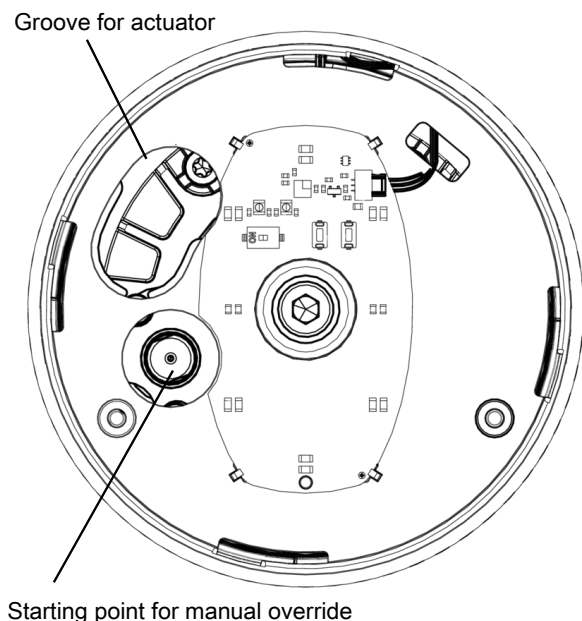

5. Turn housing cover **3** anticlockwise.  
⇒ The product opens.
6. Turn housing cover **3** clockwise.  
⇒ The product closes.
7. Pull manual override off the starting point.
8. Ensure correct positioning of the O-ring.
9. Push actuator **12** into the groove provided for this purpose.
10. Turn housing cover **3** anticlockwise until it stops.  
⇒ The actuator cover is closed.
11. Reconnect the power supply.

## 15 Inspection and maintenance

### ⚠ WARNING

#### The equipment is subject to pressure!

- Risk of severe injury or death
- Depressurize the plant.
- Completely drain the plant.

### ⚠ CAUTION

#### Use of incorrect spare parts!

- Damage to the GEMÜ product
- Manufacturer liability and guarantee will be void
- Use only genuine parts from GEMÜ.

### ⚠ CAUTION



#### Hot plant components!

- Risk of burns
- Only work on plant that has cooled down.

## NOTICE

### Exceptional maintenance work!

- Damage to the GEMÜ product
- Any maintenance work and repairs not described in these operating instructions must not be performed without consulting the manufacturer first.

The operator must carry out regular visual examination of the GEMÜ products dependent on the operating conditions and the potential danger in order to prevent leakage and damage.

The product also must be disassembled and checked for wear in the corresponding intervals.

1. Have servicing and maintenance work performed by trained personnel.
2. Wear appropriate protective gear as specified in plant operator's guidelines.
3. Shut off plant or plant component.
4. Secure the plant or plant component against recommissioning.
5. Depressurize the plant or plant component.
6. Actuate GEMÜ products which are always in the same position four times a year.

## 15.1 Spare parts

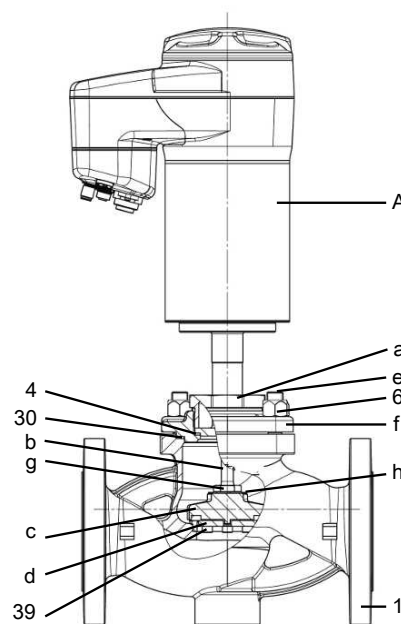


Fig. 6: Spare parts

Item	Name	Order description
1	Valve body	K536...
4	Sealing washer	539...SVS...
6	Hexagon nut	
14	Seat seal	
30	Sealing washer	
39	Cylindrical screw	
A	Actuator	9539...
a	Union nut	-

Item	Name	Order description
b	Spindle	-
c	Valve plug	-
d	Retaining washer	-
e	Stud bolt	-
f	Seat flange	-
g	Union nut	-
h	Locking plate	-

## 15.2 Removing the actuator

### 15.2.1 Removing actuator DN 15 - DN 50

1. Move the actuator **A** to the open position.
2. Undo union nut **a**.
3. Lift actuator **A** off valve body **1**.
4. Move the actuator **A** to the closed position.
5. Clean all parts of contamination (do not damage parts during cleaning).
6. Check parts for potential damage, replace if necessary (only use genuine parts from GEMÜ).

### 15.2.2 Removing actuator DN 65 - DN 100

1. Move the actuator **A** to the open position.
2. Loosen fastening elements between the actuator flange and the valve body flange diagonally and remove them.
3. Lift off actuator **A** and seat flange **f** from valve body **1**.
4. Remove sealing washer **30**.
5. Clean all parts of contamination (do not damage parts during cleaning).
6. Check parts for potential damage, replace if necessary (only use genuine parts from GEMÜ).


## 15.3 Replacing the seals

### 15.3.1 Replacing the seals DN 15 - DN 50


1. Remove the actuator.
  2. Remove sealing washer **4** from the valve body.
  3. Loosen nut **e** on spindle **b** (hold spindle **b** with appropriate tool that will not damage the spindle surfaces).
  4. Clean all parts of contamination (do not damage parts during cleaning).
  5. Insert new seat seal **14**.
  6. Remove retaining washer **d**.
  7. Apply appropriate thread locking compound on the thread of spindle **b**.
  8. Fix spindle **b** in place with nut **e** (hold spindle **b** in place with appropriate tools which do not damage the spindle surfaces).
  9. Insert new sealing washer **4** in valve body **1**.
- Mount the actuator.

### 15.3.2 Replacing the seals DN 65 - DN 100

1. Remove the actuator.
2. Bend the locking plate **h** 90°, so that it lies flat on the valve plug **c**.

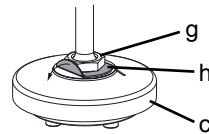

3. Unscrew the entire valve plug **c** from the union nut **g**.
4. Loosen cylindrical screws **39** from valve plug **c**.
5. Remove retaining washer **d**.
6. Remove seat seal **14**.
7. Unscrew seat flange **f** from the union nut.
8. Remove sealing washer **4** from the valve body.
9. Clean all parts of contamination (do not damage parts during cleaning).
10. Insert new sealing washer **4** in seat flange **f**.
11. Screw the seat flange **f** into the union nut **a** and tighten it until it is hand tight.
12. Screw union nut **a** tight with an appropriate open-end wrench.
13. Insert new seat seal **14**.
14. Insert retaining washer **d** and use cylindrical screws **39** to fix it in place.
15. Place the locking plate **h** on the valve plug **c**.
16. Screw the entire valve plug **c** onto the union nut **g**.
17. Bend the locking plate **h** by 90°, so that it lies flat on the union nut **g**.

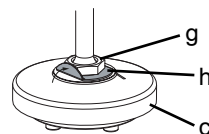

⇒ The union nut **g** is secured against twisting.

18. Mount the actuator.

## 15.4 Mounting the actuator

### NOTICE

#### Important:


- Clean all parts of contamination (do not damage the parts during cleaning) following removal. Check parts for potential damage; replace if necessary (only use genuine parts from GEMÜ).

### CAUTION



#### Incorrect combination of actuator and valve body!

- Risk of damage to the actuator and valve body.
- For control valves with a reduced valve seat, make sure that the combination of actuator and valve body is correct.
- Compare the product label of the actuator with the valve body marking.

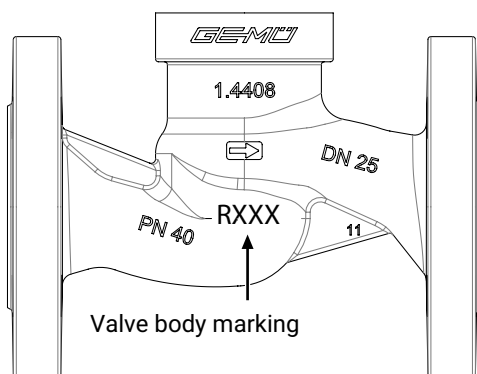

Actuator product label	Valve body marking
RAxxx	R002
RBxxx	R004
RCxxx	R006
RDxxx	R008
RExxx	R010
RFxxx	R012
RGxxx	R015
RHxxx	R020
RJxxx	R025
RKxxx	R032
RMxxx	R040

### 15.4.1 Mounting actuator DN 15 - DN 50

1. Move the actuator **A** to the open position.
2. Lubricate the thread of the union nut **a** using a suitable lubricant.
3. Place actuator **A** on valve body **1** approx. 90° in front of the end position (orientation of the connections) and screw hand tight with union nut **a**.
4. Tighten union nut **a** with an open-end wrench (for torques, see table ).
  - ⇒ This rotates the actuator clockwise approx. 90° to the desired position.

Nominal size	Torque
DN 15	90 Nm
DN 20	100 Nm
DN 25	120 Nm
DN 32	120 Nm
DN 40	150 Nm
DN 50	200 Nm

5. Move the actuator **A** to the closed position.
6. With the valve fully assembled, check the function and tightness.

### 15.4.2 Mounting actuator DN 65 - DN 100

1. Move the actuator **A** to the open position.
2. Insert new sealing washer **30** in valve body flange.
3. Place actuator **A** and seat flange **f** on valve body **1**.
4. Tighten the hexagon nuts **6** diagonally.

Nominal size	Torque
DN 65	200 Nm
DN 80	200 Nm
DN 100	200 Nm

5. Move the actuator **A** to the closed position.
6. With the valve fully assembled, check the function and tightness.



## 16 Troubleshooting

Error	Possible cause	Troubleshooting
The product is leaking downstream (does not close or does not close fully)	Operating pressure too high	Operate the product with operating pressure specified in datasheet
	Valve body leaking or damaged	Check valve body for potential damage, replace valve body if necessary
The product does not close or does not close fully	The actuator design is not suitable for the operating conditions	Use an actuator that is designed for the operating conditions
	Foreign matter in the product	Remove and clean the product
	Voltage is not connected	Connect voltage
The product does not open or does not open fully	Actuator defective	Replace the actuator
	Operating pressure too high	Operate the product with operating pressure specified in datasheet
	Foreign matter in the product	Remove and clean the product
	The actuator design is not suitable for the operating conditions	Use an actuator that is designed for the operating conditions
	Voltage is not connected	Connect voltage
	Cable ends incorrectly wired	Wire cable ends correctly
The product is leaking between actuator and valve body	Bolting between valve body and actuator loose	Tighten bolting between valve body and actuator
	Actuator/valve body damaged	Replace actuator/valve body
The product is leaking between actuator flange and valve body	Mounting parts loose	Retighten mounting parts
	Valve body / actuator damaged	Replace valve body/actuator
Valve body of the GEMÜ product is leaking	Valve body of the GEMÜ product is faulty or corroded	Check valve body of the GEMÜ product for potential damage, replace valve body if necessary
Body of the GEMÜ product is leaking	Incorrect installation	Check installation of valve body in piping
Valve body connection to piping leaking	Incorrect installation	Check installation of valve body in piping
LED 1 is not lit	No initialisation	Initialise valve
	Supply voltage too low	Check supply voltage
LED 1 lights up yellow	Set value signal outside of the area	Check set value signal
	Temperature error	Check temperature
LED 1 flashes yellow	Actual value signal outside of the area	Check actual value signal
LED 1 and 2 are flashing yellow and red simultaneously	No calibration	Contact GEMÜ
	Internal error	Contact GEMÜ

### **17 Removal from piping**

1. Remove in reverse order to installation.
2. Unscrew the electrical wiring.
3. Disassemble the product. Observe warning notes and safety information.

### **18 Disposal**

1. Pay attention to adhered residual material and gas diffusion from penetrated media.
2. Dispose of all parts in accordance with the disposal regulations/environmental protection laws.

### **19 Returns**

Legal regulations for the protection of the environment and personnel require that the completed and signed return delivery note is included with the dispatch documents. Returned goods can be processed only when this note is completed. If no return delivery note is included with the product, GEMÜ cannot process credits or repair work but will dispose of the goods at the operator's expense.

1. Clean the product.
2. Request a return delivery note from GEMÜ.
3. Complete the return delivery note.
4. Send the product with a completed return delivery note to GEMÜ.

**20 EU Declaration of Incorporation according to the EC Machinery Directive 2006/42/EC, Annex II B**



## EU Declaration of Incorporation

**according to the EC Machinery Directive 2006/42/EC, Annex II B**

We, the company GEMÜ Gebr. Müller Apparatebau GmbH & Co. KG  
Fritz-Müller-Strasse 6-8  
74653 Ingelfingen-Criesbach, Germany

hereby declare under our sole responsibility that the below-mentioned product complies with the relevant essential health and safety requirements in accordance with Annex I of the above-mentioned Directive.

**Product:** GEMÜ 539  
**Product name:** Motorized globe valve  
**The following essential health and safety requirements of the EC Machinery Directive 2006/42/EC, Annex I have been applied or adhered to:** 1.1.2.; 1.1.3.; 1.1.5.; 1.3.2.; 1.3.4.; 1.3.7.; 1.3.8.; 1.5.1.; 1.5.13.; 1.5.2.; 1.5.4.; 1.5.6.; 1.5.7.; 1.5.8.; 1.6.1.; 1.6.3.; 1.6.5.; 1.7.1.; 1.7.1.1.; 1.7.2.; 1.7.3.; 1.7.4.; 1.7.4.1.; 1.7.4.2.; 1.7.4.3.  
**The following harmonized standards (or parts thereof) have been applied:** EN ISO 12100:2010

We also declare that the specific technical documents have been created in accordance with part B of Annex VII.

The manufacturer undertakes to transmit relevant technical documents on the partly completed machinery to the national authorities in response to a reasoned request. This communication takes place electronically.

This does not affect the industrial property rights.

**The partly completed machinery may be commissioned only if it has been determined, if necessary, that the machinery into which the partly completed machinery is to be installed meets the provisions of the Machinery Directive 2006/42/EC.**

M. Barghoorn  
Head of Global Technics

Ingelfingen, 19/06/2023

GEMÜ Gebr. Müller Apparatebau GmbH & Co. KG  
Fritz-Müller-Straße 6-8 D-74653 Ingelfingen-Criesbach

www.gemu-group.com  
info@gemu.de

**21 EU Declaration of Conformity in accordance with 2014/68/EU (Pressure Equipment Directive)**



---

## EU Declaration of Conformity

***in accordance with 2014/68/EU (Pressure Equipment Directive)***

We, the company  
GEMÜ Gebr. Müller Apparatebau GmbH & Co. KG  
Fritz-Müller-Strasse 6-8  
74653 Ingelfingen-Criesbach, Germany

hereby declare under our sole responsibility that the below-mentioned product complies with the regulations of the above-mentioned Directive.

**Product:** GEMÜ 539  
**Product name:** Motorized globe valve  
**Notified body:** TÜV Rheinland Industrie Service GmbH  
Am Grauen Stein 1  
51105 Cologne, Germany


**ID number of the notified body:** 0035  
**No. of the QA certificate:** 01 202 926/Q-02 0036  
**Conformity assessment procedure:** Module H1  
**The following harmonized standards (or parts thereof) have been applied:** EN 12516-3:2002/AC:2003

**Information for products with a nominal size  $\leq$  DN 25:**

The products are developed and produced according to GEMÜ's in-house process instructions and standards of quality which comply with the requirements of ISO 9001 and ISO 14001. According to Article 4, Paragraph 3 of the Pressure Equipment Directive 2014/68/EU, these products must not be identified by a CE-marking.

**Other applied technical standards / Remarks:**

- AD 2000

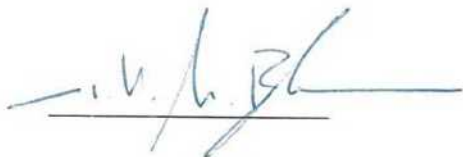

M. Barghoorn  
Head of Global Technics  
Ingelfingen, 19/06/2023

---

GEMÜ Gebr. Müller Apparatebau GmbH & Co. KG  
Fritz-Müller-Straße 6-8 D-74653 Ingelfingen-Criesbach

[www.gemu-group.com](http://www.gemu-group.com)  
[info@gemue.de](mailto:info@gemue.de)

**22 EU Declaration of Conformity in accordance with 2014/30/EU (EMC Directive)**




## **EU Declaration of Conformity**

***in accordance with 2014/30/EU (EMC Directive)***

We, the company  
GEMÜ Gebr. Müller Apparatebau GmbH & Co. KG  
Fritz-Müller-Strasse 6-8  
74653 Ingelfingen-Criesbach, Germany

hereby declare under our sole responsibility that the below-mentioned product complies with the regulations of the above-mentioned Directive.

**Product:** GEMÜ 539  
**Product name:** Motorized globe valve  
**The following harmonized standards (or parts thereof) have been applied:** EN 61800-3:2004/A1:2012; EN 61000-6-2:2005/AC:2005 (valid for all types)  
EN 61326-1:2013; EN 61000-6-4:2007/A1:2011 (only valid for AG1/AG0)

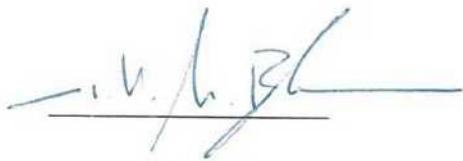

M. Barghoorn  
Head of Global Technics  
Ingelfingen, 19/06/2023

**23 EU Declaration of Conformity In accordance with 2011/65/EU (RoHS Directive)**



---


## **EU Declaration of Conformity**

***In accordance with 2011/65/EU (RoHS Directive)***

We, the company GEMÜ Gebr. Müller Apparatebau GmbH & Co. KG  
Fritz-Müller-Strasse 6-8  
74653 Ingelfingen-Criesbach, Germany

hereby declare under our sole responsibility that the below-mentioned product complies with the regulations of the above-mentioned Directive.

**Product:** GEMÜ 539  
**Product name:** Motorized globe valve  
**The following harmonized standards (or parts thereof) have been applied:** EN IEC 63000:2018

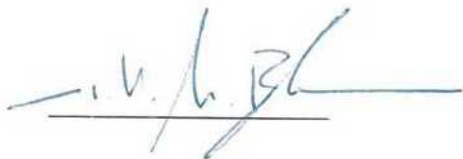

M. Barghoorn  
Head of Global Technics  
Ingelfingen, 19/06/2023



GEMÜ Gebr. Müller Apparatebau GmbH & Co. KG  
Fritz-Müller-Straße 6-8, 74653 Ingelfingen-Criesbach, Germany  
Phone +49 (0) 7940 1230 · [info@gemue.de](mailto:info@gemue.de)  
[www.gemu-group.com](http://www.gemu-group.com)

Subject to alteration

11.2023 | 88614468