

## GEMÜ LSC

Limit switch box for quarter turn actuators

EN **Operating instructions**



further information  
webcode: GW-LSC



All rights including copyrights or industrial property rights are expressly reserved.

Keep the document for future reference.

© GEMÜ Gebr. Müller Apparatebau GmbH & Co. KG  
18.05.2026

## Contents

<b>1 General information</b> .....	<b>4</b>	<b>11 Troubleshooting</b> .....	<b>22</b>
1.1 Information .....	4	<b>12 Inspection and maintenance</b> .....	<b>22</b>
1.2 Symbols used .....	4	<b>13 Disassembly</b> .....	<b>22</b>
1.3 Warning notes .....	4	<b>14 Disposal</b> .....	<b>22</b>
<b>2 Safety information</b> .....	<b>5</b>	<b>15 Returns</b> .....	<b>22</b>
<b>3 Product description</b> .....	<b>5</b>	<b>16 Declaration of conformity according to 2006/42/ EC (Machinery Directive)</b> .....	<b>23</b>
<b>4 Correct use</b> .....	<b>6</b>	<b>17 Declaration of conformity according to 2014/30/ EU (EMC Directive)</b> .....	<b>24</b>
<b>5 Order data</b> .....	<b>7</b>	<b>18 EU Declaration of conformity according to 2014/34/EU (ATEX)</b> .....	<b>25</b>
<b>6 Technical data</b> .....	<b>9</b>		
6.1 Temperature .....	9		
6.2 Product conformities .....	9		
6.3 Mechanical data .....	10		
6.4 Electrical data .....	10		
<b>7 Dimensions</b> .....	<b>13</b>		
<b>8 Manufacturer's information</b> .....	<b>15</b>		
8.1 Delivery .....	15		
8.2 Packaging .....	15		
8.3 Transport .....	15		
8.4 Storage .....	15		
<b>9 Assembly and installation</b> .....	<b>15</b>		
<b>10 Electrical connection</b> .....	<b>17</b>		
10.1 Microswitch .....	17		
10.1.1 SPDT, switch ordering option, code 104, 105 .....	17		
10.1.2 DPDT, switch ordering option, code 108, 109, 111 .....	17		
10.1.3 SPST, switch ordering option, code 110 .....	18		
10.1.4 SPDT, switch ordering option, code 120, 121, 122 .....	18		
10.2 Magnetic reed sensor .....	18		
10.2.1 SPDT-CO, switch ordering option, code R01 .....	18		
10.3 2-wire proximity switch .....	19		
10.3.1 NAMUR, "Switch" ordering option, code 205, 208, 209, 211 .....	19		
10.3.2 Make contact, switch ordering op- tion, code 207 .....	19		
10.3.3 NAMUR, switch ordering option, code 212 .....	19		
10.3.4 Make contact, switch ordering op- tion, code 213 .....	19		
10.3.5 NAMUR with fail safe function, make contact, switch ordering op- tion, code 214 .....	20		
10.3.6 Make contact, AC/DC, switch order- ing option, code 220 .....	20		
10.3.7 Make contact, switch ordering op- tion, code 222 with Harting plug (HM8D) .....	20		
10.4 3-wire proximity switch .....	21		
10.4.1 Make contact, PNP, switch ordering option, code 305 .....	21		
10.4.2 Make contact, PNP, switch ordering option, code 306, 322 .....	21		
10.4.3 Make contact, NPN, switch ordering option, code 320 .....	21		

## 1 General information

### 1.1 Information

- The descriptions and instructions apply to the standard versions. For special versions not described in this document the basic information contained herein applies in combination with any additional special documentation.
- Correct installation, operation, maintenance and repair work ensure faultless operation of the product.
- Should there be any doubts or misunderstandings, the German version is the authoritative document.
- Contact us at the address on the last page for staff training information.

### 1.2 Symbols used

The following symbols are used in this document:

Symbol	Meaning
●	Tasks to be performed
▶	Response(s) to tasks
–	Lists

The following LED symbols are used in the documentation:

Symbol	LED conditions
○	Off
●	Lit (on)
⦿	Flashing

### 1.3 Warning notes



Wherever possible, warning notes are organized according to the following scheme:


SIGNAL WORD	
Possible symbol for the specific danger	Type and source of the danger ▶ Possible consequences in case of non-compliance ● Measures for avoiding danger

Warning notes are always labelled with a signal word and sometimes also with a symbol for the specific danger.




The following signal words and danger levels are used:

 <b>DANGER</b>	
	<b>Imminent danger!</b> ▶ Non-observance can cause death or severe injury
 <b>WARNING</b>	
	<b>Potentially dangerous situation!</b> ▶ Non-observance can cause death or severe injury

 <b>CAUTION</b>	
	<b>Potentially dangerous situation!</b> ▶ Non-observance can cause moderate to light injury

<b>NOTICE</b>	
	<b>Potentially dangerous situation!</b> ▶ Non-observance can cause damage to property

The following symbols for the specific dangers can be used within a warning note:

Symbol	Meaning
	Danger of explosion!
	Risk of crushing!
	Electric shock due to dangerous voltage!

## 2 Safety information

The safety information in this document refers only to an individual product. Potentially dangerous conditions can arise in combination with other plant components, which need to be considered on the basis of a risk analysis. The operator is responsible for the production of the risk analysis and for compliance with the resulting precautionary measures and regional safety regulations.

The document contains fundamental safety information that must be observed during commissioning, operation and maintenance. Non-compliance with these instructions may cause:

- Personal hazard due to electrical, mechanical and chemical effects
- Hazard to nearby equipment
- Failure of important functions
- Hazard to the environment due to the leakage of dangerous materials

The safety information does not take into account:

- Unexpected incidents and events, which may occur during installation, operation and maintenance
- Local safety regulations which must be adhered to by the operator and by any additional installation personnel

### Prior to commissioning:

1. Transport and store the product correctly.
2. Do not paint the bolts and plastic parts of the product.
3. Carry out installation and commissioning using trained personnel.
4. Provide adequate training for installation and operating personnel.
5. Ensure that the contents of the document have been fully understood by the responsible personnel.
6. Define the areas of responsibility.
7. Observe the safety data sheets.
8. Observe the safety regulations for the media used.

### During operation:

9. Keep this document available at the place of use.
10. Observe the safety information.
11. Operate the product in accordance with this document.
12. Operate the product in accordance with the specifications.
13. Maintain the product correctly.
14. Do not carry out any maintenance work and repairs not described in this document without consulting the manufacturer first.

### In cases of uncertainty:

15. Consult the nearest GEMÜ sales office.

## 3 Product description

### 3.1 Construction



Item	Name	Materials
1	Housing cover	PC or Vestamid (ATEX version)
2	Housing base	PA6 or Vestamid (ATEX version)
3	Mounting kit	Code KK = PA6 Code KE, AE = Stainless steel 1.4305
4	Tower optical position indicator (option code 4D)	PC and PA6
	Seals	EPDM, NBR



Item	Name	Materials
1	Housing cover	Aluminium
2	Housing base	Aluminium
3	Mounting kit	Stainless steel 1.4305
	Seals	EPDM, NBR

### 3.2 Description

The GEMÜ LSC limit switch box is suitable for mounting to manually and pneumatically operated quarter turn valves. It is also fitted with an optical position indicator for visual confirmation of position.

### 3.3 Function

Limit switch boxes are used to feed back and verify the position of valves, whether operated manually or with pneumatic quarter turn actuators. Depending on the version, the limit switch box GEMÜ LSC is equipped with 1 to 4 proximity sensors, Reed sensors or microswitches. The shaft of the limit switch box is positively connected to the shaft of the quarter turn actuator and is turned with the rotary movement of the quarter turn actuator. The trip cams fastened to the shaft then actuate the integrated sensors, which are used for electronic signal transmission.

### 3.4 Product label



The serial number can be found under the CE mark. This consists of the year of manufacture and the respective order number.

## 4 Correct use

**DANGER**

**Danger of explosion!**

- ▶ Danger of death or severe injury.
- Only use the product in potentially explosive zones confirmed in the declaration of conformity.

**WARNING**

**Improper use of the product!**

- ▶ Risk of severe injury or death
- ▶ Manufacturer liability and guarantee will be void.
- Only use the product in accordance with the operating conditions specified in the contract documentation and in this document.

The GEMÜ LSC product is suitable for use in non-explosive as well as explosive atmospheres. The permissible ambient temperature is between -20 °C and +80 °C. When using suitable components, use at an ambient temperature as low as -40 °C can also be permitted. Various sensors and microswitches can be installed in the various limit switch boxes made of aluminium, polyamide or polycarbonate. The electrical data varies depending on the switch type.

### 4.1 Product with special function X

The product GEMÜ LSC is intended for use in potentially explosive areas of zones 1 and 2 with gases, mists or vapours and zones 21 and 22 with combustible dusts in accordance with EU directive 2014/34/EU (ATEX).

The product has the following explosion protection marking:

**Switch: Code 110, 205, 208, 209, 212, 214**

Gas:       ⊕ II 2G Ex ia IIC / IIB T6 / T4 Gb  
 Dust:      ⊕ II 2D Ex ia IIIC T80°C / T110°C Db  
 Certificate: IBExU 11 ATEX 1154  
 ate:

For the 31MA or 31MB electrical connection, only pilot valves/solenoid valves with the Ex ia type of ignition protection may be used.

**Switch: Code 120, 121, 122**

Gas:       ⊕ II 2G Ex db eb IIC/IIB T6 Gb  
 Dust:      ⊕ II 2D Ex tb IIIC T80 °C Db  
 Certificate: IBExU 12 ATEX 1022 X  
 ate:

For the 31MA or 31MB electrical connection, only pilot valves/solenoid valves with the Ex d, Ex dm or Ex m types of ignition protection may be used.

**Switch: Code 322**

Dust:      ⊕ II 2D Ex tb IIIC T80°C Db  
             ⊕ II 3D Ex tc IIIC T80°C Dc  
 Certificate: IBExU 12 ATEX 1022 X  
 ate:

For the 31MA or 31MB electrical connection, only pilot valves/solenoid valves with the Ex d, Ex dm or Ex m for Dust-Ex Ex nA types of ignition protection may be used.

To operate ATEX position indicators, observe the chapter on product conformities (see "Product conformities", page 9).

## 5 Order data

The order data provide an overview of standard configurations.

Please check the availability before ordering. Other configurations available on request.

Products ordered with **bold marked ordering options** are so-called preferred series.

### Order codes

1 Type	Code
Limit switch box for quarter turn valves	LSC
2 Switch	Code
Change-over contact, microswitch, 5-250V AC/DC ZF, D41X-SPDT, gold contacts	104
<b>Change-over contact, microswitch, 12-250V AC/DC ZF, D44X-SPDT</b>	<b>105</b>
Change-over contact, microswitch, 24-250 V AC/DC CROUZET, 83161.8-DPDT Gold: 0.1 A (250 V AC), 0.1 A (24V DC) Silver: 10 A (250 V AC), 2.5 A (24V DC)	108
Change-over contact, microswitch, 12-250V AC/DC ZF, D44X-DPDT	109
Change-over contact, microswitch, ATEX ia ZF, D41X-SPST Ui:30VDC/li:15mA/Pi:35mW	110
Change-over contact, microswitch, 5-250V AC/DC ZF, D41X-DPDT, gold contacts	111
Change-over contact, microswitch 24-250V AC/DC, ATEX de,t Bartec, 07-1511-1030	120
Change-over contact, microswitch 24-250V AC/DC, ATEX de,t Bartec, 07-1511-3530	121
Change-over contact, microswitch, 24-250 V AC/DC, ATEX de,t Crouzet, 831391-SPDT	122
<b>Proximity switch, 2-wire, NAMUR, ATEX ia IFM, NS5002</b>	<b>205</b>
Proximity switch, 2-wire, break contact/make contact, PNP/NPN, 5-36VDC IFM, IS5026	207
Proximity switch, 2-wire, NAMUR, ATEX ia P+F, SJ 3.5 N	208
Proximity switch, 2-wire, NAMUR, ATEX ia P+F, NJ2-V3-N	209
Proximity switch, 2-wire, NAMUR, ATEX ia P+F, SJ 3.5 SN	211
Proximity switch, 2-wire, NAMUR, ATEX ia P+F, NJ2-12GK-SN	212
Proximity switch, 2-wire, make contact, 5-60VDC P+F, NBB3-V3-Z4	213
Proximity switch, 2-wire, NAMUR, ATEX ia P+F, NJ3-18GK-S1N	214
Proximity switch, 2-wire, make contact, 20-250V AC Turck, BI2-Q10S-AZ31X	220
Proximity switch, 2-wire, make contact, 3.7-30 V DC P+F, NBB2-V3-Z4L	222
<b>Proximity switch, 3-wire, make contact, PNP, 10-30VDC IFM, IS5001</b>	<b>305</b>

2 Switch	Code
Proximity switch, 3-wire, make contact, PNP, 10-30VDC P+F, NBB2-V3-E2	306
Proximity switch, 3-wire, make contact, NPN, 10-36VDC IFM, IS5003	320
Proximity switch, 3-wire, dual make contact, PNP, 10-30VDC, ATEX tb, tc IFM, IN511A	322
Reed sensor, 3-wire, SPDT-CO (form C), 30 V AC/DC, ZF, MP200703	R01

3 Accessory	Code
Accessory	Z

4 Housing/mounting kit material	Code
<b>Plastic housing Plastic mounting kit</b>	<b>KK</b>
Plastic housing Stainless steel mounting kit	KE
Aluminium housing Stainless steel mounting kit	AE
Plastic housing for manually operated ball valves	KM

5 Electrical connection	Code
M12 plug, 5-pin	1112
M12 plug, 8-pin M20 x 1.5 for 1 solenoid valve connection with 500 mm cable	12MA
<b>M20 x 1.5 cable gland, plastic</b>	<b>3101</b>
M20 x 1.5 cable gland, stainless steel	3107
M20 x 1.5 cable gland, nickel-plated brass	3112
M20 x 1.5 cable gland, plastic M20 x 1.5 for 1 solenoid valve connection with 500 mm cable	31MA
M20 x 1.5 cable gland, plastic M20 x 1.5 for 2 solenoid valve connections with 500 mm cable	31MB
NPT ½ threaded connection	3201
2 x NPT ½ threaded connection	32MN
Hirschmann plug N6RAM	HM6R
Harting plug HS25199 Housing: Han 3A-EG-QB-M20 Pin: Han 7D-STI-C Crimp contact: R 15-STI-C-1 QMM (AU)	HM7D
Harting plug PE-HSM20-8PM Housing: Han 3M-eg-QB-M20 Pin: Han 8D-M Crimp contact: R 15-STI-C-1,5 QMM	HM8D

6 Option	Code
<b>Without</b>	<b>00</b>
3D display with pressure compensating element for outdoor use	3A
3D display	3D
3D display for L-port	3L
Large 3D display	4D
Pressure compensating element for outdoor use	DA

6 Option	Code
Extended ambient temperature -25 °C to +120 °C	HT
LED display for OPEN/CLOSE max. 24VDC	LD
Extended ambient temperature -40 °C.....	NT

7 Approval	Code
SIL 1–3 (IEC 61508:2010)	S

8 Approval	Code
Without	
ATEX (2014/34/EU), IECEx	X

### Order example

Ordering option	Code	Description
1 Type	LSC	Limit switch box for quarter turn valves
2 Switch	105	Change-over contact, microswitch, 12-250V AC/DC ZF, D44X-SPDT
3 Accessory	Z	Accessory
4 Housing/mounting kit material	KK	Plastic housing Plastic mounting kit
5 Electrical connection	3101	M20 x 1.5 cable gland, plastic
6 Option	00	Without
7 SIL	S	SIL 1–3 (IEC 61508:2010)
8 Approval		Without

## 6 Technical data

### 6.1 Temperature

**Ambient temperature:**

Switch (code)	Housing material	
	Polyamide/aluminium	Vestamid/aluminium (ATEX version)
<b>104, 105, 108, 109, 111, R01</b>	-25 – 80 °C	-
<b>207, 213, 220, 222, 305, 306, 320</b>	-25 – 70 °C	-
<b>120, 121, 122, 322</b>	-	Vestamid: -20 – 40 °C Aluminium: -20 – 60 °C
<b>110, 205*, 208, 209, 211, 212, 214</b>	-	-25 – 70 °C

\*Switch (code 205) to -20 °C

**Storage temperature:**

Switch (code)	Housing material	
	Polyamide/aluminium	Vestamid/aluminium (ATEX version)
<b>104, 105, 108, 109, 111, R01</b>	-25 – 80 °C	-
<b>207, 213, 220, 222, 305, 306, 320</b>	-25 – 70 °C	-
<b>120, 121, 122, 322</b>	-	Vestamid: -20 – 40 °C Aluminium: -20 – 60 °C
<b>110, 205*, 208, 209, 211, 212, 214</b>	-	-25 – 70 °C



\*Switch (code 205) to -20 °C

### 6.2 Product conformities

**EMC Directive:** 2014/30/EU



**Explosion protection:** ATEX (2014/34/EU) and IECEx, order code Special version X

**ATEX marking:** **Switch: Code 110, 205, 208, 209, 211, 212, 214**



Gas:  II 2G Ex ia IIC / IIB T6 / T4 Gb  
 Dust:  II 2D Ex ia IIIC T80 °C / T110 °C Db  
 Certificate: IBExU 11 ATEX 1154  
 ate:

For the 31MA or 31MB electrical connection, only pilot valves/solenoid valves with the Ex ia type of ignition protection may be used.

**Switch: Code 120, 121, 122**

Gas:  II 2G Ex db eb IIC/IIB T6 Gb  
 Dust:  II 2D Ex tb IIIC T80 °C Db  
 Certificate: IBExU 12 ATEX 1022 X  
 ate:

**Switch: Code 322**

Dust:  II 2D Ex tb IIIC T80 °C Db  
 II 3D Ex tc IIIC T80 °C Dc  
 Certificate: IBExU 12 ATEX 1022 X  
 ate:

For the 31MA or 31MB electrical connection, only pilot valves/solenoid valves with the Ex d, Ex dm or Ex m for Dust-Ex Ex nA types of ignition protection may be used.

**IECEx marking:****Switch: Code 110, 205, 208, 209, 211, 212, 214**

Gas: Ex ia IIC/IIB T6/T4 Gb  
 Dust: Ex ia IIIC T80°C/T110°C Db  
 Certificate: IECEx IBE 13.0042

For the 31MA or 31MB electrical connection, only pilot valves/solenoid valves with the Ex ia type of ignition protection may be used.

**Switch: Code 120, 121, 122**

Gas: Ex db eb IIC/IIB T6 Gb  
 Dust: Ex tb IIIC T80°C Db  
 Certificate: IECEx IBE 13.0041 X

**Switch: Code 322**

Dust: Ex tb IIIC T80°C Db  
 Ex ts IIIC T80°C Dc  
 Certificate: IECEx IBE 13.0041 X

For the 31MA or 31MB electrical connection, only pilot valves/solenoid valves with the Ex d, Ex dm or Ex m for Dust-Ex Ex nA types of ignition protection may be used.

**FMEDA:**

**Product description:** GEMÜ electrical position indicator LSC  
**Type of valve:** A  
**Fail safe function:** The end position is reported at the right time within the defined limits.  
**HFT (Hardware Fault Tolerance):** 0

Further information and calculated values available on request

**6.3 Mechanical data****Installation position:** Optional**Weight:** 780 g

**Protection class:** IP66, IP67 (code AE)  
 IP67 (code KK, KE, KM)  
 For outdoor use, the LSC must be equipped with the ordering option "Pressure compensating element".

**Measuring range radial:** 0 to 90 °**6.4 Electrical data****Electrical connection type:**

M12 plug, 5-pin (code 1112)  
 M12 plug, 8-pin and solenoid valve connection (code 12MA)  
 M20 x 1.5 cable gland for cables with a diameter of 6 to 12 mm (code 3101)  
 M20 x 1.5 stainless steel cable gland for cables with a diameter of 6–12 mm (code 3107)  
 M20 x 1.5 nickel-plated brass cable gland for cables with a diameter of 6–12 mm (code 3112)  
 M20 x 1.5 cable gland for cables with a diameter of 6 to 12 mm and solenoid valve connection (code 31MA)  
 M20 x 1.5 plastic cable gland and two solenoid valve connections (code 31 MB)  
 NPT ½ threaded connection (code 3201)  
 Two NPT ½ threaded connections (code 32MN)  
 Hirschmann plug N6RAM (code HM6R)

**Electrical connection type:** Harting plug HS25199 with housing Han 3A-EG-QB-M20 and pin Han 7D-STI-C as well as crimp contact R 15-STI-C-1 QMM (AU) (code HM7D)  
 Harting plug PE-HSM20-8PM with housing Han 3M-eg-QB-M20 and pin Han 8D-M as well as crimp contact R 15-STI-C-1,5 QMM (code HM8D)

#### 6.4.1 Microswitch

Switch (code)	Type
104, 105, 120, 121, 122	SPDT
110	SPST
108, 109, 111	DPDT

Switch (code)	Supply voltage
105, 109	12–250 V AC/DC
108, 120, 121, 122*	24–250 V AC/DC
110	30 V DC
104, 111	5–250 V AC/DC

\*Code 122 only up to 240 V AC/DC

Switch (code)	Current consumption
105, 109	250 V AC: 0.1–10 A 24 V DC: 0.1–2.5 A
108	Silver: 250 V AC: 0.1–10 A 24 V DC: 0.1–2.5 A Gold: 250 V AC: 0.01–0.1 A 24 V DC: 0.01–0.1 A
110	15 mA
104, 111	250 V AC: 0.01–0.1 A 24 V DC: 0.01–0.1 A
120	0.1–4 A
121	20–400 mA
122	0.15–4 A

#### 6.4.2 Magnetic reed sensor

Switch (code)	Type
R01	SPDT-CO

Switch (code)	Supply voltage
R01	Max. 30 V AC/DC

Switch (code)	Current consumption
R01	Max. 200 mA

#### 6.4.3 2-wire proximity switch

Switch (code)	Type
205, 208, 209, 211, 212, 214	2-wire NAMUR
207, 213, 220, 222	2-wire, make contact

**Supply voltage:**

Switch (code)	Supply voltage
<b>205, 208, 209, 211, 212, 214</b>	8.2 V DC
<b>207</b>	5–36 V DC
<b>220</b>	20–250 V AC 10–300 V DC
<b>222</b>	3.7–30 V DC

**Current consumption:**

Switch (code)	Current consumption
<b>205</b>	≤ 1 mA (damped) ≤ 2.1 mA (undamped)
<b>208, 209, 211, 212, 214</b>	≤ 1 mA (damped) ≤ 3 mA (undamped)
<b>207</b>	Max. 200 mA
<b>213, 220</b>	Max. 100 mA
<b>222</b>	Max. 30 mA

**6.4.4 3-wire proximity switch****Switch type:**

Switch (code)	Type
<b>305, 306, 322</b>	3-wire, make contact, PNP
<b>320</b>	3-wire, make contact, NPN

**Supply voltage:**


Switch (code)	Supply voltage
<b>305, 306</b>	10 - 30 V DC
<b>320, 322</b>	10 - 36 V DC

**Current consumption:**





Switch (code)	Current consumption
<b>305, 320</b>	Max. 200 mA
<b>306</b>	Max. 100 mA
<b>322</b>	Max. 250 mA

**7 Dimensions**

Housing/mounting kit material (code KK)

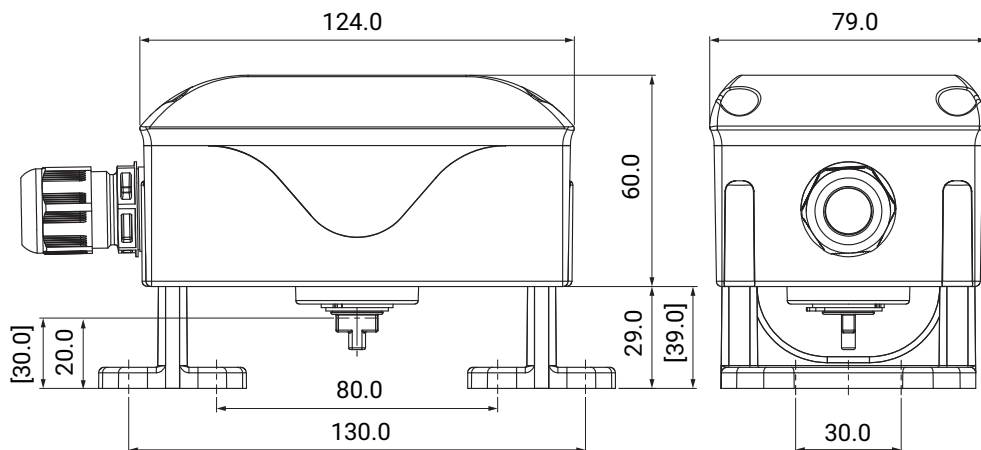

Housing/mounting kit material (code KE, AE)

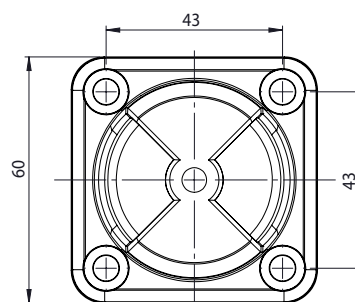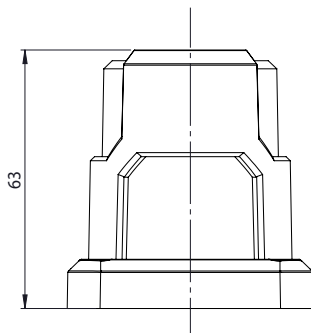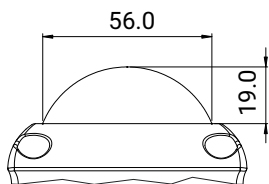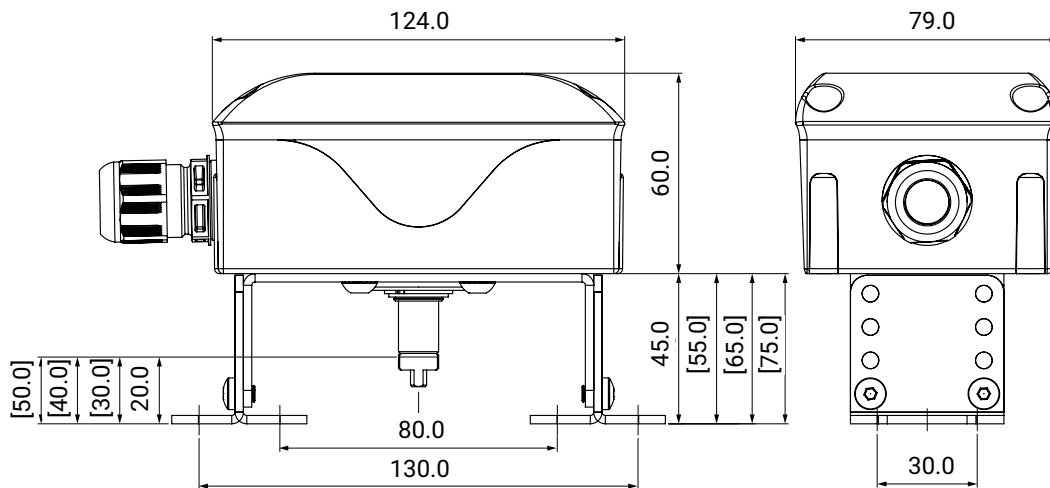

"Option" ordering option, code 3D

"Option" ordering option, code 4D

Dimensions in mm

Various borehole patterns are available for installation on the pneumatic quarter turn actuators:

Borehole pattern	Housing/mounting kit material (code KK)	Housing/mounting kit material (code KE, AE)
80 x 30 x 20	X	X
80 x 30 x 30	X	X
130 x 30 x 30	X	X
130 x 30 x 50	-	X

For installation on manually operated valves, an LSC with material code KM and mounting kit LSFS01 must be entered. The correct selection is made via the GEMÜ accessories configurator.

Dimensions in mm

## 8 Manufacturer's information

### 8.1 Delivery

- Check that all parts are present and check for any damage immediately upon receipt.

The product's performance is tested at the factory. The scope of delivery is apparent from the dispatch documents and the design from the order number.

### 8.2 Packaging

The product is packaged in a cardboard box which can be recycled as paper.

### 8.3 Transport

1. Only transport the product by suitable means. Do not drop. Handle carefully.
2. After the installation dispose of transport packaging material according to relevant local or national disposal regulations / environmental protection laws.

### 8.4 Storage

1. Store the product free from dust and moisture in its original packaging.
2. Avoid UV rays and direct sunlight.
3. Do not exceed the maximum storage temperature (see chapter "Technical data").
4. Do not store solvents, chemicals, acids, fuels or similar fluids in the same room as GEMÜ products and their spare parts.
5. Close the compressed air connections with protection caps or sealing plugs.

## 9 Assembly and installation

### CAUTION

#### Use as step!

- ▶ Damage to the product
- ▶ Risk of slipping-off
- Choose the installation location so that the product cannot be used as a foothold.
- Do not use the product as a step or a foothold.

### 9.1 Installation on manually operated valves

The products with F05 connection in the bottom of the body can also be installed with our mounting kit "LSC S01 Z" on manually operated valves. It is important that the manual valve has a top flange in accordance with ISO 5211 and a thread bolt hole in the shaft.

Install the mounting kit as follows:

1. Assemble the base of the mounting kit on the manual valve.
2. Mount the lock nut supplied with the product on the actuator.
3. Screw the actuator into the central threaded hole of the manual valve.
4. Position the upper section of the mounting kit on the previously assembled base.
  - ⇒ The bolt holes allow a rough height alignment to the valve used. The mounting bracket can be set to the following heights:
    - F03–F07: 60, 70, 80, 90, 100 mm
    - F10–F12: 80, 90, 100, 110, 120 mm
5. Fasten the cover to the base.
  - ⇒ Use the enclosed bolts and perforated washers for this.
6. Assemble the limit switch box on the cover.
7. Adjust the height of the actuator so that the shaft of the limit switch box engages in the actuator.
8. Fix in position with the lock nut.
9. Carry out a visual inspection of the complete subassembly and a functional test of the position feedback.

### 9.2 Installation on pneumatic actuators

#### 9.2.1 Preparations for installation of the actuator


1. Unscrew the bolt from the trigger cam.
2. Pull off the trigger cam.

#### 9.2.2 Installation of the limit switch box

The modules can be mounted quickly and easily on the intended actuator using the supplied fastening fixtures in accordance with VDI/VDE 3845.


1. Place the actuator in the end position in which the groove of the actuator shaft is parallel to the actuator housing.
2. Place the box on the actuator using the appropriate mounting kit.
3. Mount the mounting kit with the supplied locking screws (x4) on the actuator.
4. Loosen the cover screws (x4) and open the housing.
  - ⇒ Do not unscrew the bolts too far; leave them connected to the cover.
5. Guide the disconnected system cable through the cable gland into the housing and connect the wires to the terminal block.
  - ⇒ Observe the wiring diagram on the corresponding data-sheet or in the housing cover and connect the housing to the potential equalisation.
6. Close off the housing with the cover.
  - ⇒ When fitting the cover, make sure that the gasket is in the correct position.
7. Tighten the cover screws.

### 9.3 Adjusting the switch/travel range

<b>⚠ CAUTION</b>	
	<p><b>Risk of crushing!</b></p> <ul style="list-style-type: none"> <li>▶ During change-over, there is a risk of body parts becoming trapped between the sensor and the actuator. If the pre-setting is incorrect, the actuator tabs may damage the sensor.</li> <li>● During change-over, maintain an adequate distance from the hazard risk.</li> <li>● Do not touch the sensor during change-over.</li> </ul>

The actuators are set by GEMÜ to a travel range of 0–90°. If another travel range is required for the application, please follow the following steps:

1. Place the actuator in the desired end position **1** and adjust the lower actuator.

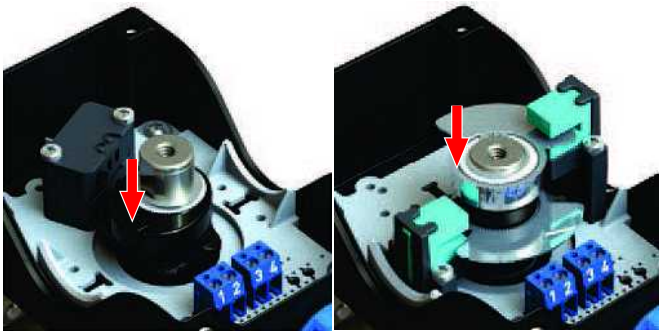

- ⇒ Press down the actuator on the outer ring and turn into the position in which the switch is actuated.
2. Allow the actuator to engage in the teeth above.
  3. Place the actuator in the desired end position **2** and adjust the upper actuator.
    - ⇒ Press down the actuator on the outer ring and turn into the position in which the switch is actuated.
  4. Allow the actuator to engage in the teeth above.
  5. Check the presetting by repeatedly switching the quarter turn actuator.

## 10 Electrical connection

For explosion-proof applications/designs, please observe the information from the "Product conformities" chapter.

### ⚠ DANGER



#### Electric shock due to dangerous voltage!

- ▶ There is a risk of injury or death from electric shock.
- Power supply varies depending on the model.
- When working on the product, disconnect the product from the power supply.
- Work on electrical connections may only be carried out by qualified personnel.

You can find the permissible cable diameter in the associated datasheet for the product. The wiring diagram for the wiring can be found on the housing cover or in the associated datasheet for the product. Each sensor has its own separate intrinsically safe electric circuit.

### NOTICE


#### Incorrect sealing of the product

- ▶ When tightening the cable gland, ensure that the basic body of the cable gland does not also turn.
- ▶ As a result, the gasket may slip and then no longer seals correctly.
- ▶ Use two open-end wrenches – one to secure the basic body and one to tighten the nut.

Terminal	Manufacturer	Wire cross section	Tightening torque	Stripping length	Colour
AK100...	PTR	Single-wire, rigid: 0.2 to 4.0 mm <sup>2</sup>	0.45 to 0.50 Nm	7 mm	light blue
		Fine-wire, flexible: 0.2 to 2.5 mm <sup>2</sup>			
		With multicore cable end: 0.2 to 2.5 mm <sup>2</sup>			


### 10.1 Microswitch

#### 10.1.1 SPDT, switch ordering option, code 104, 105

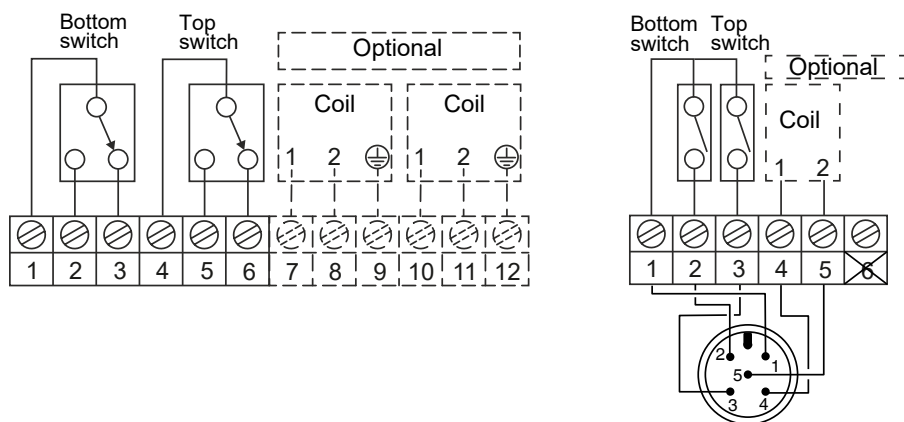


M12 connection options

#### 10.1.2 DPDT, switch ordering option, code 108, 109, 111

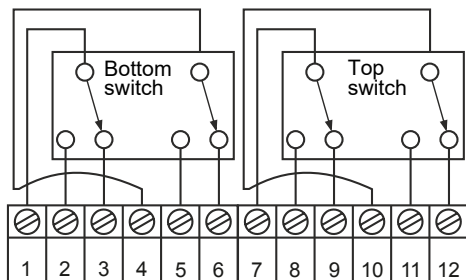


Note: Solenoid valve connection not possible

**10.1.3 SPST, switch ordering option, code 110**

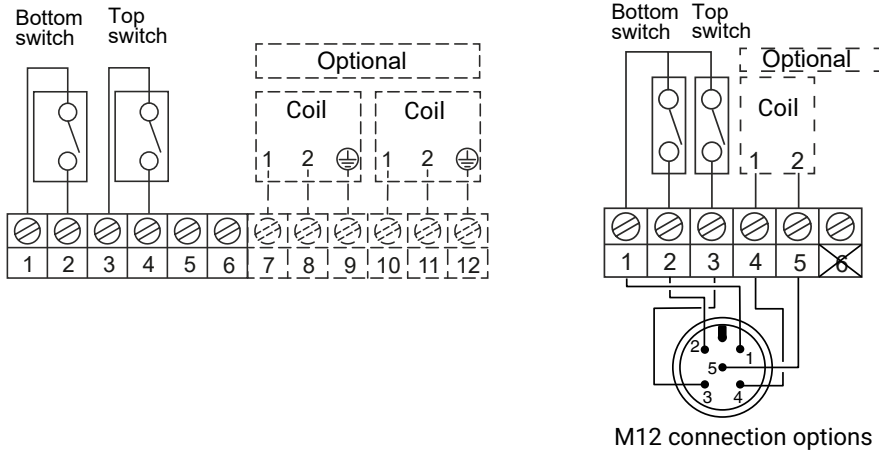


**10.1.4 SPDT, switch ordering option, code 120, 121, 122**

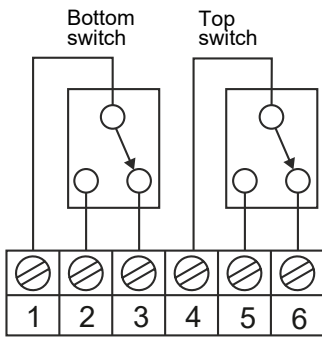

Note: Solenoid valve connection not possible


**10.2 Magnetic reed sensor**

**10.2.1 SPDT-CO, switch ordering option, code R01**

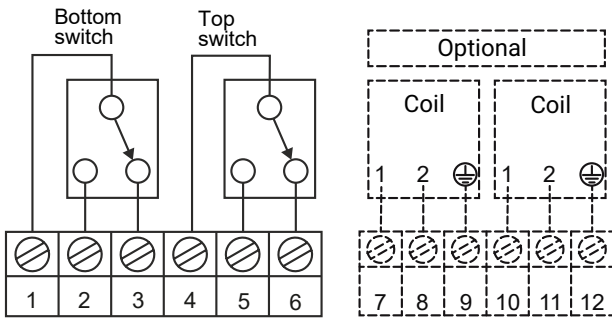


### 10.3 2-wire proximity switch

#### 10.3.1 NAMUR, "Switch" ordering option, code 205, 208, 209, 211

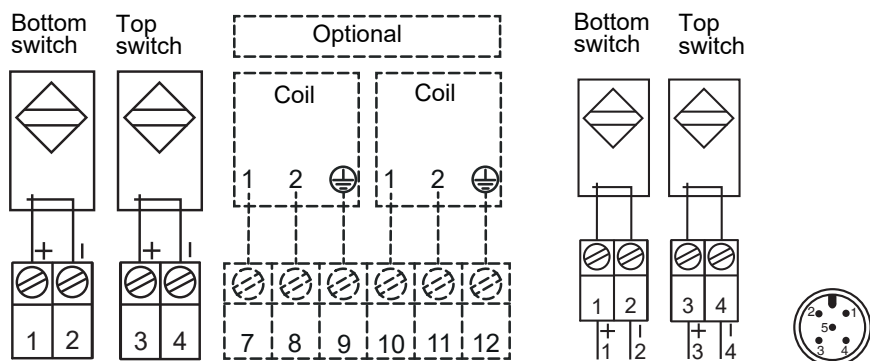


M12 connection options


#### 10.3.2 Make contact, switch ordering option, code 207

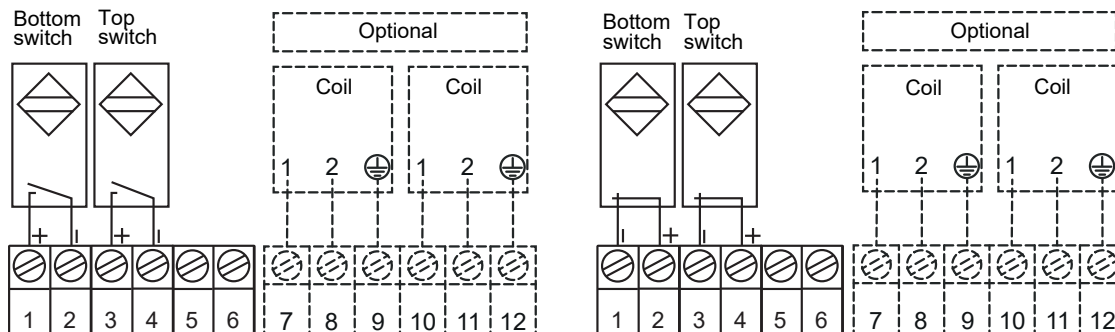


#### 10.3.3 NAMUR, switch ordering option, code 212

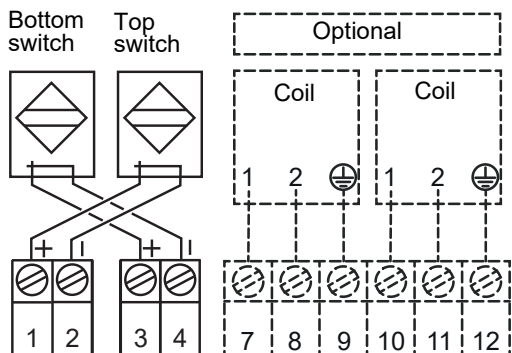


#### 10.3.4 Make contact, switch ordering option, code 213

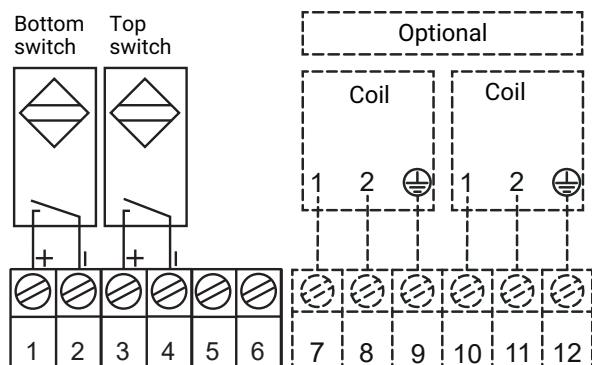


**10.3.5 NAMUR with fail safe function, make contact, switch ordering option, code 214**

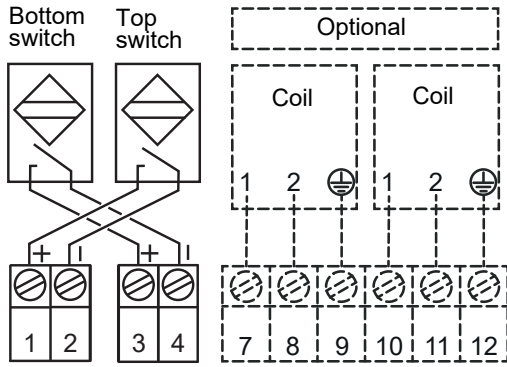

**10.3.6 Make contact, AC/DC, switch ordering option, code 220**

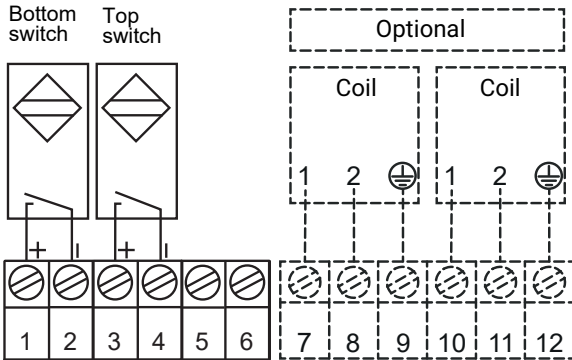


**10.3.7 Make contact, switch ordering option, code 222 with Harting plug (HM8D)**

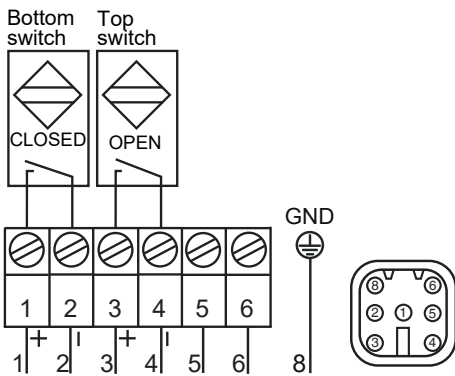


### 10.4 3-wire proximity switch


#### 10.4.1 Make contact, PNP, switch ordering option, code 305

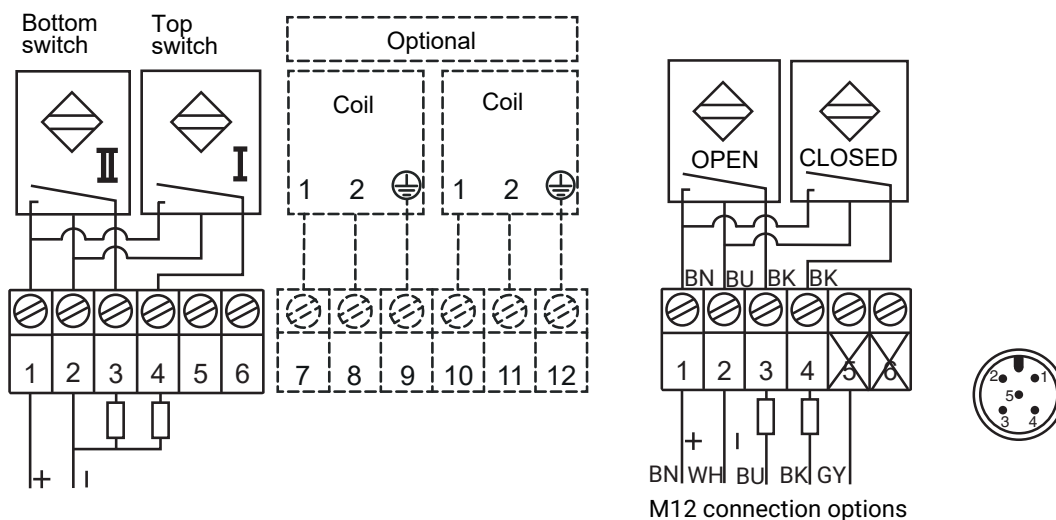

#### 10.4.2 Make contact, PNP, switch ordering option, code 306, 322

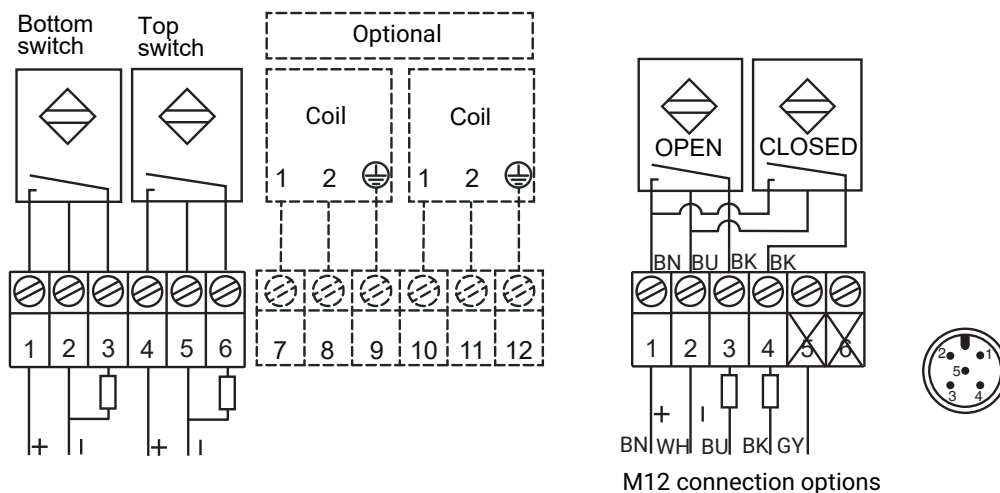

#### 10.4.3 Make contact, NPN, switch ordering option, code 320

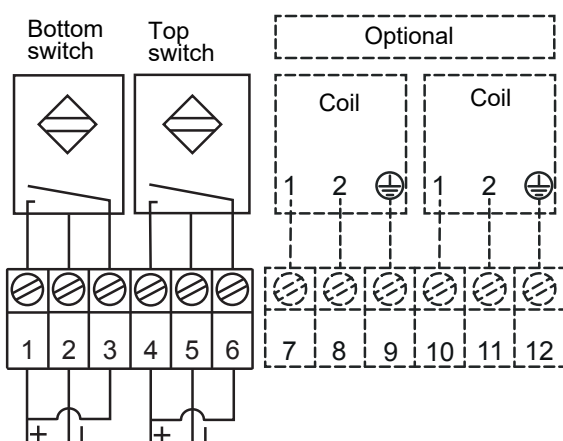

## 11 Troubleshooting

In case of faults, check the cables, cable connections and cam position. Check whether condensation water has collected in the housing and whether the valve/quarter turn actuator is functioning correctly. If the fault is not remedied by this, disconnect the housing from the supply voltage and contact authorized and trained personnel from the manufacturer.

## 12 Inspection and maintenance

### CAUTION

- Servicing and maintenance work must only be performed by trained personnel.
- GEMÜ shall assume no liability whatsoever for damage caused by improper handling or third-party actions.
- In case of doubt, contact GEMÜ prior to commissioning.

### CAUTION

#### Use of incorrect spare parts!

- ▶ Damage to the product.
- ▶ Manufacturer liability and guarantee will be void.
- Only use genuine parts.

### NOTICE

#### Unauthorized maintenance work!

- ▶ Damage to the product.
- Any maintenance work and repairs not described in these operating instructions must not be performed without consulting the manufacturer first.

no return delivery note is included with the product, GEMÜ cannot process credits or repair work but will dispose of the goods at the operator's expense.

1. Clean the product.
2. Request a return delivery note from GEMÜ.
3. Complete the return delivery note.
4. Send the product with a completed return delivery note to GEMÜ.

## 13 Disassembly

1. Disassemble in reverse order to assembly.
2. Unscrew the electrical wiring.
3. Disassemble the product. Observe warning notes and safety information.

## 14 Disposal

1. Pay attention to adhered residual material and gas diffusion from penetrated media.
2. Dispose of all parts in accordance with the disposal regulations/environmental protection laws.

## 15 Returns

Legal regulations for the protection of the environment and personnel require that the completed and signed return delivery note is included with the dispatch documents. Returned goods can be processed only when this note is completed. If



**17 Declaration of conformity according to 2014/30/EU (EMC Directive)**

# EU Declaration of Conformity

*in accordance with 2014/30/EU (EMC Directive)*

We, the company

GEMÜ Gebr. Müller Apparatebau GmbH & Co. KG  
Fritz-Müller-Strasse 6-8  
74653 Ingelfingen-Criesbach, Germany

declare that the product listed below complies with the safety requirements of the EMC Directive 2014/30/EU.

**Description of the product:** Electrical position indicator GEMÜ LSC

2025-11-21



Joachim Brien  
Head of BU Industry

**18 EU Declaration of conformity according to 2014/34/EU (ATEX)****EUROTEC Antriebszubehör GmbH****EU-Declaration of Conformity**  
according to the Directive 2014/34/EU [ATEX-Directive]

We herewith confirm that the following named equipment for the use in hazardous areas does fulfill the requirements of the Directive 2014/34/EU in the delivered version:

EV...IA...	wave limit switch box. Housing Vestamid
EA...IA...	wave limit switch box. Housing Aluminum
EV...IA...-DB...	wave limit switch box. Housing Vestamid with junction box Vestamid
EA...IA...-DB...	wave limit switch box. Housing Aluminum with junction box Aluminum
EV...IA...-3D...	wave limit switch box. Housing Vestamid with Polycarbonate cover [IIB]

The equipment has been developed and designed in consideration of the following harmonised standards:

EN 60079-0:2012+A11:2013 IEC 60079-0, Ed. 6	Explosive atmospheres - Part 0: Equipment - General requirements
EN 60079-11:2012 IEC 60079-11, Ed. 6	Explosive atmospheres - Teil 11: Equipment protection by intrinsic safety "i"

Kennzeichnung:      II 2G Ex ia IIC/IIB T6 Gb  
  
 II 2D Ex ia IIIC T80°C/T110°C Db

EG-Type Examination Certificate:      **IBExU 11 ATEX 1154**  
IBExU Institut für Sicherheitstechnik GmbH  
Fuchsmühlenweg 7, 09599 Freiberg,  
Ident.-No.: 0637

EG-Certificate Quality Assurance:      **EPS 13 ATEX Q 534**  
Bureau Veritas Consumer Products Services Germany GmbH  
Businesspark A96, DE-86842 Türkheim  
Ident.-No.: 2004

2017-30-11  
Date

General Manager: Knut BERGE

EUROTEC Antriebszubehör GmbH | Heidachstraße 70/5 | DE-88079 Kressbronn | Tel. +49 (0) 7543 93463 0 | Fax. +49 (0) 7543 93463 10 |  
sales@eurotec-shop.com | www.eurotec-shop.com | www.eurotec1996.com







GEMÜ Gebr. Müller Apparatebau GmbH & Co. KG  
Gert-Müller-Platz 1, 74635 Kupferzell, Germany  
Phone +49 (0) 7940 1230 · info@gemue.de  
www.gemu-group.com

Subject to alteration

05.2026 | 88604459